

PN/件号	SN/序号	DESCRIPTION	描述中文	COND/状	SALE AS
D23589520-12	B206	NOSE LANDING GEAR	前起落架	AR	
201582001	M-DG-0106	MAIN LANDING GEAR LH	左主起落架	AR	
201582002-050	11MDG0339	MAIN LANDING GEAR LH	右主起落架	AR	
642M3001-505	5825001	FAN COWL	风扇整流罩	AR	
642M3002-503	5826001	FAN COWL	风扇整流罩	AR	
642M3002-505	5828001	FAN COWL	风扇整流罩	AR	
642M3001-503	5827001	FAN COWL	风扇整流罩	AR	
642-3801-515	2580001	THRUST REVERSER	反推	AR	
642-3802-517	2583001	THRUST REVERSER	反推	AR	
642-3802-517	2581001	THRUST REVERSER	反推	AR	
642-3801-515	2582001	THRUST REVERSER	反推	AR	
6424001501	3453001	EXHAUST NOZZLE	尾喷	AR	
6424001501	3393001	EXHAUST NOZZLE	尾喷	AR	
238-0451-513	3414001	CENTER BODY	中心体	AR	
238-0451-513	3870001	CENTER BODY	中心体	AR	
642-2300-9	P1152	AFT ENG MOUNT	发动机后吊点	AR	
642-2000-15	P2208	FWD ENG MOUNT	发动机前吊点	AR	SV
822-0330-020	125239	XCVR-HF	高频收发机	AR	
C13043AA06	5795	FMGC	飞行管理制导计算	AR	
SIC5059-11-0207	FE000582	FQIC	燃油量指示计算机	AR	
740121B	1580	GROUND POWER CONTROL UNIT	地面电源控制组件	AR	
49-170-11	49-170BAC	SFCC	襟缝翼控制器计算	AR	SV
465020-03030318	3945	ADIRU	大气数据惯导基准	AR	
465020-03030318	3066	ADIRU	大气数据惯导基准	AR	
465020-03030318	3449	ADIRU	大气数据惯导基准	AR	
3957985114	Q05720003	EIU	发动机接口控制组	AR	
822-1338-021	1146D	XPDR-ATC/MODE S	应答机	AR	
775D0000-01	01758	CONTROLLER-ZONE TEMP	区域温度控制器	AR	
822-1047-030	12489	XCVR-VHF	甚高频收发机	AR	
822-0330-020	107160	XCVR-HF	高频收发机	AR	
965-1676-003	EMK5-0190	GPWC, GROUND PROXIMITY WA	近地警告计算机	AR	SV
710100-2	49FM17	IRIDIUM COMMUNICATION SY	铱星通信系统	AR	
822-1047-030	173RCX	XCVR-VHF	甚高频收发机	AR	
9022-15702-11	9731811	CABIN PRESSURE CONTROLLE	客舱压力控制器	AR	
622-5132-622	9698	WEATHER RADAR TRANSCIEVE	气象雷达收发机	AR	
822-1338-021	199MR	XPDR-ATC/MODE S	应答机	AR	
822-1047-030	12289	XCVR-VHF	甚高频收发机	AR	
20791-12AC	0054753	CABIN PRESSURE CONTROLLE	客舱压力控制器	AR	SV
87292325V07	VL2062010	AEVC	电子设备通风计算	AR	
600611-00-601	0497775	AFT CARGO HEAT CONTRLLR	后货仓加热控制器	AR	
49-170-11	49-170BAC	SFCC	襟缝翼控制器计算	AR	SV
740120C	7778	GCU GENERATOR CONTROL UN	发电机控制组件	AR	SV
E21327007	4484	BSCU	刹车/转弯控制组件	AR	
740120C	5093	GCU GENERATOR CONTROL UN	发动机控制组件	AR	SV
LA2TOG20503B040	2T0000261	ATSU	空中交通服务组件	AR	
350E5151331	0E5002030	SDAC	系统数据获取集中	AR	
9615325070	998256007	DMC	显示管理计算机	AR	
9615325070	998256007	DMC	显示管理计算机	AR	
350E053021818	0E0013116	FWC	飞行警告计算机	AR	SV

350E053021818	0E001401	FWC	飞行警告计算机	AR	SV
9615325070	0259	DMC	显示管理计算机	AR	
B372BAM0515	Q00136008	SEC	扰流板升降舵计算	AR	SV
B397BAM0624	Q00140007	FAC	飞行增稳计算机	AR	SV
B372BAM0515	Q00136014	SEC	扰流板升降舵计算	AR	SV
B397BAM0624	Q00140014	FAC	飞行增稳计算机	AR	SV
C13043AA06	C13043032	FMGC	飞行管理制导计算	AR	
RDAX7673-10	104049	RPDR	广播预录音机	AR	
822-0329-020	120022	INTRG-DME	测距机询问器	AR	
115370-1016	2175	FCDC	飞行控制数据采集	AR	SV
241-246-022-004	AC49831	EVMU	发动机振动控制组	AR	
785-002-8	785002IN3	BMC	引气监控计算机	AR	
RA12800M0706	Q00160008	SDCU	烟雾探测控制组件	AR	
115370-1016	5584	FCDC	飞行控制数据采集	AR	SV
RDAX1301-2D	103050	MAIN MULTIPLEXER	旅客娱乐系统	AR	
350E0530206	0E5014640	SDAC	系统数据获取集中	AR	
3957985114	2546	EIU	发动机连接组件	AR	
B401ACM0507	1203	CFDIU	中央故障显示接口	AR	
822-0299-020	115049	RECEIVER-ADF	自定定向接收机	AR	SV
822-0299-020	768	RECEIVER-ADF	自定定向接收机	AR	SV
822-0297-020	120066	RECEIVER-VOR/MKR	接收机	AR	SV
822-0297-020	119300	RECEIVER-VOR/MKR	接收机	AR	SV
822-0329-020	119398	INTRG-DME	测距机询问器	AR	
RDAX7095-01	155075	REPRODUCER	旅客娱乐系统播放	AR	
822-1293-332	172875	TACS	空中防撞系统收发	AR	
AMU2790CB06	2790-2622	AMU	音频管理组件	AR	
B372BAM0515	6489	SEC	扰流板升降舵计算	AR	SV
Z010H000521A	010H00005	CIDS	客舱内部通讯数据	AR	
Z010H000521A	010H00005	CIDS	客舱内部通讯数据	AR	
119003-21	0A4-30721	SMOKEHOODS (PBE)	防烟面罩	AR	
119003-21	0A4-30719	SMOKEHOODS (PBE)	防烟面罩	AR	
119003-21	0A4-30359	SMOKEHOODS (PBE)	防烟面罩	AR	
119003-21	0A4-30715	SMOKEHOODS (PBE)	防烟面罩	AR	
119003-21	0A4-30720	SMOKEHOODS (PBE)	防烟面罩	AR	
119003-21	0A4-32934	SMOKEHOODS (PBE)	防烟面罩	AR	
119003-21	0A4-30722	SMOKEHOODS (PBE)	防烟面罩	AR	
759D0000-02	03550	CONTROLLER-PACK	空调控制器	AR	
759D0000-02	3373	CONTROLLER-PACK	空调控制器	AR	
30042-0000-0501	4167	FLSCU	油位传感控制组件	AR	
30042-0000-0501	2987	FLSCU	油位传感控制组件	AR	
746923E	2382	ELEC GENERATION INTFC UN	发电机接口组件	AR	
746923E	2292	ELEC GENERATION INTFC UN	发电机接口组件	AR	
622-5001-504	1X44J	VOR/ADF DDRMI	无线电电磁指示	AR	
H321BHM1	Q03364016	STANDBY HORIZON	备用水平显示器	AR	SV
215TS07Y00	8285	LANDING GEAR CONTROL LEVI	起落架控制手柄	AR	
64141-580-1	Q09163006	STANDBY ALTIMETER	备用高度表	AR	SV
465010-0300-0300	0253	ADIRS-CDU	控制显示组件	AR	
C5K	81097A	STANDBY COMPASS	备用罗盘	AR	
64050-866-1	4681	STANDBY AIRSPEED INDICATC	备用空速表	AR	SV
64882-206-1	8634	BRAKE PRESSURE INDICATOR	刹车压力指示器	AR	SV
622-5130-021	11XDB	WEATHER RADAR DUAL CTL UN	气象雷达控制组件	AR	

321200M02	1600	SPD. BRK. CTL. TRANSDUCER UN	速度刹车控制传感	AR	SV
758A0000-02	03151	BYPASS VALVE	旁通活门	AR	SV
758A0000-02	03032	BYPASS VALVE	旁通活门	AR	SV
1407KID02-03	991026	REFUEL MULTITANK INDICATC	油量指示器	AR	
79815-02-03	0226	PRESELECTOR	预选器	AR	
748A0000-08	02779	VALVE ANTI ICING	防冰活门	AR	
748A0000-08	02318	VALVE ANTI ICING	防冰活门	AR	
24E507009G03	51112412	HEATER-WATER	厕所水加热器	AR	SV
24E507009G03	N0824471	HEATER, WATER	厕所水加热器	AR	SV
24E507009G03	UJW04496	HEATER, WATER	厕所水加热器	AR	SV
72067000	1700	OVEN	烤箱	AR	
72067000	2335	OVEN	烤箱	AR	
72067000	1953	OVEN	烤箱	AR	
72067000	3403	OVEN	烤箱	AR	
72067000	2469	OVEN	烤箱	AR	
72067000	1704	OVEN	烤箱	AR	
72067000	3565	OVEN	烤箱	AR	
R0425A111	TAJ6A027	RAFT-LIFE	救生筏	AR	
BA24320A1	62155	LAVATORY FIRE-EXTINGUISHI	厕所灭火瓶	AR	
BA24320A1	62153	LAVATORY FIRE-EXTINGUISHI	厕所灭火瓶	AR	
BA24320A1	94828	LAVATORY FIRE-EXTINGUISHI	厕所灭火瓶	AR	
ACP2788AB04	2933	AUDIO CONTROL PANEL	音频控制面板	AR	SV
ACP2788AB05	2788-150	AUDIO CONTROL PANEL	音频控制面板	AR	SV
ACP2788AB04	4122	AUDIO CONTROL PANEL	音频控制面板	AR	SV
87232329V03	3399	AIR DATA MODULE	大气数据模块	AR	SV
87232329V03	3363	AIR DATA MODULE	大气数据模块	AR	SV
87232329V03	2326	AIR DATA MODULE	大气数据模块	AR	SV
87232329V03	3676	AIR DATA MODULE	大气数据模块	AR	SV
87232329V03	2867	AIR DATA MODULE	大气数据模块	AR	SV
87232329V03	5970	AIR DATA MODULE	大气数据模块	AR	SV
87232329V03	4908	AIR DATA MODULE	大气数据模块	AR	SV
87232329V03	9164	AIR DATA MODULE	大气数据模块	AR	SV
2610-13-1	CL7118	CLOCK	时钟	AR	
2598D	5233	ESSENTIA TRANSFORMERS	变压器	AR	
2598D	5252	ESSENTIA TRANSFORMERS	变压器	AR	
35-0L0-1001-04	0L0001753	ECAM CONTROL PANEL	电子集中监视系统	AR	
5XA005032-01	1011	CONTROLLER-LIGHTING	照明控制器	AR	
5XA455806-00	1270577	CONTROLLER-LIGHTING	照明控制器	AR	
BC2065C	2164	CODE SELECTION	呼叫代码选择面板	AR	
5XA455806-00	2599431	CONTROLLER-LIGHTING	照明控制器	AR	
DLSA100	154	DATA LOADING SELECTOR	数据加载选择器	AR	
DK120-90	AT56114	DFDR ULB	水下定位信标	AR	SV
DK120	SD13811	CVR UNDERWATER LOCATOR BI	水下定位信标	AR	SV
K217ABM11	1403	FLIGHT CONTROL UNIT	飞行控制组件	AR	SV
AR4709-1	N-C2754	COCKPIT DOOR LOCKING SYS	驾驶舱门锁系统	AR	
330TS08Y	805	FIRE PANEL ENGINE APU	APU, 发动机火警面	AR	
CG7G0-11	234	SMOKE DETECTOR	烟雾探测器	AR	
980-6022-001	1537	CVR	语言记录器	AR	SV
980-4700-003	6017	DFDR	飞行记录器	AR	SV
S1821502-02	LX1100091	FIXED ELT	应急定位发射机	AR	SV
C19266EA01	C19266013	MCDU	多功能控制显示组件		SV

RDAV3001-35	200017	CONTROL UNIT-SYSTEM, VIDEO	音频系统控制组件	AR	
VFT210B00	04270634	AIR OUTLET/INLET VALVE	进气活门	AR	SV
VFT300B00	04003	AIR OUTLET VALVE	空气外流活门	AR	SV
72184101	7578	WATER HEATER	热水器	AR	
72184101	7807	WATER HEATER	热水器	AR	
72184101	7870	WATER HEATER	热水器	AR	
72011412	0598	COFFEE MAKER	咖啡机	AR	
72011412	23109	COFFEE MAKER	咖啡机	AR	
2510154-01-00	936	4TH.OCCUPANT SEAT	4观座椅	AR	
16800-01-00	16T2354	3RD.OCCUPANT SEAT	3观座椅	AR	
15800-358	NA001	RINSE VALVE	冲水活门	AR	SV
15800-358	022	RINSE VALVE	冲水活门	AR	SV
15800-358	17895	RINSE VALVE	冲水活门	AR	SV
4020W35-3	2181	RAIN REPELLENT GAGE ASSY	防雨液计量组件	AR	
14330-190	633	FLUSH CONTROL UNIT	冲洗控制组件	AR	
14330-190	5791	FLUSH CONTROL UNIT	冲洗控制组件	AR	
14330-190	589	FLUSH CONTROL UNIT	冲洗控制组件	AR	
2LA005541-10	841	FLOODLIGHT UNIT-CAPTAIN	泛光灯组件	AR	
2LA005543-10	1150114	CAPTAIN FLOOD LIGHT UNIT	泛光灯组件	AR	
2LA005542-20	1357	LIGHT-MAIN INSTRUMENT	中央主仪表灯	AR	
PPA1203-00	46219	SMOKE DETECTION	烟雾探测器	AR	
PPA1205-01	01130	SMOKE DETECTION	烟雾探测器	AR	
PPA1203-00	45541	SMOKE DETECTION	烟雾探测器	AR	
6664287-0	2417	WINDOW HEAT COMPUTER	窗户加热计算机	AR	
6664287-0	2317	WINDOW HEAT COMPUTER	窗户加热计算机	AR	
1209-100	33961	PRESSURE SWITCH	压力电门	AR	SV
1209-100	20880	PRESSURE SWITCH	压力电门	AR	SV
1209-100	14169	PRESSURE SWITCH	压力电门	AR	SV
3720-01-01	UL5806	FIRE DETECTION UNIT	火警探测组件	AR	
7304-01-02	9170	FIRE DETECTION UNIT	火警探测组件	AR	
1663214301	B4299	PROBES HEAT COMPUTER	探头加温计算机	AR	
1663214301	B2788	PROBES HEAT COMPUTER	探头加温计算机	AR	
47215920BB00	47215920	PROBES HEAT COMPUTER	探头加温计算机	AR	SV
600615-00-503	20694	CONTROLLER, CARGO VENT	通风控制器	AR	SV
2243800-364	RA04333	WQAR	无线电快速存取记	AR	SV
1B1000-1GS	M8957249	STATIC INVERTER	静变流机	AR	SV
4236564	82101	TAXI LIGHT	滑行灯	AR	
4236534	78863	RUNWAY TURNOFF LIGHT	转弯灯	AR	
4236534	78886	RUNWAY TURNOFF LIGHT	转弯灯	AR	
9700C1AF23AN	ST273818	PORTABLE OXYGEN CYLINDER	便携氧气瓶	AR	
9700C1AF23AN	ST79068	PORTABLE OXYGEN CYLINDER	便携氧气瓶	AR	
9700C1AF23AN	ST79058	PORTABLE OXYGEN CYLINDER	便携氧气瓶	AR	
9700C1AF23AN	ST54493	PORTABLE OXYGEN CYLINDER	便携氧气瓶	AR	
9700C1AF23AN	ST96879	PORTABLE OXYGEN CYLINDER	便携氧气瓶	AR	
9700C1AF23AN	ST318860	PORTABLE OXYGEN CYLINDER	便携氧气瓶	AR	
6730C010000	525	FAN AIR VALVE	风扇空气活门	AR	
6730F010000	6730-092	FAN AIR VALVE	风扇空气活门	AR	
342B050000	12451	TEMP.CONTROL THERMOSTAT	恒温控制器	AR	SV
342B050000	8301	TEMP.CONTROL THERMOSTAT	恒温控制器	AR	SV
341E030000	1846	SOLENOID THERMOSTAT	电磁阀	AR	SV
341E030000	5153	SOLENOID THERMOSTAT	电磁阀	AR	SV

Z111H0033151	8072	ATTENDANT INDICATION PANI	乘务员指示面板	AR	
Z111H0033151	7689	ATTENDANT INDICATION PANI	乘务员指示面板	AR	
Z111H0033151	111H00039	ATTENDANT INDICATION PANI	乘务员指示面板	AR	
3025	2112	STATIC Converter	静变流机	AR	
740120C	5985	GENERATOR CONTROL UNIT	发电机控制组件	AR	SV
Z130H0086110	1170	FAP	前服务员面板	AR	
DVE90-06	2739	LP SOLENOID SUPPLY VALVE	氧气电磁阀	AR	
93A055-66	52338	AMBIENT MICROPHONE	区域麦克风	AR	
Z120H0048110	1271	AAP	后服务员面板	AR	
0861ED	46	ANGLE OF ATTACK SENSOR	迎角传感器	AR	SV
C16291AB	12603	ANGLE OF ATTACK SENSOR	迎角传感器	AR	SV
711TS06Y	1072	NW. STRG. HANDWHEEL XMTR. U	转弯手轮	AR	SV
763A0000-03	17178	TEMPERATURE SENSOR	温度传感器	AR	SV
763A0000-03	18729	TEMPERATURE SENSOR	温度传感器	AR	SV
763A0000-03	12470	TEMPERATURE SENSOR	温度传感器	AR	SV
764B0000-01	5442	TEMPERATURE SENSOR	温度传感器	AR	SV
764B0000-01	5486	TEMPERATURE SENSOR	温度传感器	AR	SV
763A0000-03	13888	TEMPERATURE SENSOR	温度传感器	AR	SV
HTE370001	M0452VNR0	HP GROUND CONNECTOR	高压引气地面接头	AR	
747A0000-03	2343	WATER EXTRACTOR	水分离器	AR	
747A0000-03	2320	WATER EXTRACTOR	水分离器	AR	
11-851154-6	3560	PRECOOLER EXCHANGER	预冷器	AR	
3732A010000	5569	PRECOOLER EXCHANGER	预冷器	BC	
558CA01Y1	6726	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	6730	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	6727	260A THREE POLE CONTACTOR	接触器	AR	
558CA04A41Y00	5664	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	6729	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	6728	260A THREE POLE CONTACTOR	接触器	AR	
35-0D5-1003	2165	COCKPIT LOUDSPEAKER AMPL	驾驶舱扬声器	AR	SV
35-0D5-1003	0D5002450	COCKPIT LOUDSPEAKER AMPL	驾驶舱扬声器	AR	SV
C16291AB	1203	PROGRAM A. TEST PANEL	程序测试面板	AR	SV
Z050H6045090	050H60009	CABIN ASSIGNM. MODULE	客舱分布模块	AR	
1298A0000-01	3849	VALVE, CHECK TRIM AIR	单向活门	AR	SV
1298A0000-01	2776	VALVE, CHECK TRIM AIR	单向活门	AR	SV
3214-54-10	4231	EMERG. POWER SUPPLY	应急电源组件	AR	
3214-54-10	4234	EMERG. POWER SUPPLY	应急电源组件	AR	
3214-54-10	2041	EMERG. POWER SUPPLY	应急电源组件	AR	
3214-54-10	7252	EMERG. POWER SUPPLY	应急电源组件	AR	
Y005-2	8819	TRANSFORMER RECTIFIER	变压整流器	AR	
Y005-2	3394	TRANSFORMER RECTIFIER	变压整流器	AR	
Y005-3	2830	TRANSFORMER RECTIFIER	变压整流器	AR	
PPA1103-00	70011	CARGO COMPARTMENT SMOKE I	货仓烟雾探测器	AR	
PAI2800-01	6704	CARGO COMPARTMENT SMOKE I	货仓烟雾探测器	AR	
PAI2800-01	6661	CARGO COMPARTMENT SMOKE I	货仓烟雾探测器	AR	
PAI2800-01	6654	CARGO COMPARTMENT SMOKE I	货仓烟雾探测器	AR	
PAI2800-01	3531	CARGO COMPARTMENT SMOKE I	货仓烟雾探测器	AR	
PPA1102-00	120801	CARGO COMPARTMENT SMOKE I	货仓烟雾探测器	AR	SV
J172ABM	10097	ACCELEROMETER	加速度计	AR	
J172ABM	10096	ACCELEROMETER	加速度计	AR	
J172ABM	10098	ACCELEROMETER	加速度计	AR	

J172ABM	10099	ACCELEROMETER	加速度计	AR	
35-0L5-1005-08	0L5002919	BATTERY CHARGE LIMITER	电瓶充电限制器	AR	SV
35-0L5-1005-08	Q0930501	BATTERY CHARGE LIMITER	电瓶充电限制器	AR	SV
2LA005413-01	1000	OVERWING LIGHT AFT.	外部应急灯	AR	
2LA005128-01	1014	OVERWING LIGHT AFT.	外部应急灯	AR	
2LA005414-01	1016	OVERWING LIGHT AFT.	外部应急灯	AR	
2LA005127-01	1049	OVERWING LIGHT AFT.	外部应急灯	AR	
791A0000-06	V6002	ACTUATOR-FLAP	襟翼作动筒	AR	
791A0000-06	V6003	ACTUATOR-FLAP	襟翼作动筒	AR	
792A0000-07	V8469	ACTUATOR-FLAP	襟翼作动筒	AR	
794A0000-06	V2197	ACTUATOR-FLAP	襟翼作动筒	AR	
766A0000-01	3508	SENSOR TEMP. PNEUM	传感器	AR	
766A0000-01	3496	SENSOR TEMP. PNEUM	传感器	AR	
564CA02FY1	3739	60A THREE POLE CONTACTOR	接触器	AR	
564CA02FY1	3741	60A THREE POLE CONTACTOR	接触器	AR	
2LA005308-05	6033	WING STROBE LIGHT	频闪灯	AR	SV
2LA005308-05	2406035	WING STROBE LIGHT	频闪灯	AR	SV
640CC01Y1	8864	200A SINGLE POLE CONTACTOR	接触器	AR	
630CC01Y1	7214	200A SINGLE POLE CONTACTOR	接触器	AR	
630CC01Y1	7221	200A SINGLE POLE CONTACTOR	接触器	AR	
630CC01Y1	7340	200A SINGLE POLE CONTACTOR	接触器	AR	
630CC01Y1	7329	200A SINGLE POLE CONTACTOR	接触器	AR	
630CC04A2Y00	31681	100A SINGLE POLE CONTACTOR	接触器	AR	
640CC01Y1	8866	200A SINGLE POLE CONTACTOR	接触器	AR	
640CC01Y1	8843	200A SINGLE POLE CONTACTOR	接触器	AR	
640CC01Y1	8914	200A SINGLE POLE CONTACTOR	接触器	AR	
640CC01Y1	8863	200A SINGLE POLE CONTACTOR	接触器	AR	
640CC01Y1	8911	200A SINGLE POLE CONTACTOR	接触器	AR	
564CA01Y1	11097	CONTACTOR	接触器	AR	
564CA01Y1	10923	CONTACTOR	接触器	AR	
564CA01Y1	11011	CONTACTOR	接触器	AR	
655CC01Y1	2311	300A SINGLE POLE CONTACTOR	接触器	AR	
655CC01Y1	2312	300A SINGLE POLE CONTACTOR	接触器	AR	
5906734	12169	3 HOLE CURRENT TRANSFORMER	电流互感器	AR	
5906734	12167	3 HOLE CURRENT TRANSFORMER	电流互感器	AR	
5906734	12170	3 HOLE CURRENT TRANSFORMER	电流互感器	AR	
5906734	12161	3 HOLE CURRENT TRANSFORMER	电流互感器	AR	
5906734	12168	3 HOLE CURRENT TRANSFORMER	电流互感器	AR	
3530000-1	FRTR33391	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	C990012	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR33385	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR33400	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR33403	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR33387	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR31055	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR33282	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR33401	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR33386	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR33384	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR33392	SENSOR-FUEL LEVEL	油位传感器	AR	
3540000-1	FRTR40881	TEMPERATURE SENSOR	温度传感器	AR	

3540000-1	FRTR4100E	TEMPERATURE SENSOR	温度传感器	AR	
3530000-1	FRTR31056	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR33275	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR33402	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30741	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR33281	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR33399	SENSOR-FUEL LEVEL	油位传感器	AR	
2LA007307-00	2994	CABIN OVERPRESSURE INDIC	警告灯面板	AR	SV
2LA007307-00	3002	CABIN OVERPRESSURE INDIC	警告灯面板	AR	SV
2LA007307-00	3003	CABIN OVERPRESSURE INDIC	警告灯面板	AR	SV
2LA007307-00	2997	CABIN OVERPRESSURE INDIC	警告灯面板	AR	SV
796-809-6A	2765	FUEL CADENSICON	电容式密度计	AR	SV
796-809-6A	2945	FUEL CADENSICON	电容式密度计	AR	SV
796-809-6A	4805	FUEL CADENSICON	电容式密度计	AR	SV
2439-89-03	243989-35	ATC/DME. ANTENNA	测距天线	AR	
2439-89-03	243989-58	ATC/DME. ANTENNA	测距天线	AR	
2439-89-03	243989-35	ATC/DME. ANTENNA	测距天线	AR	
2407-89-03	5387	ATC/DME. ANTENNA	测距天线	AR	
2407-89-03	5062	ATC/DME. ANTENNA	测距天线	AR	
2407-89-03	5040	ATC/DME. ANTENNA	测距天线	AR	
ZRA1990030	5021	TRANSDUCER	压力传感器	AR	
ZRA380-00	ASA07430	TRANSDUCER	压力传感器	AR	
5822-21	NA001	BATTERY	电池	AR	
5822-21	NA002	BATTERY	电池	AR	
5822-21	NA003	BATTERY	电池	AR	
9599-607-12352	23952	RADIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
9599-607-12352	23949	RADIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
9599-607-12352	23968	RADIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
9599-607-12352	23948	RADIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
5906733	8457	6 HOLE CURRENT TRANSFORME	电流互感器	AR	
5906733	8456	6 HOLE CURRENT TRANSFORME	电流互感器	AR	
RDAV9810-01	110659	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9810-01	201087	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9810-01	201031	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9810-01	201093	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9809-01	201445	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9810-01	201030	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9810-01	120184	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9810-01	110830	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9810-01	201889	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9810-01	200028	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9809-01	201751	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9809-01	201091	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9809-01	120391	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9809-01	200109	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9809-01	110978	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9809-01	120292	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9809-01	200157	DU-DISPLAY UNIT	LCD显示器	AR	
RDAV9809-01	150076	DU-DISPLAY UNIT	LCD显示器	AR	
622-8973-104	2FHCM	TCAS DIRECTIONAL ANTENNA	空中防撞系统天线	AR	
622-8973-104	83HM	TCAS DIRECTIONAL ANTENNA	空中防撞系统天线	AR	

C17065AA	2198	ACTIVE GPS ANTENNA	GPS天线	AR	
C17065AA	4585	ACTIVE GPS ANTENNA	GPS天线	AR	
3105-89	1451	GLIDE ANTENNA	下滑道天线	AR	
VT442-2	1197	WATER QUANTITY INDICATOR	水量指示器	AR	
30-1883-5	1923	LH WING/ENGINE SCAN LIGHT	机翼吊舱检查灯	AR	
30-1883-6	1920	RH WING/ENGINE SCAN LIGHT	机翼吊舱检查灯	AR	
3540000-1	FRTR4126F	TEMPERATURE SENSOR	温度传感器	AR	
3540000-1	FRTR4102F	TEMPERATURE SENSOR	温度传感器	AR	
3530000-1	FRTR3339C	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR33383	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR3328C	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR33388	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR33382	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	C990016	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	C004982	SENSOR-FUEL LEVEL	油位传感器	AR	
2403-89	5662	VHF ANTENNA	甚高频天线	AR	SV
2403-89	5484	VHF ANTENNA	甚高频天线	AR	SV
3001-01-111	99010125	LINEAR ACCELEROMETER	线性加速计	AR	SV
2LA005303-05清单件	5629清单件	TAIL STROBE LIGHT	尾部频闪灯	AR	
764A0000-03	7810	SENSOR, TEMP.	温度传感器	AR	
764A0000-03	8941	SENSOR, TEMP.	温度传感器	AR	
764A0000-03	7904	SENSOR, TEMP.	温度传感器	AR	
342300M01	5367	TRANSDUCER UNIT	传感器组件	AR	
342300M01	5366	TRANSDUCER UNIT	传感器组件	AR	
530AL01CN	2831	PWR SUPPLY DECOUPLING UN	供电分离组件	AR	
530AL01CN	2835	PWR SUPPLY DECOUPLING UN	供电分离组件	AR	
780B0000-01	0780B00L	FLAP/SLAT COMMAND SENSOR	襟缝翼指令传感组	AR	SV
9599-607-14942	14942-097	RADIO ALTIMETER TRANSCEIV	无线电高度表收发	AR	SV
9599-607-14943	14943-137	RADIO ALTIMETER TRANSCEIV	无线电高度表收发	AR	SV
AC68A200	2695	MDDU	多用途磁盘驱动器	AR	
773A0000-01	7447	SENSOR, TEMP.	温度传感器	AR	
773A0000-01	7041	SENSOR, TEMP.	温度传感器	AR	
773A0000-01	8510	SENSOR, TEMP.	温度传感器	AR	
3888394-221205	3747	ELECTRONIC CONTR. BOX	电子控制盒	AR	SV
190QA01	3878	CURRENT TRANSFORMER	电流互感器	AR	
101809	9831574A	BARGMETRIC WITCH	气压传感器	AR	
8410B2-4-90	8410B2-34	CAMERA-COCKPIT DOOR	摄像头	AR	SV
8410B2-4-90	8410B2-34	CAMERA-COCKPIT DOOR	摄像头	AR	SV
8410B1-101-105	8410B1-37	CAMERA-COCKPIT DOOR	摄像头	AR	
8ES005309-00	3695	POWER SUPPLY UNIT	电源供给组件	AR	
8ES005309-00	3584	POWER SUPPLY UNIT	电源供给组件	AR	
8ES455012-00	1115862	POWER SUPPLY	电源供给组件	AR	SV
8ES455012-00	1081060	POWER SUPPLY	电源供给组件	AR	SV
Z220H0002110	220H00007	CONTROL UNIT	控制组件	AR	
Z220H0002110	220H00003	CONTROL UNIT	控制组件	AR	
Z212H0001110	3268	CONTROL UNIT	控制组件	AR	
600612-00-510	20985	SENSOR, DUCT. TEMP.	管道温度传感器	AR	
600612-00-510	20973	SENSOR, DUCT. TEMP.	管道温度传感器	AR	
3107-89	310789-38	MARKER ANTENNA	信标天线	AR	
93-A150-20	1321	PREAMPLIFIER MODULE	麦克风放大器	AR	
14404-010	5070052	VACUUM SYSTEM CONTROL	真空系统控制器	AR	

TA01Z6005	3313	AUTOTRANSFORMER	自动变压器	AR	
87232324V00	1181	SKIN TEMPERATURE SENSOR	蒙皮温度传感器	AR	
310ZN01Y01	3814	UNBALANCE DETECTOR	不平衡探测器	AR	
864-001	3216	LIGHTED VISUAL ICING IND	结冰照明指示器	AR	
87232323V00	VL2064007	DUCT TEMPERATURE SENSOR	管道温度传感器	AR	
822-0987-002	148	HF-ANTENNA COUPLER	高频天线耦合器	AR	
822-0987-003	161885	HF-ANTENNA COUPLER	高频天线耦合器	AR	SV
8ES005304-00	386705	POWER SUPPLY UNIT	电源供给组件	AR	SV
1X2005097-00	2268145	LOGO LIGHT	航徽灯	AR	SV
1X2005097-00	1655514	LOGO LIGHT	航徽灯	AR	SV
9104A0006-01	492	PRESSURE SENSORS IMPR	改善压力传感器	AR	
9104A0006-01	10131	PRESSURE SENSORS IMPR	改善压力传感器	AR	
CMK80-01	2444	PRESSURE SWITCH	压力电门	AR	
528-70	1682	WING TIP NAVIGATION LIGHT	翼尖导航灯	AR	SV
528-80	2242	WING TIP NAVIGATION LIGHT	翼尖导航灯	AR	
3106-89	1447	LOCALIZER ANTENNA	航向天线	AR	
8420B1-201	8420B1-20	COCKPIT-DOOR SURVEILLANCE	驾驶舱门监视显示	AR	
8450B5	8450B5-34	HINGE ASSY-CDSS	驾驶舱门监视显示	AR	
6740F010000	6740-0972	OVERPRESSURE VALVE	过压活门	AR	SV
503CA02F1-02Y1	2193	DOUBLE THREE POLE CONTACT	接触器	AR	
503CA02F1-02Y1	2746	DOUBLE THREE POLE CONTACT	接触器	AR	
330400M01	2205	THROTTLE CONTROL UNIT	推力传感器	AR	
330400M01	2203	THROTTLE CONTROL UNIT	推力传感器	AR	
2LA455010-00	1002932	STROBE LIGHT	频闪灯	AR	SV
2LA455010-00	2468229	STROBE LIGHT	频闪灯	AR	SV
615-2630-102	2888	ADF ANTENNA	自动定向机天线	AR	SV
4550-01	3795	FIRE/OVHT DETECTOR	火警超温探测器	AR	
4550-01	3828	FIRE/OVHT DETECTOR	火警超温探测器	AR	
622-5134-064	2324	WEATHER RADAR RT DUAL MOI	气象雷达收发基座	AR	
31077-111	9054	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	9052	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	9048	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	12193	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-211	12358	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	9049	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	9050	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	9056	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	9047	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	9051	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
P99C38-601	21150	FUEL PUMP - TANK	燃油泵	AR	
P99C38-601	21154	FUEL PUMP - TANK	燃油泵	AR	
P99C38-601	21152	FUEL PUMP - TANK	燃油泵	AR	
P99C38-601	21151	FUEL PUMP - TANK	燃油泵	AR	
P99C38-601	21155	FUEL PUMP - TANK	燃油泵	AR	
P99C38-605	C59634	FUEL PUMP - TANK	燃油泵	AR	
HTE190001-2	M457GB060	TWIN MOTOR ACTUATOR	作动器	AR	SV
HTE190001-2	M353GB295	TWIN MOTOR ACTUATOR	作动器	AR	SV
QA05877	RH2-3438	VALVE RESTRICT. BLEED	引气管路限流器	AR	
ZRA1990030	10000	TRANSDUCER	压力传感器	AR	
ZRA1990030	7166	TRANSDUCER	压力传感器	AR	
L83A13-614	24554	VALVE-DRAIN, WATER	排水活门	AR	

L83A13-614	24548	VALVE-DRAIN, WATER	排水活门	AR	
L83A13-614	24914	VALVE-DRAIN, WATER	排水活门	AR	
L83A13-614	24913	VALVE-DRAIN, WATER	排水活门	AR	
9811820	FRTR031BF	CHECK VALVE	单向活门	AR	
9811820	FRTR042BF	CHECK VALVE	单向活门	AR	
767A0000-04	2526	SENSOR-TEMPERATURE	温度传感器	AR	
767A0000-04	2529	SENSOR-TEMPERATURE	温度传感器	AR	
761B0000-01	4433	ACTUATOR, RAMAIR INLET	作动器	AR	
9106A0005-01	4631	PRESSURE SENSORS IMPR	传感器	AR	
9106A0005-01	346	PRESSURE SENSORS IMPR	传感器	AR	
1158000-21	FR113BB	REFUEL VALVE	加油活门	AR	SV
1158000-21	FR112BB	REFUEL VALVE	加油活门	AR	SV
1158000-21	FR357BA	REFUEL VALVE	加油活门	AR	SV
HTE69000-1	20581	SWITCH-P	P电门	AR	SV
761B0000-01	5358	ACTUATOR, RAMAIR INLET	作动器	AR	
C12CB0010	1079	APU FUEL PUMP	APU燃油泵	AR	
A08000	497	LP FUEL SOV APU	APU燃油储压活门	AR	
12664	9866126	CHECK VALVE	单向活门	AR	
12664	9866146	CHECK VALVE	单向活门	AR	
12664	9866156	CHECK VALVE	单向活门	AR	
963A0000-02	3628	VALVE, TRIM AIR	活门	AR	SV
963A0000-02	4135	VALVE, TRIM AIR	活门	AR	SV
1320A0000-02	283	VALVE, TRIM AIR	配平空气活门	AR	
2LA403702-01	2207156	RWD FACING NAVIGATION LIC	导航灯	AR	
AR4714-7	H-E8348	ELACTRICAL RWLEASE STRIKE	电释放装置	AR	SV
AR4714-7	1008140	ELACTRICAL RWLEASE STRIKE	电释放装置	AR	SV
VD3900-03	99011446	FAN, RECIRCULATION	循环风扇	AR	SV
VD3900-03	99011441	FAN, RECIRCULATION	循环风扇	AR	SV
736A0000-02	4380	SENSOR, MIX. TEMP.	传感器	AR	
736A0000-02	4365	SENSOR, MIX. TEMP.	传感器	AR	
D05000	2213	VALVE-FILL AND DRAIN	排放活门	AR	SV
6610-20560-01	344	ACTUATOR, ROTARY	作动筒	AR	SV
FRH230003C	FR005BA	PRESSURE REDUCING VALVE	减压阀	AR	
972C10-1	1198	VALVE-SHUTTLE	关断活门	AR	
D05000	2192	VALVE-FILL AND DRAIN	排放活门	AR	SV
9024-15704-03	9115367	VALVE-SAFETY	安全活门	AR	
9024-15704-03	9115366	VALVE-SAFETY	安全活门	AR	
746A0000-06	0746A00L	VALVE, TRIM AIR PRESS.	活门	AR	SV
4279198	26105	MOTOR CONVERTER	雨刷马达	AR	
4279204	26104	MOTOR CONVERTER	雨刷马达	AR	
EVT3454HC	3676	FAN	风扇	AR	SV
EVT3454HC	1.65E+08	FAN	风扇	AR	SV
CT191B	1065	CHECK VALVE	单向活门	AR	
V2T127D	4712	AIR BUTTERFLY VALVE	气动蝶形活门	AR	SV
V2T152D	3800	AIR BUTTERFLY VALVE	气动蝶形活门	AR	SV
Z040H000820A	040H0001	DEU, DECODER ENCODER UNIT	B型解码/编码组件	AR	
Z040H0006110	8053	DEU, DECODER ENCODER UNIT	B型解码/编码组件	AR	
Z040H0006110	8220	DEU, DECODER ENCODER UNIT	B型解码/编码组件	AR	
Z030H0005110	34463	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34456	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34478	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	

Z030H0005110	34462	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z040H000820A	9891	DEU, DECODER ENCODER UNI	B型解码/编码组件	AR	
Z030H0005110	34457	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34471	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34480	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34473	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34479	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34474	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34464	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	20790	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	030H00060	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34472	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34461	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	030H00072	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34475	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34460	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34469	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34459	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34477	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34466	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34458	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34476	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34468	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34465	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
8VU	NA001	8VU PANEL	8VU 面板	AR	
119VU	NA001	119VU PANEL	119VU 面板	AR	
403VU	NA001	403VU PANEL	403VU 面板	AR	
108VU	NA001	108VU PANEL	108VU 面板	AR	
27VU	NA001	27VU PANEL	27VU 面板	AR	
986F12-1	2099	CHECK VALVE	单向活门	AR	
986F12-1	2102	CHECK VALVE	单向活门	AR	
V2T152D	3803	AIR BUTTERFLY VALVE	气动蝶形活门	AR	SV
VD3920	9034726	FAN, EXTRACTION	风扇	AR	SV
4-60000H882-00	10345	DRAINMAST	放水桅杆	AR	SV
72CF8944-00	726	FLEXIBLE CONTROL	扰性控制组件	AR	
72CF8944-00	757	FLEXIBLE CONTROL	扰性控制组件	AR	
72CF8945-00	941	FLEXIBLE CONTROL	扰性控制组件	AR	
72CF8945-00	942	FLEXIBLE CONTROL	扰性控制组件	AR	
HTE69000-1	FR1644BA	SWITCH-P	P电门	AR	SV
HTE69000-1	FR1643BA	SWITCH-P	P电门	AR	SV
9811839	FRTR992BA	CHECK VALVE	单向活门	AR	
9811839	FRTR994BF	CHECK VALVE	单向活门	AR	
23VU	NA001	FLT CTL PAL	飞行控制面板	AR	
24VU	NA001	FLT CTL PAL	飞行控制面板	AR	
112VU	NA001	112VU PANEL	112VU 面板	AR	
54VU	NA001	54VU PANEL	54VU 面板	AR	
111VU	NA001	111VU PANEL	111VU 面板	AR	
50VU	NA001	50VU PANEL	50VU 面板	AR	
40VU	NA001	40VU PANEL	40VU 面板	AR	
HTE900087-001	FR050BB	FUEL TRANSFER VALVE	燃油传输活门	AR	
HTE900087-001	FR052BB	FUEL TRANSFER VALVE	燃油传输活门	AR	

HTE900087-001	FR053BB	FUEL TRANSFER VALVE	燃油传输活门	AR	
HTE900087-001	FR051BB	FUEL TRANSFER VALVE	燃油传输活门	AR	
3901395	FRTR110BF	PUMP JET	引射泵	AR	
3901395	FRTR134BF	PUMP JET	引射泵	AR	
9811839	FRTR993BA	CHECK VALVE	单向活门	AR	
9811839	FRTR995BA	CHECK VALVE	单向活门	AR	
9811839	FRTR996BA	CHECK VALVE	单向活门	AR	
9811839	FRTR997BA	CHECK VALVE	单向活门	AR	
HTE900133	FR162BA	FUEL DEFUEL/TRANSFER VALV	燃油释放传输活门	AR	
20700-300	1078	VALVE, FUEL	燃油活门	AR	
HTE900095	FR016BB	TRANSFER VALVE DRIVE SHAFT	转换驱动轴	AR	
HTE900095	FR018BB	TRANSFER VALVE DRIVE SHAFT	转换驱动轴	AR	
HTE900096	FR010BB	TRANSFER VALVE DRIVE SHAFT	转换驱动轴	AR	
HTE900096	FR009BB	TRANSFER VALVE DRIVE SHAFT	转换驱动轴	AR	
D5757030501500	2860	STRU ASSY	支柱组件	AR	
D5757032200200	A9263	STRU ASSY	支柱组件	AR	SV
31073-110	3557	AILERON SERVOCONTROL	副翼伺服控制器	AR	SV
31073-110	3773	AILERON SERVOCONTROL	副翼伺服控制器	AR	SV
31073-110	4357	AILERON SERVOCONTROL	副翼伺服控制器	AR	SV
31073-110	19070	AILERON SERVOCONTROL	副翼伺服控制器	AR	SV
9815715	FRTR115BA	RELIEF VALVE	单向活门	AR	
A25461-104	H0826	AUTOMATIC SELECTOR	自动选择器	AR	
472088-1	40451EL	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	
446158	10-181206	DISCHARGE	爆炸帽	AR	
472088-1	40411EL	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	
446158	10-181208	DISCHARGE	爆炸帽	AR	
472088-1	55096EL	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	
446158	1.11E+08	DISCHARGE	爆炸帽	AR	
472088-1	61734EL	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	
446158	1.11E+08	DISCHARGE	爆炸帽	AR	
472412-1	9906EL	APU FIREEXTINGUISHER BOT	APU灭火瓶	AR	
A805300-12	41302015	DISCHARGE	爆炸帽	AR	
C93R38-606	20991	FUEL PUMP CANISTER	燃油泵保护罩	AR	
C93R38-606	20963	FUEL PUMP CANISTER	燃油泵保护罩	AR	
C93R38-606	20979	FUEL PUMP CANISTER	燃油泵保护罩	AR	
C93R38-606	21121	FUEL PUMP CANISTER	燃油泵保护罩	AR	
C93R38-601	20883	FUEL PUMP CANISTER	燃油泵保护罩	AR	
C93R38-601	20924	FUEL PUMP CANISTER	燃油泵保护罩	AR	
C49AA0221	1076	CANISTER, PUMP FUEL	燃油泵保护罩	AR	
A25315-1	H3181	PARKING BRAKE VALVE	停留活门	AR	
402VU	NA001	402VU PANEL	402VU 面板	AR	
500VU	NA001	500VU PANEL	500VU 面板	AR	
301VU	NA001	301VU PANEL	301VU 面板	AR	
9028A0004-01	9028	POS. PICK OFF UNIT	不对称位置传感器	AR	
9028A0004-01	9029	POS. PICK OFF UNIT	不对称位置传感器	AR	
521A0200-01	3822	ADAPTER PPU-ASSY	PPU适配器组件	AR	
521A0200-01	3823	ADAPTER PPU-ASSY	PPU适配器组件	AR	
831A0000-05	4349	WING TIP BRAKE	翼尖刹车	AR	
831A0000-05	4348	WING TIP BRAKE	翼尖刹车	AR	
831A0000-05	4419	WING TIP BRAKE	翼尖刹车	AR	
HTE190001-2	M252GB129	TWIN MOTOR ACTUATOR	作动器	AR	SV

HTE200002-1	M426GB299	TWIN MOTOR ACTUATOR	作动器	AR	SV
HTE200002-1	M436GB299	TWIN MOTOR ACTUATOR	作动器	AR	SV
HTE200002-1	M437GB299	TWIN MOTOR ACTUATOR	作动器	AR	SV
HTE200002-1	M438GB299	TWIN MOTOR ACTUATOR	作动器	AR	SV
HTE900135	FR150BA	FUEL TRANSFER VALVE	燃油交输活门	AR	
9508175	FRTR128BF	FLOAT VENT VALVE	通气活门	AR	
2LA005469-00	6680	WARNING LIGHT PANEL	警告灯面板	AR	
2LA005469-00	6527	WARNING LIGHT PANEL	警告灯面板	AR	
2LA005469-00	6530	WARNING LIGHT PANEL	警告灯面板	AR	
2LA005469-00	6697	WARNING LIGHT PANEL	警告灯面板	AR	
2LA005469-00	6738	WARNING LIGHT PANEL	警告灯面板	AR	
2LA005469-00	1747755	WARNING LIGHT PANEL	警告灯面板	AR	
831A0000-05	4346	WING TIP BRAKE	翼尖刹车	AR	
C12404AB02	C12404006	ATC/TCAS CONTROL UNIT	ATC/TACS控制组件	AR	
D201094	22217	STATIC PROB	静压探头	AR	
D201094	22214	STATIC PROB	静压探头	AR	
D201094	22222	STATIC PROB	静压探头	AR	
25VU	NA001	25VU PANEL	25VU 面板	AR	
9027-20010	9840757	SELECTOR, LDG. FIELD EL	着落高度选择器	AR	SV
30VU	NA001	30VU PANEL	30VU 面板	AR	
777A0000-01	4933	SELECTOR, TEMP.	温度选择器	AR	
777A0000-01	4841	SELECTOR, TEMP.	温度选择器	AR	
777A0000-01	4943	SELECTOR, TEMP.	温度选择器	AR	
48VU	NA001	48VU PANEL	48VU面板	AR	
058-001-00	5542	ROTARY SWITCH	旋转电门	AR	
21VU	NA001	21VU PANEL	21VU面板	AR	
058-001-00	5526	ROTARY SWITCH	旋转电门	AR	
22VU	NA001	22VU PANEL	22VU面板	AR	
7530334	20570	SELECTOR, TEMP.	温度选择器	AR	
058-001-00	5525	ROTARY SWITCH	旋转电门	AR	
115VU	NA001	115VU PANEL	115VU面板	AR	
058-001-00	5513	ROTARY SWITCH	旋转电门	AR	
AR4714-11	1164008	ELECTRICAL RWLEASE STRIKI	电释放装置	AR	SV
35VU	NA001	35VU PANEL	35VU 面板	AR	
206PN01	1544	DC. VOLTMETER	电压指示器	AR	
206PN01	1553	DC. VOLTMETER	电压指示器	AR	
110VU	NA001	110VU PANEL	110VU 面板	AR	
27-457	1659	RUDDER TRIM CONTROL SWITC	方向舵配平控制电	AR	
195PN01Y01	1446	RUDDER TRIM INDICATOR	方向舵配平指示器	AR	SV
769B0000-01	2206	CHECK VALVE	单向活门	AR	
769B0000-01	2262	CHECK VALVE	单向活门	AR	
1303A0000-04	1346	VALVE, FLOW CONTROL	流量控制活门	AR	
1303A0000-04	129	VALVE, FLOW CONTROL	流量控制活门	AR	
C20215000	3687	BRAKE PEDAL TRANSMITTER	刹车脚踏传感器	AR	SV
1554A9900-01	165	HP-MANIFOLD (BLUE)	高压总管	AR	
BHC1060-04	3579	VALVE-PRIORITY	优先活门	AR	SV
CZ9284E	HEK19579	PRESSURE TRANSDUCER	压力传感器	AR	SV
450-2-3100-00	42157	SWITCH PRESSURE HYD.	压力电门	AR	SV
50-2-3100-00	10929	SWITCH-PRESSURE	压力电门	AR	SV
71190400010NCOA	5.08E+08	VALVE-SAMPLING	取样活门	AR	SV
QA06304	RG11-2281	FLITER	油滤	AR	

ZCV64-10	80413398	CHECK VALVE	单向活门	AR	
9107A0004-01	25	SWITCH-PRESSURE	压力电门	AR	
31075-840	4498	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
31075-840	4497	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
31075-840	3233	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
31075-840	4332	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
810A0000-05	14170	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	SV
810A0000-06	0810A00L	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	
810A0000-05	7631	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	SV
SC4700-5	2624	YAW DAMPER SERVOACTUATOR	偏航阻尼伺服控制	AR	SV
SC4700-5	3121	YAW DAMPER SERVOACTUATOR	偏航阻尼伺服控制	AR	SV
769105A	DRG3792-8	AGCM	RAT地面检查模块	AR	
201117018	CWDD-DH5	UPLOCK, MLG	主起落架上位锁组	AR	
201117017	CWDD-DH13	UPLOCK, MLG	主起落架上位锁组	AR	
520913	F9911085	CONST. SPEED MOTOR/GENERAT	恒速马达发电机	AR	
753C0000-02	81211-530	HEAT EXCHANGER	热交换器	AR	SV
753C0000-02	5594	HEAT EXCHANGER	热交换器	AR	SV
C19DS0016	142	RESERVOIR HYDR	液力油箱	AR	
18301905-1	48694D	PRESSURE GAUGE AIR	气压表	AR	
70400	3322	VALVE RELIEF AIR	释压活门	AR	
HTE690035-1	FR616	PRESSURE SWITCH AIR	压力电门	AR	
C19DS0026	132	RESERVOIR HYDR	液力油箱	AR	
18301905-1	49378D	PRESSURE GAUGE AIR	气压表	AR	
70400	80918386	VALVE RELIEF AIR	释压活门	AR	
C82LL0010	3840	DRAIN VALVE	排放活门	AR	SV
HTE690035-1	FR588	PRESSURE SWITCH AIR	压力电门	AR	
693335	MX602246	PACKAGE E-PUMP	电动泵	AR	
974540	G1230775	PACKAGE E-PUMP	电动泵	AR	
763A0000-03	11796	TEMPERATURE SENSOR	温度传感器	AR	SV
763A0000-03	11780	TEMPERATURE SENSOR	温度传感器	AR	SV
342300M01	5412	TRANSDUCER UNIT	传感器组件	AR	
342300M01	5454	TRANSDUCER UNIT	传感器组件	AR	
322000M02	2308	TRANSDUCER UNIT	传感器组件	AR	SV
322000M02	2249	TRANSDUCER UNIT	传感器组件	AR	SV
8ES403703-02	2035	RWD FACING NAV LIGHT XFMR	变压器	AR	
3108-89	1131	VOR. ANTENNA	甚高频全信标天线	AR	
622-5136-201	73RP	WEATHER RADAR DUAL ANT MC	气象雷达天线基座	AR	
DV8456701-5	2260	TRAVEL LIMITATION UNIT	行程限制组件	AR	SV
SPSA320-10-2-2	778	FIXED SIDE WINDOW	风挡	AR	
SPSA320-9-2-2	4989	FIXED SIDE WINDOW	风挡	AR	SV
NP165331-1	15019H083	WINDSHIELD PANEL	风挡	AR	
STA320-2-8-2	22818	WINDSHIELD PANEL	风挡	AR	
622-5137-601	6952	WEATHER RADAR ANTENNA	气象雷达天线	AR	SV
754C0000-01	81212-671	HEAT EXCHANGER	热交换器	AR	SV
754D0000-01	81212-537	HEAT EXCHANGER	热交换器	AR	SV
SPSA320-7-4-2	641	SLIDING SIDE WINDOW	风挡	AR	
SPSA320-8-4-2	18170	SLIDING SIDE WINDOW	风挡	AR	
D9550001901700	FR2028	SIDE STICK ASSY CAPT	操纵杆	AR	
321000M03	6447	SIDE STICK TRANSDUCER UN	侧杆传感器组件	AR	SV
321000M03	6443	SIDE STICK TRANSDUCER UN	侧杆传感器组件	AR	SV
D9550001801700	FR2028	SIDE STICK ASSY F/O	操纵杆	AR	

321000M03	6412	SIDE STICK TRANSDUCER UN	侧杆传感器组件	AR	SV
321000M03	6415	SIDE STICK TRANSDUCER UN	侧杆传感器组件	AR	SV
755C0000-01	81210-567	REHEATER	再加热器	AR	SV
755C0000-01	81210-501	REHEATER	再加热器	AR	SV
680203037A	300	RAT-RAM AIR TURBINE	冲压空气涡轮	AR	SV
933260	F9830213	PUMP	泵	AR	
74-20	16919	PORTABLE FIRE EXTINGUISHER	灭火器	AR	SV
74-20	15139	PORTABLE FIRE EXTINGUISHER	灭火器	AR	SV
74-20	12870	PORTABLE FIRE EXTINGUISHER	灭火器	AR	SV
74-20	18020	PORTABLE FIRE EXTINGUISHER	灭火器	AR	SV
74-20	20566	PORTABLE FIRE EXTINGUISHER	灭火器	AR	SV
ST3100-23-10	5058	HANDSET	电话	AR	
ST3100-23-10	1144	HANDSET	电话	AR	
ST3100-23-10	2152	HANDSET	电话	AR	
ST3100-33-10	932	HANDSET	电话	AR	
20790-03AC	851626	VALVE, OUTFLOW	外流活门	AR	
S4-3300520-01	2223	ACTUATOR	作动筒	AR	SV
S4-3300520-01	2230	ACTUATOR	作动筒	AR	SV
S4-3300520-01	2246	ACTUATOR	作动筒	AR	SV
S4-3300520-01	2149	ACTUATOR	作动筒	AR	SV
C19BQ0016	142	RESERVOIR HYDR.	液力油箱	AR	
18301905-1	49149D	PRESSURE GAUGE AIR	压力表	AR	
70400	80918431	VALVE RELIEF AIR	释压活门	AR	
HTE690035-1	29051435	PRESSURE SWITCH AIR	空气压力电门	AR	
HTE690112	FR026	PRESSURE SWITCH AIR	空气压力电门	AR	
D2727025000400	7837461	ROD SPRING	杆弹簧	AR	
SB209L1A1-1484	50332	HYDR. ACCUMULATOR	储压器	AR	
18330904-2	38825D	HIGH PRESSURE GAUGE	压力表	AR	SV
D323-70100-000-00	744	VERTEILERBLOCK	分配部件	AR	
762080-1	H0972	SAFETY VALVE L. G. S.	安全活门	AR	SV
762080-1	H1038	SAFETY VALVE L. G. S.	安全活门	AR	SV
D5764000000800Z	AP1066	AILERON	副翼	AR	
D5764000000900Z	AP1051	AILERON	副翼	AR	
D5746047800600	SA2028	SALT	缝翼	AR	
D5746059800600	SA2028	SALT	缝翼	AR	
D5746027800500	SA2028	SALT	缝翼	AR	
D5746047800700	SA2028	SALT	缝翼	AR	
D5746016800900	SA2030	SALT	缝翼	AR	
D5746027800600	SA5017	SALT	缝翼	AR	
D5746016800600	SA2028	SALT	缝翼	AR	
D5746037800600	SA2028	SALT	缝翼	AR	
D5746037800700	SA2028	SALT	缝翼	AR	
D5746059800900	SA2053	SALT	缝翼	AR	
D5775000300000Z	AP1123	SPOILER	扰流板	AR	
D5775001600000Z	AP1152	SPOILER	扰流板	AR	
D5775000400000Z	AP1028	SPOILER	扰流板	AR	
D5775000400100Z	AP1110	SPOILER	扰流板	AR	
D5775000300100Z	AP1037	SPOILER	扰流板	AR	
D5775000200100Z	AP750	SPOILER	扰流板	AR	
D5775000500100Z	AP1049	SPOILER	扰流板	AR	
D5775000200000Z	AP753	SPOILER	扰流板	AR	

D5775000500000Z	AP1018	SPOILER	扰流板	AR	
D5775000100100Z	AP768	SPOILER	扰流板	AR	
D5757065001000000	TS2374	FLAP	内襟翼	AR	
D57570650011000000	TS2374	FLAP	内襟翼	AR	
D57571008000000000	1895	FLAP	外襟翼	AR	
D5311047700007	RADSA2132	RADOME	雷达罩	AR	
D55471002000000002	TS2367	RUDDER	方向舵	AR	
QA05604	RG11-3982	FILTER HYD. LP	低压油滤组件	AR	
14330-230	NA001	FLUSH CONTROL UNIT	冲洗控制组件	AR	
D05000	11227	VALVE-FILL AND DRAIN	溢流活门	AR	SV
S4-3402180	1452	ELECTRIC. SELECTOR VA	电子选择活门	AR	
ZCV63-4	81201106	CHECK VALVE	单向活门	AR	
ZCV63-4	81012414	CHECK VALVE	单向活门	AR	
ZCV64-10	81123163	CHECK VALVE	单向活门	AR	
ZCV64-12	81113737	CHECK VALVE	单向活门	AR	
ZCV64-10	81118175	CHECK VALVE	单向活门	AR	
ZCV63-6	81210134	CHECK VALVE	单向活门	AR	
ZCV63-6	80922163	CHECK VALVE	单向活门	AR	
ZCV64-10	8050690	CHECK VALVE	单向活门	AR	
ZCV63-6	81210135	CHECK VALVE	单向活门	AR	
ZCV63-6	81210137	CHECK VALVE	单向活门	AR	
ZCV63-6	81116259	CHECK VALVE	单向活门	AR	
ZCV63-6	80922105	CHECK VALVE	单向活门	AR	
ZCV63-6	81210133	CHECK VALVE	单向活门	AR	
ZCV63-6	81210131	CHECK VALVE	单向活门	AR	
ZCV63-6	80416137	CHECK VALVE	单向活门	AR	
ZCV63-4	81012396	CHECK VALVE	单向活门	AR	
HTE200002-1	M550GB119	FUEL TRANSFER VALVE ACTUA	作动器	AR	SV
6-1404-0000-4	980342	HYDRAULIK HAND PUMP	液压手动泵	AR	SV
6-1404-0000-4	990012	HYDRAULIK HAND PUMP	液压手动泵	AR	SV
682007004	UEDH441	RAT CONTROL PANEL	RAT控制面板	AR	
S4-3500711	1314	GROUND SERVICE MANIFO	总管	AR	
S4-3500711	1325	GROUND SERVICE MANIFO	总管	AR	
QA07739-01	RG10-1378	RSVR PRESS UNIT	增压组件	AR	
114087005	CWDD-DH63	DOOR BY-PASS VALVE, MLG	旁通活门	AR	
114087005	CWDD-DH64	DOOR BY-PASS VALVE, MLG	旁通活门	AR	
C24592000-1	H1769	MASTER CYLINDER	刹车阻尼器	AR	
C24592000-1	H5114	MASTER CYLINDER	刹车阻尼器	AR	
C82LL0010	3227	DRAIN VALVE	排放活门	AR	SV
70200	4005	VALVE, 2/2WAY	减压阀	AR	
70200	4063	VALVE, 2/2WAY	减压阀	AR	
70200	4217	VALVE, 2/2WAY	减压阀	AR	
749198-2	H0513	HYDRAULIC RESERVOIR	液压蓄压器	AR	
829B0000-01	4326	ACTUATOR A-SLAT	缝翼作动器	AR	
829B0000-01	4327	ACTUATOR A-SLAT	缝翼作动器	AR	
829B0000-01	4324	ACTUATOR A-SLAT	缝翼作动器	AR	
829B0000-01	4325	ACTUATOR A-SLAT	缝翼作动器	AR	
830A0000-04	16776	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	16769	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	16767	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	16764	ACTUATOR B-SLAT	缝翼作动器	AR	

1553A0000-01	164	HP-MANIFOLD	高压总管	AR	
450-2-3100-00	42156	SWITCH-PRESSURE	压力电门	AR	SV
50-2-3100-00	20080	SWITCH-PRESSURE	压力电门	AR	SV
9107A0005-01	33	SWITCH-PRESSURE	压力电门	AR	
114151004	NA001	VALVE-HIGH PRESSURE RELIEF	高压释放活门	AR	
CZ9284E	HEK20750	PRESSURE TRANSDUCER	压力传感器	AR	SV
ZCV64-16	90104110	CHECK VALVE	单向活门	AR	
P7119HP	4.59E+08	VALVE SAMPLING	取样活门	AR	
QA06304	RG10-1760	FILTER HYD.	油滤	AR	
201122008	CWDD-DH-2	DOOR UPLOCK, MLG	起落架门上锁	AR	
201122008	CWDD-DH-3	DOOR UPLOCK, MLG	起落架门上锁	AR	
QA05797	RG11-3353	FILTER, HYD. HP	油滤	AR	
QA05797	RG11-3363	FILTER, HYD. HP	油滤	AR	
1555A0000-01	159	PTU-MANIFOLD	PTU总管	AR	
A25313002-1	H4765	SELECTOR VALVE	选择活门	AR	
9107A00004-01	43	SWITCH-PRESSURE	压力电门	AR	
BHC1060-04	3553	VALVE-PRIORITY	优先活门	AR	SV
114086001	CWDD-DH-1	CUT-OUT VALVE	关断活门	AR	
4101002-9	1139	POWER TRANSFER UNIT	动力转换组件	SV	SV
QA05561	RH1-1032	FILTER HYD. LP.	油滤	AR	
QA05561	RH1-1031	FILTER HYD. LP.	油滤	AR	
1559A0000-01	158	HP-MANIFOLD	高压总管	AR	
450-2-3100-00	42158	SWITCH-PRESSURE	压力电门	AR	SV
50-2-3100-00	9660	SWITCH-PRESSURE	压力电门	AR	SV
CZ9284E	HEK39469	PRESSURE TRANSDUCER	压力传感器	AR	SV
114151004	CWDD-DH-3	VALVE-HIGH PRESSURE RELIEF	释压活门	AR	
71190400010NCOA	5.08E+08	VALVE-SAMPLING	取样阀	AR	SV
QA06304	RG10-1792	FILTER HYD.	油滤	AR	
114160005	HAI-0447	EJECTION JACK	弹出作动筒	AR	
786A0000-12	2186	POWER CONTROL UNIT	动力控制组件	AR	
9028A0004-01	8687	POSITION PICK-OFF UNIT	不对称位置传感器	AR	
9028A0004-01	8689	POSITION PICK-OFF UNIT	不对称位置传感器	AR	
787A0000-07	4423	VALVE BLOCK	活门块	AR	
787A0000-07	4426	VALVE BLOCK	活门块	AR	
786A0000-12	2184	POWER CONTROL UNIT	动力控制组件	AR	
9028A0004-01	8688	POSITION PICK-OFF UNIT	不对称位置传感器	AR	
9028A0004-01	8684	POSITION PICK-OFF UNIT	不对称位置传感器	AR	
787A0000-07	4419	VALVE BLOCK	活门块	AR	
787A0000-07	4421	VALVE BLOCK	活门块	AR	
144122014	CH0903420	DOOR ACTUATOR MLG.	起落架舱门作动筒	AR	
144122014	SA0809403	DOOR ACTUATOR MLG.	起落架舱门作动筒	AR	
C20105000	9735	TACHOMETER	轮速传感器	AR	
C20105000	9737	TACHOMETER	轮速传感器	AR	
C20105000	9728	TACHOMETER	轮速传感器	AR	
C20105000	9731	TACHOMETER	轮速传感器	AR	
ZCV64-20	81223116	CHECK VALVE	单向活门	AR	
ZCV64-12	81113763	CHECK VALVE	单向活门	AR	
ZCV64-10	81123154	CHECK VALVE	单向活门	AR	
ZCV63-8	81001206	CHECK VALVE	单向活门	AR	
ZCV63-6	81116306	CHECK VALVE	单向活门	AR	
ZCV63-6	81116253	CHECK VALVE	单向活门	AR	

ZCV63-6	81116281	CHECK VALVE	单向活门	AR	
1556A9900-01	NA001	MANIFOLD-HP	高压总管	AR	
9107A0004-01	359	SWITCH-PRESSURE	压力电门	AR	
BHC1060-04	3464	VALVE-PRIORITY	优先活门	AR	SV
VT477-2	3615	INDICATOR QTY. RSVR.	指示器	AR	
E21336000	14222	NWS FEEDBACK SENSOR	传感器	AR	
E21336000	10034	NWS FEEDBACK SENSOR	传感器	AR	
C24736001-1	H1063	ELECTRO-HYD. STEERING MODI	电子液压转弯模块	AR	SV
D23278100	B625	TOWING ADAPTER ASSY	牵引组件	AR	
D23596000-2	B208	STRUT ASSY	支柱组件	AR	
D23613000	MA1344	CYLINDER-ACTUATING, NLG	前架收放作动筒	AR	
C24839010-2	H1790	MANIFOLD	总管	AR	
114083003	CWDD-DH9-	VENT VALVE, MLG	主起落架通气活门	AR	
114083003	CWDD-DH-3	VENT VALVE, MLG	主起落架通气活门	AR	
114087006	DH-1019-C	DOOR BY-PASS VALVE, MLG	主起落架舱门旁通	AR	
114161003	CWDD-DH10	MODULE-JACK CONTROL	作动筒控制组件	AR	
E03A00	3540	FIRE-SHUT-OFF-VALVE	关断活门	AR	
22715-000-02	H0845	NLG. DOOR ACTUATING CYLINI	前架舱门作动筒	AR	
800VU	NA001	REFUEL PANEL	加油面板	AR	
201419001-010	MDL-MG017	TORQUE LINK DAMPER	阻尼器	AR	
201166013	B818	SIDESTAY ASSY, MLG	主架侧支撑组件	AR	
201419001-020	MG4551	TORQUE LINK DAMPER	阻尼器	AR	
201166014-030	11B140417	SIDESTAY ASSY, MLG	主架侧支撑组件	AR	
830A0000-04	16768	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	16771	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	16772	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	16774	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	16773	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	16778	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	16770	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	16775	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	16763	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	16766	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	16765	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	16777	ACTUATOR B-SLAT	缝翼作动器	AR	
L95F50-603	A18187	FUEL TK OVERPRESSURE PROT	油箱保护器	AR	SV
L95F50-603	23025	FUEL TK OVERPRESSURE PROT	油箱保护器	AR	SV
L95F50-603	A18186	FUEL TK OVERPRESSURE PROT	油箱保护器	AR	SV
VD3810	3012473	FAN, EXTRACTION	循环风扇	AR	SV
38E93-5	4674	WING ANTI-ICE CONTROL VAL	大翼防冰控制活门	AR	SV
38E93-5	6528	WING ANTI-ICE CONTROL VAL	大翼防冰控制活门	AR	SV
E03A00	3539	FIRE-SHUT-OFF-VALVE	关断活门	AR	
HTE420044	FR044BB	PRESSURE HOLDING VALVE	稳压活门	AR	
HTE420044	FR043BB	PRESSURE HOLDING VALVE	稳压活门	AR	
4063-18221	9817583	VALVE, ISOLATION	隔离活门	AR	SV
4063-18221	9817609	VALVE, ISOLATION	隔离活门	AR	SV
SB209L1A1-1484	40351	HYDR. ACCUMULATOR	储压器	AR	
18330904-2	38828D	HIGH PRESSURE GAUGE	压力表	AR	SV
SB209L1A1-1484	40668	HYDR. ACCUMULATOR	储压器	AR	
18330904-2	48881D	HIGH PRESSURE GAUGE	压力表	AR	SV
828A0000-02	V4204	BEVEL GEARBOX 63, 5DEG	63.5度斜面齿轮箱	AR	

828A0000-02	V4205	BEVEL GEARBOX 63, 5DEG	63.5度斜面齿轮箱	AR	
828A0000-02	V4206	BEVEL GEARBOX 63, 5DEG	63.5度斜面齿轮箱	AR	
828A0000-02	V4207	BEVEL GEARBOX 63, 5DEG	63.5度斜面齿轮箱	AR	
789A0000-02	V2110	LINE GEARBOX	线齿轮箱	AR	
789A0000-02	V2111	LINE GEARBOX	线齿轮箱	AR	
788A0000-02	V2123	RIGHT ANGLE GEARBOX	直角齿轮箱	AR	
788A0000-02	V2124	RIGHT ANGLE GEARBOX	直角齿轮箱	AR	
790A0000-02	V3135	BEVEL GEARBOX 19 DEG.	19度斜面齿轮箱	AR	
827A0000-02	V1071	GEARBOX, T-	T型齿轮箱	AR	
C24730100	H2136	NLG. DOOR UPLOCK ASSY	上位锁组件	AR	
C24730001-6	H1898	NLG. UPLOCK ASSY	上位锁组件	AR	
HTE900118-001	FR047BB	LOW PRESSURE FUEL VALVE	燃油低压活门	AR	SV
C24837101-4	H4765	MANIFOLD	总管	AR	
C24837101-4	H4044	MANIFOLD	总管	AR	
C24840010-2	H1776	MANIFOLD	总管	AR	
S4-3500712	445	GROUND SERVICE MANIFO	地面服务总管	AR	
A25316-101	H3122	SHUTTLE VALVE	关断活门	AR	
114170009	SA0701257	MANIFOLD ASSY SELECTOR	选择总管	AR	
A25434006-3000	H0564	EMER. BRK. DUAL DISTR. VALVE	应急阀	AR	
1905A0000-01	1044	SAFETY VALVE L. G. S.	安全阀	AR	
FE240-004	1550	DOOR DAMPER CYLINDER	登机门作动器	AR	SV
4-60000H882-00	3.68E+11	DRAINMAST	防水桅杆	AR	SV
41-2-1100-02	1219	ACTUATOR, EMER. RAM AIR	冲压空气作动器	AR	SV
S4-3400900-01	4363	MANUAL SELECTOR VALVE	人工选择活门	AR	SV
450-2-3100-00	39481	SWITCH PRESSURE HYD.	液压电门	AR	SV
9508175	FRTR127BF	FLOAT VENT VALVE	浮子排气活门	AR	
FE240-004	996	DOOR DAMPER CYLINDER	登机门作动器	AR	SV
FE240-004	1476	DOOR DAMPER CYLINDER	登机门作动器	AR	SV
FE240-004	1479	DOOR DAMPER CYLINDER	登机门作动器	AR	SV
HTE900118-001	FR044BB	LOW PRESSURE FUEL VALVE	燃油低压活门	AR	SV
TM113-1	2748	TRANSDUC. /SWITCH-TEMP	电门	AR	
TM113-1	2659	TRANSDUC. /SWITCH-TEMP	电门	AR	
TM113-1	2661	TRANSDUC. /SWITCH-TEMP	电门	AR	
HTE310021-1	FR055BB	AIR INLET VALVE	进气活门	AR	
CT141-1	1284	VALVE-CHECK	单向活门	AR	
C51LM0020	2547	VALVE, 4/4WAY	活门	AR	
FRH050003	14050143	INDICATOR, MAGNETIC LEVEL	油尺	AR	
FRH050003	14050141	INDICATOR, MAGNETIC LEVEL	油尺	AR	
114151004	CWDD-DH95	VALVE-HIGH PRESSURE RELIEF	释压活门	AR	
HTE310021-1	FR056BB	AIR INLET VALVE	进气活门	AR	
ZCV63-6	81116353	CHECK VALVE	单向活门	AR	
QA05593	RG12-2199	FILTER HYD. HP	油滤	AR	
9508175	FRTR119BF	FLOAT VENT VALVE	通气活门	AR	
B42CA2002	4967	VALVE NON RETURN	活门	AR	
B42CA2002	4782	VALVE NON RETURN	活门	AR	
B42CA2002	4722	VALVE NON RETURN	活门	AR	
ZCV63-4	8120176	CHECK VALVE	单向活门	AR	
ZCV63-4	81201185	CHECK VALVE	单向活门	AR	
ZCV63-4	80923250	CHECK VALVE	单向活门	AR	
ZCV63-6	81019121	CHECK VALVE	单向活门	AR	
D272-70400-01000	TH-1079	AFU-ARTIFICIAL FEEL UNIT	模拟感觉组件	AR	

FE171-000	FR1094	CABLE TENSION REGULATOR	钢索张力调节器	AR	
9508175	FRTR116BH	FLOAT VENT VALVE	通气活门	AR	
ZCV64-20	90126199	CHECK VALVE	单向活门	AR	
6137-3	1253	RUDDER TRIM ACTUATOR	方向舵配平活门	AR	
ZCV63-6	81210132	CHECK VALVE	单向活门	AR	
ZCV63-6	81210138	CHECK VALVE	单向活门	AR	
ZCV63-6	81210136	CHECK VALVE	单向活门	AR	
790A0000-02	V3157	BEVEL GEARBOX 19 DEG.	19度齿轮箱	AR	
790A0000-02	V3156	BEVEL GEARBOX 19 DEG.	19度齿轮箱	AR	
D2727000700600	1.52E+08	ROD-SPRING	杆弹簧	AR	
ZCV63-8	90111223	CHECK VALVE	单向活门	AR	
ZCV63-8	90111222	CHECK VALVE	单向活门	AR	
ZCV63-4	80923188	CHECK VALVE	单向活门	AR	
ZCV63-4	80923174	CHECK VALVE	单向活门	AR	
ZCV63-6	8041633	CHECK VALVE	单向活门	AR	
3022016-000	G0020030	RELIEF VALVE	释压活门	AR	
ZCV63-8	9012661	CHECK VALVE	单向活门	AR	
ZCV63-6	81116474	CHECK VALVE	单向活门	AR	
ZCV64-12	81113757	CHECK VALVE	单向活门	AR	
ZCV63-4	81012412	CHECK VALVE	单向活门	AR	
ZCV212	90910308	DOUBLE CHECK VALVE	双单向活门	AR	
A25312-1	H2324	THROTTLE VALVE	节流阀	AR	
778A0200-03	NA001	PIPE ASSY	管组件	AR	SV
778A0200-03	NA002	PIPE ASSY	管组件	AR	SV
ZCV63-6	81116336	CHECK VALVE	单向活门	AR	
60128-101	C3126	SURVIVAL KIT	SK包	AR	SV
60128-301	C10406	SURVIVAL KIT	SK包	AR	
60128-301	C11497	SURVIVAL KIT	SK包	AR	
60128-101	C1425	SURVIVAL KIT	SK包	AR	SV
505256-401	N/A	LIFE LINE	逃生绳	AR	
505256-401	N/A	LIFE LINE	逃生绳	AR	
505256-401	N/A	LIFE LINE	逃生绳	AR	
505256-401	N/A	LIFE LINE	逃生绳	AR	
N/A	N/A	MEDICINE CABINET	医药箱	AR	
N/A	N/A	MEDICINE CABINET	医药箱	AR	
A12SA	N/A	VOICE GUN	喇叭	AR	SV
A12SA	N/A	VOICE GUN	喇叭	AR	SV
N/A	N/A	DATA BOX	资料箱	AR	
L83A13-617	20592	LEAK MORNITOR	渗漏检测器	AR	
D5775002000100Z	AP1154	SOPILER	扰流板	AR	
D5775000200100Z	AP591	SOPILER	扰流板	AR	
D57750016000	AP1149	SOPILER	扰流板	AR	
D5775001800000Z	AP1107	SOPILER	扰流板	AR	
D57750016001	AP1155	SOPILER	扰流板	AR	
D5775002100000Z	AP1152	SOPILER	扰流板	AR	
D5775002000100Z	AP1158	SOPILER	扰流板	AR	
D5775002000000Z	AP1144	SOPILER	扰流板	AR	
D57750022000	AP1151	SOPILER	扰流板	AR	
754C0000-01	81212-560	HEAT EXCHANGER	热交换器	AR	SV
754D0000-01	81211-670	HEAT EXCHANGER	热交换器	AR	SV
754C0000-01	81212-608	HEAT EXCHANGER	热交换器	AR	SV

754D0000-01	81211-678	HEAT EXCHANGER	热交换器	AR	SV
761B0000-01	5359	ACOUATOR	作动器	AR	
761B0000-01	2163	ACOUATOR	作动器	AR	
755C0000-01	81210-570	REHEATER	再加热器	AR	SV
755C0000-01	81210-569	REHEATER	再加热器	AR	SV
VD3900-03	51691	FAN, RECIRCULATION	循环风扇	BC	SV
VD3900-03	99021453	FAN, RECIRCULATION	循环风扇	BC	SV
20790-02AC	51662	OUTFLOW VALVE	外流活门	AR	SV
VD3810	12105001	FAN	风扇	AR	SV
1303A0000-04	607	VALVE FLOWCONTROL	流量控制活门	AR	
1303A0000-04	1303-0289	VALVE FLOWCONTROL	流量控制活门	AR	
4063-18221	9917357	VALVE, ISOLATION	隔离活门	AR	SV
4063-18221	9917333	VALVE, ISOLATION	隔离活门	AR	SV
746A0000-06	746-1067	VALVE, TRIM AIR PRESS.	配平空气压力活门	AR	SV
1320A0000-02	1320-2090	VALVE, TRIM AIR	活门	AR	
1320A0000-02	1320-2862	VALVE, TRIM AIR	活门	AR	
12664	9914857	VALVE CHECK	单项活门	AR	
12664	9914851	VALVE CHECK	单项活门	AR	
12664	9914904	VALVE CHECK	单项活门	AR	
764A0000-03	8485	SENSOR, TEMP	温度传感器	AR	
764A0000-03	8018	SENSOR, TEMP	温度传感器	AR	
764A0000-03	8022	SENSOR, TEMP	温度传感器	AR	
2697A0000-01	2697A001	PRESSURE SENSORS	压力传感器	AR	
9106A0005-01	467	FLOW SENSORS	流量传感器	AR	
9104A0006-01	477	PRESSURE SENSORS	压力传感器	AR	
VFT300B00	42607558	AIR OURLER VALVE	排气活门	AR	SV
VFT210B00	42706159	AIR OURLER VALVE	排气活门	AR	SV
736A0000-02	6162	SENSOR	传感器	AR	
600612-00-510	20100435	SENSOR TEMP	温度传感器	AR	
6610-15945	2697	ACTUATOR ROTARY	作动器	AR	
736A0000-02	4446	SENSOR TEMP	温度传感器	AR	
600612-00-510	21046	SENSOR TEMP	温度传感器	AR	
1298A0000-01	1298-1783	VALVE-CHECK	单向活门	AR	SV
72184101	7840	HEATER WATER	热水器	AR	
72184101	7718	HEATER WATER	热水器	AR	
PPA1102-00	12658	CARGO COMPARTMENT SMOKE I	货仓烟雾探测器	AR	SV
35-0L5-1005-08	L5002523	BATTERY CHARGE LIMITER	限制器	BC	SV
35-0L5-1005-08	Q09305008	BATTERY CHARGE LIMITER	限制器	BC	SV
PPA1102-00	14005	CARGO COMPARTMENT SMOKE I	货仓烟雾探测器	AR	SV
PPA1104-01	1353	CARGO COMPARTMENT SMOKE I	货仓烟雾探测器	AR	
PPA1102-00	13148	CARGO COMPARTMENT SMOKE I	货仓烟雾探测器	AR	SV
PPA1202-00	116304	SMOKE DETECTION	烟雾探测器	AR	
V2T127D	2068	AIR BUTTERFLY VALVE	活门	AR	SV
Y005-3	4473	TRANSFORMER RECTIFIER	变压整流器	AR	
Y005-2	3540	TRANSFORMER RECTIFIER	变压整流器	AR	
Y005-2	3539	TRANSFORMER RECTIFIER	变压整流器	AR	
BA24320A1	33358	LAVATORY FIRE-EXTINGUISHI	厕所灭火瓶	AR	
BA21758	15900	LAVATORY FIRE-EXTINGUISHI	厕所灭火瓶	AR	
BA21758	25812	LAVATORY FIRE-EXTINGUISHI	厕所灭火瓶	AR	
PPA1102-00	3080	CARGO COMPARTMENTSMOKE DE	烟雾探测器	AR	SV
PPA1102-00	3270	CARGO COMPARTMENTSMOKE DE	烟雾探测器	AR	SV

1209-100	35141	PRESSURE SWITCH	压力电门	AR	SV
1209-100	37272	PRESSURE SWITCH	压力电门	AR	SV
87232323V00	VL2064007	DUCT TEMPERATURE SENSOR	管路温度活门	AR	
87232324V00	1223	SKIN TEMPERATURE SENSOR	蒙皮温度活门	AR	
CT191B	1175	AIR CHECK VALVE	单向活门	AR	
503CA02F1-02Y1	2824	DOUBLE THREE POLE CONTACT	连接器	AR	
PPA1202-00	9373	SMOKE DETECTION	烟雾探测器	AR	
PPA1202-00	338	SMOKE DETECTION	烟雾探测器	AR	
769B0000-01	2345	CHECK VALVE	单向活门	AR	
4313100-00-66-00	1506	OVEN	烤箱		
72067000	3415	OVEN	烤箱	AR	
72073000	18271	OVEN	烤箱	AR	
72073000	18313	OVEN	烤箱	AR	
1209-100	3581	PRESSURE SWITCH	压力电门	AR	SV
R0425A111	TAG6A005	RAFT-LIFE	救生筏	AR	
72184101	7143	HEATER WATER	热水器	AR	
C12404AB02	C12404003	ATC/TCAS CONTROL UNIT	ATC/TACS控制组件	AR	
72011412	23024	COFFEE MAKER	咖啡机	AR	
35-OL0-1001-04	OL0003647	ECAM CONTROL PANEL	ECAM控制面板	AR	
64141-580-1	Q09163007	STANDBY ALTIMETER	备用高度表	AR	SV
AC68A200	6404	MDDU	多功能磁盘驱动组	AR	
622-5130-021	3266	WEATHER RADAR DUAL CTL UN	气象雷达控制组件	AR	
2610-13-1	CL6503	CLOCK	时钟	AR	
622-5001-504	16CX43	VOR/ADF DDRMI	无线电电磁指示器	AR	
72011412	360	COFFEE MAKER	咖啡机	AR	
64050-866-1	Q09745003	STANDBY AIRSPEED INDICATC	备用空速表	AR	SV
35-0D5-1003	0D5002633	LOUDSPEAKER	扩音器	AR	SV
35-0D5-1003	0D5002630	LOUDSPEAKER	扩音器	AR	SV
503CA02F1-02Y1	2825	DOUBLE THREE POLE CONTACT	连接器	AR	
ACP2788AB04	4079	AUDIO CONTROL PANEL	音频控制面板	AR	SV
ACP2788AB04	5141	AUDIO CONTROL PANEL	音频控制面板	AR	SV
ACP2788AB04	5033	AUDIO CONTROL PANEL	音频控制面板	AR	SV
822-0299-020	121057	ADF RECEIVER	收发机	AR	SV
740120C	5219	GENERATOR CONTROL UNIT	发电机控制组件	AR	SV
740120C	5217	GENERATOR CONTROL UNIT	发电机控制组件	AR	SV
Z010H0005119	4054	CIDS DIRECTOR	客舱内话数据系统	AR	
740120C	5218	GENERATOR CONTROL UNIT	发电机控制组件	AR	SV
49-170-11	49-170BA1	SL/FL. CONTROL COMPUT.	襟缝翼控制计算机	AR	SV
3945128218	ELACVB016	ELEVATOR AILERON COMPUTE	升降舵副翼计算机	AR	
Z010H0005118	2496	CIDS DIRECTOR	客舱内话数据系统	AR	
3945128218	ELACVB017	ELEVATOR AILERON COMPUTE	升降舵副翼计算机	AR	
49-170-11	49-170BA1	SL/FL. CONTROL COMPUT.	襟缝翼控制计算机	AR	SV
965-1676-003	EMK5-3718	GPWC, GROUND PROXIMITY WA	近地警告计算机	AR	SV
9022-15702-11	9931827	CONTROLLER, PRESS.	压力控制器	AR	
9022-15702-11	9958615	CONTROLLER, PRESS.	压力控制器	AR	
9615325070	3489	DISPLAY MANAGEMENT COMPUT	显示管理计算机	AR	
746923E	2380	EGIU	发电接口组件	AR	
350E053021818	0E0007808	FLIGHT WARNING COMPUTER	飞行警告计算机	AR	SV
775D0000-01	2846	CONTROLLER, ZONE TEMP.	区域温度控制器	AR	
350E5500202	0E5005453	SDAC	数据转换器	AR	
822-0330-020	262	HF/COMM. TRANSCEIVER	高频收发机	AR	

822-1338-021	4J26L	ATC TRANSPONDER	应答机	AR	
350E053021818	0E0007183	FLIGHT WARNING COMPUTER	飞行警告计算机	AR	SV
9615325070	5165	DISPLAY MANAGEMENT COMPUT	显示管理计算机	AR	
350E5500202	0E5007253	SDAC	数据转换器	AR	
822-0330-020	131057	HF/COMM. TRANSCEIVER	高频收发机	AR	
822-1047-030	12319	VHF/COMM. TRANSCEIVER	甚高频收发机	AR	
B401ACM0507	1317	CFDIU	集中故障显示接口	AR	
822-1338-021	1PYCT	ATC TRANSPONDER	应答机	AR	
AMU2790CB06	1087	AUDIO MANAGEMENT UNIT	音频管理组件	AR	
465020-03030318	3848	ADIRU	大气数据惯性基准	AR	
B397BAM0624	Q00140023	FAC	飞行增稳计算机	AR	SV
B372BAM0515	Q00136013	SPOILER ELEVATOR COMPUTE	扰流板升降舵计算	BC	SV
822-0329-020	122675	DME INTERROGATOR	测距机	SV	
30042-0000-0501	2436	CONTROL UNIT-LEVEL SENSIN	燃油平面感应控制	AR	
822-1047-030	12518	VHF/COMM. TRANSCEIVER	甚高频收发机	AR	
822-1047-030	160RMV	VHF/COMM. TRANSCEIVER	甚高频收发机	AR	
2243800-364	RA06452	WIRELESS QUICK ACCESS REC	快速存取记录器	AR	SV
3957985114	Q05720012	ENGINE INTERFACE UNIT	发动机接口组件	AR	
115370-1016	2302	FLT CTL DATA CONCENTRATOR	飞行控制数据集中	AR	SV
822-0297-020	119293	VOR RECEIVER	接收机	AR	SV
B372BAM0515	Q00136013	SPOILER ELEVATOR COMPUTE	扰流板升降舵计算	BC	SV
465020-03030318	1458	ADIRU	大气数据惯性基准	AR	
C13043AA06	C13042010	FLIGHT MANAGEMENT GUID CO	飞行管理引导计算	AR	
465020-03030318	3028	ADIRU	大气数据惯性基准	AR	
822-0329-020	17320L	DME INTERROGATOR	测距机	SV	
9615325070	9.98E+11	DISPLAY MANAGEMENT COMPUT	显示管理计算机	AR	
C13043AA06	C13043032	FLIGHT MANAGEMENT GUID CO	飞行管理引导计算	AR	
B372BAM0515	Q00136013	SPOILER ELEVATOR COMPUTE	扰流板升降舵计算	AR	SV
B397BAM0624	Q00140013	FLIGHT AUGMENTATION COMPU	飞行增稳计算机	AR	SV
622-5132-622	7532	WEATHER RADAR TRANSCEIVER	收发机	AR	
30042-0000-0501	1946	CONTROL UNIT-LEVEL SENSIN	油位传感控制组件	AR	
822-0299-020	134361	ADF RECEIVER	ADF接收机	AR	SV
241-246-022-004	490	ENG VIB MONITORING UNIT	发动机振动监控组	AR	
RAI2800M0706	5493	SMOKE DETECTION CONTROL U	烟雾探测控制组件	AR	SV
822-0297-020	113153	VOR RECEIVER	接收机	AR	SV
115370-1016	5491	FLT CTL DATA CONCENTRATOR	飞行控制数据集中	AR	SV
3957985114	2654	ENGINE INTERFACE UNIT	发动机接口组件	AR	
822-1293-332	149537	TCAS II COMPUTER	空中交通警告防撞	AR	
9599-607-14942	14942-096	RADIO ALTIMETER TRANSCEIV	无线电高度表收发	AR	SV
SIC5059-13-20	FE001325	COMPUTER - FCMS	油量指示计算机	AR	
746923E	2386	EGIU	发动机接口组件	AR	
740121B	1282	GROUND POWER CONTROL UNIT	地面电源控制组件	AR	
785002-9	785002IN4	BLEED MONITORING COMPUTE	引气放气监控计算	BC	SV
6664287-0	2953	WINDOW HEAT COMPUTER	风挡加温计算机	AR	
6664287-0	4284	WINDOW HEAT COMPUTER	风挡加温计算机	AR	
600611-00-601	20587	CARGO HEAT CONTROLLER	货仓加温控制器	AR	
759D0000-02	1229	PACK CONTROLLER	空调控制器	AR	
785-002-8	3126	BLEED MONITORING COMPUTE	引气放气监控计算	AR	
759D0000-02	3281	PACK CONTROLLER	空调控制器	AR	
7304-01-02	7822	FIRE DETECTION UNIT	火警指示组件	AR	
1663214301	B5057	PROBES HEAT COMPUTER	探头加温计算机	AR	SV

7304-01-02	8316	FIRE DETECTION UNIT	火警指示组件	AR	
321200M02	AK10524	SPD. BRK. CTL. TRANSDUCER UN	速度刹车控制传感	AR	SV
47215920BB00	4.72E+11	PROBES HEAT COMPUTER	探头加温计算机	AR	SV
1663214301	B6562	PROBES HEAT COMPUTER	探头加温计算机	AR	SV
BC2065C	2245	SELCAL CODE SELECTION PAN	选择面板	AR	
980-6022-001	CVR120-0	COCKPIT VOICE RECORDER	驾驶舱语音记录仪	AR	SV
980-4700-042	SSFDR-190	FLIGHT DATA RECORDER	飞行数据记录仪	AR	SV
31077-111	9503	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-211	9500	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	10223	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	9504	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	9501	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	18918	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	9507	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	42182	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	9502	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	9499	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
4236534	76072	RUNWAY RURN-OFF LIGHT	转弯灯	AR	
4236534	75872	RUNWAY RURN-OFF LIGHT	转弯灯	AR	
8000282Y00	201761	TAXI LIGHT	滑行灯	AR	
P99C38-601	20012	FUEL PUMP - TANK	燃油泵	AR	
P99C38-601	20702	FUEL PUMP - TANK	燃油泵	AR	
P99C38-601	20701	FUEL PUMP - TANK	燃油泵	AR	
P99C38-601	20671	FUEL PUMP - TANK	燃油泵	AR	
P99C38-605	22100	FUEL PUMP - TANK	燃油泵	AR	
P99C38-601	20881	FUEL PUMP - TANK	燃油泵	AR	
QA05561	RH33555	FILTER HYD. LP	低压油滤组件	AR	
TM113-1	2875	TRANSDUC. /SWITCH-TEMP	温度传感电门	AR	
QA05561	RH33550	FILTER HYD. LP	低压油滤组件	AR	
TM113-1	2784	TRANSDUC. /SWITCH-TEMP	温度传感电门	AR	
QA05604	RH21157	FILTER HYD. LP	低压油滤组件	AR	
TM113-1	2862	TRANSDUC. /SWITCH-TEMP	温度传感电门	AR	
70200	4512	VALVE	活门	AR	
693335	MX622858	MOTOR PUMP	电动泵	AR	SV
1158000-21	FR248BB	REFUEL VALVE	加油活门	AR	SV
1158000-21	FR262BB	REFUEL VALVE	加油活门	AR	SV
1158000/21	FR104BB	REFUEL VALVE	加油活门	AR	
HTE190001-2	M255GB29	TWIN MOTOR ACTUATOR	作动器	AR	SV
693335	MX613229	MOTOR PUMP	电动泵	AR	SV
31075-840	4451	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
31075-840	5831	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
31075-840	8414	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
31075-840	14096	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
QA07739-01	RH2-2665	RSVR PRESS UNIT	油箱增压组件	AR	
C51LM0020	2680	VALVE RESERVOZER FILL	活门	AR	
3022016-000	G0020321	RELIEF VALVE	释压活门	AR	
QA05877	RH2-3479	VALVE RESTRICT. BLEED	活门	AR	
QA05593	RH14678	FILTER HYD. HP	高压油滤组件	AR	
S4-3500711	1405	GROUND SERVICE MANIFO	地面渗漏检测总管	AR	
HTE200002-1	M403GB49	FUEL TRANSFER VALVE ACTUA	作动器	AR	SV
HTE200002-1	M402GB49	FUEL TRANSFER VALVE ACTUA	作动器	AR	SV

HTE200002-1	49155246	FUEL TRANSFER VALVE ACTUA	作动器	AR	SV
HTE200002-1	M428GB299	FUEL TRANSFER VALVE ACTUA	作动器	AR	SV
HTE200002-1	M409GB499	FUEL TRANSFER VALVE ACTUA	作动器	AR	SV
C12CB0010	1213	PUMP, FUEL	油泵	AR	
HTE190001-2	M339GB499	TWIN MOTOR ACTUATOR	作动器	AR	SV
HTE190001-2	M344GB499	TWIN MOTOR ACTUATOR	作动器	AR	SV
89513/38E93-6	11759	WING ANTI-ICE CONTROL VAL	大翼防冰活门	BC	
3214-54-10	4225	EMERG. POWER SUPPLY	应急电源供给组件	AR	
3214-54-10	007701	EMERG. POWER SUPPLY	应急电源供给组件	AR	
3214-54-10	1447	EMERG. POWER SUPPLY	应急电源供给组件	AR	
3214-54-10	3497	EMERG. POWER SUPPLY	应急电源供给组件	AR	
341E030000	03638	SOLENOID THERMOSTAT	电磁阀	AR	SV
341E030000	05019	SOLENOID THERMOSTAT	电磁阀	AR	SV
342B050000	16657	TEMP. CONTROL THERMOSTAT	温度控制热电偶	AR	SV
342B050000	01954	TEMP. CONTROL THERMOSTAT	温度控制热电偶	AR	SV
DVE90-06	2335	LP SOLENOID SUPPLY VALVE	电磁阀	AR	
CMK80-01	2520	PRESSURE SWITCH	压力电门	AR	
QA05797	RH12904	FILTER, HYD. HP	油滤	AR	
101809	9733200A	ALTITUDE SWITCH	高度电门	AR	
20700-300	1116	VALVE, FUEL	燃油活门	AR	
VD3920	3012436	FAN, EXTRACTION	风扇	AR	SV
S4-3500711	1378	GROUND SERVICE MANIFO	地面渗漏检测总管	AR	
A08000	544	LP FUEL SOV APU	作动器	AR	
11-851154-6	03054	PRECOOLER EXCHANGER	预冷器	AR	
11-851154-6	03571	PRECOOLER EXCHANGER	预冷器	AR	
769106A	CWDD-DH1	AGCM	RAT地面检测模块	AR	
34100005-1	65413D1	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1149TJ	ENGINE FIREEXTINGUISHER I	爆炸帽	AR	SV
472088-1/B	40453EL	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	
446158	12-130806	ENGINE FIREEXTINGUISHER I	爆炸帽	AR	
34100005-1	62693D1	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	SV
30903886	0127NM	ENGINE FIREEXTINGUISHER I	爆炸帽	AR	SV
34100005-1	88092D1	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1627RK	ENGINE FIREEXTINGUISHER I	爆炸帽	AR	SV
33600005-3	93186D1	APU FIREEXTINGUISHER BOT	APU 灭火瓶	AR	SV
30903827	1351UE	FIREEXTINGUISHER BOTTLE I	爆炸帽	AR	SV
682007004	UEDH37198	RAT CONTROL PANEL	RAT控制面板	AR	
114160005	HAI0572	JACK EJECTION	弹出作动筒	AR	
680203037A	328	RAT-RAM AIR TURBINE	冲压空气涡轮	AR	SV
933260	F9818986	PUMP	泵	AR	
195PN01Y01	1374	RUDDER TRIM INDICATOR	方向舵配平指示	AR	SV
27-457	10520	RUDDER TRIM CONTROL SWITC	方向舵配平控制电	AR	
K217ABM11	1158	FLIGHT CONTROL UNIT	飞行控制组件	AR	SV
6-1404-0000-4	990085	HYDRAULIK HAND PUMP	手摇泵	AR	SV
6-1404-0000-4	990118	HYDRAULIK HAND PUMP	手摇泵	AR	SV
S4-3500712	3777	GROUND SERVICE MANIFO	地面渗漏检测总管	AR	
70200	4549	VALVE, 2/2WAY	释压阀	AR	
114161003	DRG/8283	MODULE-JACK CONTROL	作动筒控制组件	AR	
3888394-121205	206	ELECTRONIC CONTR. BOX	电子控制盒	AR	
Z220H0002110	220H00014	CONTROL UNIT	控制组件	AR	
Z220H0002110	2520	CONTROL UNIT	控制组件	AR	

Z212H0001110	3570	CONTROL UNIT	控制组件	AR	
14404-010	99020608	VACUUM SYSTEM CONTROL	真空泵控制系统	AR	
31073-110	3828	AILERON SERVOCONTROL	副翼伺服控制组件	AR	SV
31073-110	8288	AILERON SERVOCONTROL	副翼伺服控制组件	AR	SV
31073-110	4532	AILERON SERVOCONTROL	副翼伺服控制组件	AR	SV
94830-10	532	VIBRAT. ISOLAT. FWD R	APU安装座	AR	SV
2LA005469-00	350448	WARNING LIGHT PANEL	警告灯	AR	
2LA005469-00	1038947	WARNING LIGHT PANEL	警告灯	AR	
2LA005469-00	6833	WARNING LIGHT PANEL	警告灯	AR	
2LA005469-00	6832	WARNING LIGHT PANEL	警告灯	AR	
2LA007307-00	3158	CABIN OVERPRESSURE INDIC	客舱超压指示灯	AR	SV
2LA007307-00	3159	CABIN OVERPRESSURE INDIC	客舱超压指示灯	AR	SV
2LA007307-00	3157	CABIN OVERPRESSURE INDIC	客舱超压指示灯	AR	SV
2LA007307-00	3160	CABIN OVERPRESSURE INDIC	客舱超压指示灯	AR	SV
AR4709-3	N-C3537	COCKPIT SYSTEM CONTROLLE	驾驶舱控制系统	AR	
8ES455012-00	360413	POWER SUPPLY	电源供给组件	AR	SV
8ES005304-00	4063758	POWER SUPPLY	电源供给组件	AR	SV
8ES403703-02	2310643	RWD FACING NAV LIGHT XFMR	导航灯变压器	AR	
1X2005012-00	3289	LIGHT-CARGO LOADING AREA	装载区域货仓灯	AR	
1X2005012-00	3288	LIGHT-CARGO LOADING AREA	装载区域货仓灯	AR	
2LA005303-05	2322384	TAIL STROBE LIGHT	尾部频闪灯	BC	SV
9700-C1A-F23AN	ST51950	PORTABLE OXYGEN CYLINDER	氧气瓶	AR	SV
9700-C1A-F23AN	671247	PORTABLE OXYGEN CYLINDER	氧气瓶	AR	SV
9700-C1A-F23AN	P15083558	PORTABLE OXYGEN CYLINDER	氧气瓶	AR	SV
9700-C1A-F23AN	ST41611	PORTABLE OXYGEN CYLINDER	氧气瓶	AR	SV
3552AAADAACXCD	P09090789	PORTABLE OXYGEN CYLINDER	氧气瓶	AR	
9700-C1A-F23AN	P12080436	PORTABLE OXYGEN CYLINDER	氧气瓶	AR	SV
600615-00-503	20721	CONTROLLER, CARGO VENT	货仓通风控制器	AR	SV
9599-607-12352	7290	RADIO ALTIMETER ANTENNA	雷达高度天线	AR	SV
9599-607-12352	16650	RADIO ALTIMETER ANTENNA	雷达高度天线	AR	SV
9599-607-12352	11946	RADIO ALTIMETER ANTENNA	雷达高度天线	AR	SV
9599-607-12352	10257	RADIO ALTIMETER ANTENNA	雷达高度天线	AR	SV
622-8973-104	47N75C	TCAS DIRECTIONAL ANTENNA	TCAS 天线	AR	
622-8973-104	47N75F	TCAS DIRECTIONAL ANTENNA	TCAS 天线	AR	
0861ED	66	ANGLE OF ATTACK SENSOR	迎角传感器	BC	SV
87232329V03	3542	AIR DATA MODULE	大气数据模块	AR	SV
87232329V03	3544	AIR DATA MODULE	大气数据模块	AR	SV
87232329V03	3654	AIR DATA MODULE	大气数据模块	AR	SV
87232329V03	3550	AIR DATA MODULE	大气数据模块	AR	SV
87232329V03	3547	AIR DATA MODULE	大气数据模块	AR	SV
87232329V03	3423	AIR DATA MODULE	大气数据模块	AR	SV
3107-89	2041	MARKER ANTENNA	指点信标天线	AR	
2407-89-03	5405	ATC/DME. ANTENNA	ATC/DME天线	AR	
2407-89-03	5765	ATC/DME. ANTENNA	ATC/DME天线	AR	
64882-206-1	2467	BRAKE PRESSURE INDICATOR	刹车压力指示	AR	SV
3106-89	1517	LOCALIZER ANTENNA	LOC天线	AR	
3105-89	1498	GLIDE ANTENNA	下滑到天线	AR	
622-5137-601	6996	WEATHER RADAR ANTENNA	天气雷达天线	AR	SV
622-5136-201	1FG6W	WEATHER RADAR DUAL ANT MC	气象雷达收发基座	AR	
RDAX1301-2D	101067	MAIN MULTIPLEXER	主多路器	AR	
210TS07Y01	2053	LANDING GEAR CONTROL LEVI	起落架控制手柄	AR	SV

DLSA100	174	DATA LOADING SELECTOR	数据下载选择器	AR	
763A0000-03	11641	TEMPERATURE SENSOR	温度传感器	AR	SV
767A0000-04	02689	TEMPERATURE SENSOR	温度传感器	AR	
763A0000-03	19428	TEMPERATURE SENSOR	温度传感器	AR	SV
767A0000-04	02683	TEMPERATURE SENSOR	温度传感器	AR	
RDAV9809-01	201104	DU-DISPLAY UNIT	LED显示器	AR	
RDAV9809-01	201922	DU-DISPLAY UNIT	LED显示器	AR	
RDAV9809-01	200147	DU-DISPLAY UNIT	LED显示器	AR	
RDAV9809-01	135096	DU-DISPLAY UNIT	LED显示器	AR	
RDAV9809-01	120284	DU-DISPLAY UNIT	LED显示器	AR	
RDAV9809-01	201476	DU-DISPLAY UNIT	LED显示器	AR	
RDAV9809-01	131125	DU-DISPLAY UNIT	LED显示器	AR	
RDAV9809-01	200119	DU-DISPLAY UNIT	LED显示器	AR	
RDAV9809-01	200130	DU-DISPLAY UNIT	LED显示器	AR	
748A0000-08	02434	VALVE ANTI ICING	防冰活门	AR	
747A0000-03	02428	WATER EXTRACTOR	水分离器	AR	
747A0000-03	02372	WATER EXTRACTOR	水分离器	AR	
758A0000-02	02511	BYPASS VALVE	旁通活门	AR	SV
RDAV9810-01	150033	DU-DISPLAY UNIT	LED显示器	AR	
RDAV9810-01	200047	DU-DISPLAY UNIT	LED显示器	AR	
RDAV9810-01	201651	DU-DISPLAY UNIT	LED显示器	AR	
RDAV9810-01	110664	DU-DISPLAY UNIT	LED显示器	AR	
RDAV9810-01	C109416	DU-DISPLAY UNIT	LED显示器	AR	
RDAV9810-01	201567	DU-DISPLAY UNIT	LED显示器	AR	
RDAV9810-01	120221	DU-DISPLAY UNIT	LED显示器	AR	
RDAV9810-01	120183	DU-DISPLAY UNIT	LED显示器	AR	
RDAV9810-01	150131	DU-DISPLAY UNIT	LED显示器	AR	
RDAX7095-01	170094	PES REPRO DUCER	旅客娱乐系统	AR	
C17065AA	512-29827	GPS ANTENNA	GPS 天线	AR	
C17065AA	12830	GPS ANTENNA	GPS 天线	AR	
1X2005097-00	3113490	LOGO LIGHT	LOGO灯	AR	SV
1X2005097-00	3172526	LOGO LIGHT	LOGO灯	AR	SV
Z111H0033151	08140	ATTENDANT INDICATION PANI	乘务员指示面板	AR	
Z111H0033151	08398	ATTENDANT INDICATION PANI	乘务员指示面板	AR	
642-3002-503	5922001	FAN COWL	风扇整流罩	AR	
642-3001-505	5921001	FAN COWL	风扇整流罩	AR	
642-3002-503	6857001	FAN COWL	风扇整流罩	AR	
642-3001-505	5832001	FAN COWL	风扇整流罩	AR	
Z111H0033151	08397	ATTENDANT INDICATION PANI	乘务员指示面板	AR	
642-1000-501	6197001	INLET	进气道	AR	
642-1000-505	12147001	INLET	进气道	AR	
642-4001-501	11423001	EXHAUST CENTRE BODY	尾喷	AR	SV
642-4001-501	2715001	EXHAUST CENTRE BODY	尾喷	AR	SV
642-3802-517	2689001	THRUST REVERSER	反推	AR	
642-3801-515	2688001	THRUST REVERSER	反推	AR	
642-3802-517	2683001	THRUST REVERSER	反推	AR	
642-3802-515	2682001	THRUST REVERSER	反推	AR	
238-0451-523	2714001	CENTER BODY	尾喷中心体	AR	
238-0451-523	2624001	CENTER BODY	尾喷中心体	AR	
Z030H0005110	35513	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35528	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	

Z040H0006110	08218	DEU, DECODER ENCODER UNIT	B型解码/编码组件	AR	
Z040H0006110	08217	DEU, DECODER ENCODER UNIT	B型解码/编码组件	AR	
Z040H0006110	08219	DEU, DECODER ENCODER UNIT	B型解码/编码组件	AR	
830A0000-04	17452	ACTUATOR B-SLAT	缝翼作动筒	AR	
830A0000-04	17458	ACTUATOR B-SLAT	缝翼作动筒	AR	
829B0000-01	04514	ACTUATOR A-SLAT	缝翼作动筒	AR	
830A0000-04	17461	ACTUATOR B-SLAT	缝翼作动筒	AR	
830A0000-04	17456	ACTUATOR B-SLAT	缝翼作动筒	AR	
829B0000-01	04516	ACTUATOR A-SLAT	缝翼作动筒	AR	
830A0000-04	17463	ACTUATOR B-SLAT	缝翼作动筒	AR	
830A0000-04	17464	ACTUATOR B-SLAT	缝翼作动筒	AR	
830A0000-04	17462	ACTUATOR B-SLAT	缝翼作动筒	AR	
830A0000-04	17454	ACTUATOR B-SLAT	缝翼作动筒	AR	
830A0000-04	17459	ACTUATOR B-SLAT	缝翼作动筒	AR	
830A0000-04	17460	ACTUATOR B-SLAT	缝翼作动筒	AR	
830A0000-04	17465	ACTUATOR B-SLAT	缝翼作动筒	AR	
830A0000-04	17466	ACTUATOR B-SLAT	缝翼作动筒	AR	
93-A150-20	01387	CVR MICROPHONE AMPLIFIER	麦克风放大器	AR	
8410B2-4-90	8410B2-34	CAMERA-COCKPIT DOOR	驾驶舱门摄像头	AR	SV
8410B2-4-90	8410B2-34	CAMERA-COCKPIT DOOR	驾驶舱门摄像头	AR	SV
D201094	024126	STATIC PROB	静压探头	AR	
D201094	024091	STATIC PROB	静压探头	AR	
D201094	024108	STATIC PROB	静压探头	AR	
D201094	024105	STATIC PROB	静压探头	AR	
D201094	024095	STATIC PROB	静压探头	AR	
D201094	024129	STATIC PROB	静压探头	AR	
822-0987-003	163612	HF-ANTENNA COUPLER	高频天线耦合器	AR	SV
0212KTU06	992795	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU16	993483	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU04	993579	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU09	993544	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU08	992991	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU07	992706	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU03	993422	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU05	993399	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU04	985410	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU05	993398	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU14	988366	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU14	988356	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU14	988358	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU14	988576	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU15	988038	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
8ES005045-00	1864	POWER SUPPLY	电源供给组件	AR	SV
15800-358	1146	RINSE VALVE	冲洗活门	AR	SV
15800-358	2477	RINSE VALVE	冲洗活门	AR	SV
15800-358	019	RINSE VALVE	冲洗活门	AR	SV
796-815-02-03	1215	REFUEL PRESELECTOR	流量预选器	AR	SV
Z130H0586110	01668	FAP	乘务员面板	AR	
8ES005309-00	3928	POWER SUPPLY UNIT	电源供给组件	AR	
1312B0000-01	1312B00L	VALVE BY-PASS	旁通活门	AR	
HTE370001	M0334VNR	HP GROUND CONNECTOR	高压引起地面接头	AR	

8ES005309-00	299651	POWER SUPPLY UNIT	电源供给组件	AR	
465010-0300-0300	0300	ADIRS-CDU	显示控制组件	AR	
2407-89-03	5763	ATC/DME. ANTENNA	测距天线	AR	
2439-89-03	243989-40	ATC/DME. ANTENNA	测距天线	AR	
2407-89-03	5973	ATC/DME. ANTENNA	测距天线	AR	
DK120	AT165244	DFDR ULB BATTERY	水下信标电池	AR	SV
ELP-362D	72821	CVR ULB BATTERY	水下信标电池	AR	
830A0000-04	17457	ACTUATOR B-SLAT	缝翼作动筒	AR	
830A0000-04	17453	ACTUATOR B-SLAT	缝翼作动筒	AR	
830A0000-04	17455	ACTUATOR B-SLAT	缝翼作动筒	AR	
830A0000-04	17451	ACTUATOR B-SLAT	缝翼作动筒	AR	
829B0000-01	04515	ACTUATOR A-SLAT	缝翼作动筒	AR	
829B0000-01	04513	ACTUATOR A-SLAT	缝翼作动筒	AR	
330TS08Y	849	FIRE PANEL ENGINE APU	火警面板	AR	
810A0000-05	3767	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	SV
811A0000-04	3428	CYLINDER	作动筒	AR	
810A0000-05	8483	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	SV
811A0000-04	9031	CYLINDER	作动筒	AR	
D05000	6355	VALVE-FILL AND DRAIN	排放活门	AR	SV
L83A13-614	24820	VALVE-DRAIN, WATER	排水阀	AR	
L83A13-614	24822	VALVE-DRAIN, WATER	排水阀	AR	
FE240-004	1762	DOOR DAMPER CYLINDER	门阻尼器	AR	SV
FE240-004	1763	DOOR DAMPER CYLINDER	门阻尼器	AR	SV
780A0000-02	1353	FLAP/SLAT COMMAND SENSOR	襟缝翼传感器	AR	
5906734	12390	3 HOLE CURRENT TRANSFORMER	电流互感器	AR	
5906734	12388	3 HOLE CURRENT TRANSFORMER	电流互感器	AR	
5906734	12389	3 HOLE CURRENT TRANSFORMER	电流互感器	AR	
5906734	12391	3 HOLE CURRENT TRANSFORMER	电流互感器	AR	
Z120H0048110	01326	CIDS AFT ATTND PNL	客舱内话数据系统	AR	
Z2D0003000100100	1926	RHEOSTAT	变阻器	AR	
14330-190	1002	FLUSH CONTROL UNIT	冲洗控制组件	AR	
14330-190	996	FLUSH CONTROL UNIT	冲洗控制组件	AR	
14330-190	899	FLUSH CONTROL UNIT	冲洗控制组件	AR	
640CC01Y1	9227	200A SINGLE POLE CONTACTOR	接触器	AR	
640CC01Y1	9298	200A SINGLE POLE CONTACTOR	接触器	AR	
630CC01Y1	7603	100A SINGLE POLE CONTACTOR	接触器	AR	
640CC01Y1	9315	200A SINGLE POLE CONTACTOR	接触器	AR	
640CC01Y1	9192	200A SINGLE POLE CONTACTOR	接触器	AR	
640CC01Y1	9208	200A SINGLE POLE CONTACTOR	接触器	AR	
630CC01Y1	7608	100A SINGLE POLE CONTACTOR	接触器	AR	
630CC01Y1	7685	100A SINGLE POLE CONTACTOR	接触器	AR	
630CC04A2Y00	17257	100A SINGLE POLE CONTACTOR	接触器	AR	
640CC01Y1	9209	200A SINGLE POLE CONTACTOR	接触器	AR	
630CC01Y1	7674	100A SINGLE POLE CONTACTOR	接触器	AR	
5906734	12393	3 HOLE CURRENT TRANSFORMER	电流互感器	AR	
Z2D0003000100000	5073	RHEOSTAT	变阻器	AR	
0727540	C132043	CAP-COUPLING, REFUEL	加放油口盖	AR	
FRH230003C	FROBABB	PRESSURE REDUCING VALVE	减压活门	AR	
564CA01Y1	11529	CONTACTOR	接触器	AR	
564CA02FY1	3819	60A THREE POLE CONTACTOR	接触器	AR	
564CA02FY1	3827	60A THREE POLE CONTACTOR	接触器	AR	

564CA01Y1	11392	CONTACTOR	接触器	AR	
564CA01Y1	11395	CONTACTOR	接触器	AR	
630CC01Y1	7675	100A SINGLE POLE CONTACTOR	接触器	AR	
564CA01Y1	11390	CONTACTOR	接触器	AR	
558CA01Y1	6952	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	6948	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	6949	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	6931	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	6934	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	6947	260A THREE POLE CONTACTOR	接触器	AR	
5906733	8546	6 HOLE CURRENT TRANSFORMER	电流互感器	AR	
5906733	8547	7 HOLE CURRENT TRANSFORMER	电流互感器	AR	
D05000	2223	VALVE-FILL AND DRAIN	排放活门	AR	SV
S4-3300520-01	2363	ACTUATOR	液压作动筒	AR	SV
S4-3300520-01	2395	ACTUATOR	液压作动筒	AR	SV
S4-3300520-01	2588	ACTUATOR	液压作动筒	AR	SV
S4-3300520-01	2289	ACTUATOR	液压作动筒	AR	SV
4279198	26138	MOTOR CONVERTER	雨刷马达	AR	SV
4279204	26135	MOTOR CONVERTER	雨刷马达	AR	SV
831A0000-05	04519	WING TIP BRAKE	翼尖刹车	AR	
831A0000-05	04520	WING TIP BRAKE	翼尖刹车	AR	
2LA005543-10	2107458	CAPTAIN FLOOD LIGHT UNIT	仪表板灯	AR	
2LA005541-10	1565700	FLOODLIGHT UNIT-CAPTAIN	仪表板灯	AR	
FE240-004	1684	DOOR DAMPER CYLINDER	门阻尼器	AR	SV
FE240-004	1689	DOOR DAMPER CYLINDER	门阻尼器	AR	SV
0212KTU16	993484	WING TANK PROBE, FQI	燃油油量组件	AR	
0212KTU08	992992	WING TANK PROBE, FQI	燃油油量组件	AR	
0212KTU03	993389	WING TANK PROBE, FQI	燃油油量组件	AR	
C5K	99011480	STANDBY COMPASS	备用磁罗盘	AR	
3025	2391	STATIC CONVERTER	静变流器	AR	
4020W35-3	2068	RAIN REPELLENT GAGE ASSY	防雨液组件	AR	
9028A0004-01	09266	POSITION PICK-OFF UNIT	不对称位置传感器	AR	
9028A0004-01	9028A00T	POSITION PICK-OFF UNIT	不对称位置传感器	AR	
521A0200-01	03954	ADAPTER PPU-ASSY	适配器组件	AR	
4-60000H882-00	3.68E+11	DRAINMAST	排水桅杆	AR	SV
AR4714-7	H-A4582	ELECTRICAL RELEASE STRIKE	电释放机构	AR	SV
831A0000-05	04521	WING TIP BRAKE	翼尖刹车	AR	
C93R38-606	21247	FUEL PUMP CANISTER	油泵槽缸	AR	
C93R38-606	21213	FUEL PUMP CANISTER	油泵槽缸	AR	
1B1000-1GS	M8957247	STATIC INVERTER	静逆交器	AR	SV
796-809-6A	2731	FUEL CADENSICON	电容式密度计	AR	SV
827A0000-02	V1079	GEARBOX	T型齿轮箱	AR	
342300M01	5640	TRANSDUCER UNIT	脚踏位置传感器	AR	
6740E010000	1616	OVERPRESSURE VALVE	过压活门	AR	
6740E010000	563	OVERPRESSURE VALVE	过压活门	AR	
6730C010000	00653	FAN AIR VALVE	风扇空气活门	AR	
6730C010000	02830	FAN AIR VALVE	风扇空气活门	AR	
810A0000-05	05054	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	SV
811A0000-04	05054	CYLINDER	液压作动筒	AR	
342300M01	5639	TRANSDUCER UNIT	脚踏位置传感器	AR	
796-809-6A	14918	FUEL CADENSICON	电容式密度计	AR	SV

L83A13-617	20598	LEAK-MONITOR	渗漏检测器	AR	
93-A055-66	52309	AMBIENT MICROPHONE	环境麦克风	AR	
342300M01	8906	TRANSDUCER UNIT	传感器	AR	
342300M01	10701	TRANSDUCER UNIT	传感器	AR	
748A0000-08	02435	VALVE ANTI ICING	防冰活门	AR	
828A0000-02	V4238	BEVEL GEARBOX	齿轮箱	AR	
828A0000-02	V4237	BEVEL GEARBOX	齿轮箱	AR	
828A0000-02	V4236	BEVEL GEARBOX	齿轮箱	AR	
828A0000-02	V4239	BEVEL GEARBOX	齿轮箱	AR	
521A0200-01	03955	ADAPTER PPU-ASSY	适配器组件	AR	
9028A0004-01	09265	POS. PICK OFF UNIT	位置传感器	AR	
831A0000-05	04518	WING TIP BRAKE	翼尖刹车	AR	
2LA005542-50	163	LIGHT-MAIN INSTRUMENT	仪表板灯	AR	
972C10-1	A98026	VALVE-SHUTTLE	关断活门	AR	
4550-01-482/190C-6	4257	FIRE/OVHT DETECTOR	火警-高温探测器	AR	
4550-01-482/190C-6	4225	FIRE/OVHT DETECTOR	火警-高温探测器	AR	
TA01Z6005	3441	AUTOTRANSFORMER	自耦变压器	AR	
790A0000-02	V3291	BEVEL GEARBOX	齿轮箱	AR	
72CF8944-00	1220	FLEXIBLE CONTROL	挠性控制索	AR	
72CF8945-00	1246	FLEXIBLE CONTROL	挠性控制索	AR	
72CF8944-00	12025	FLEXIBLE CONTROL	挠性控制索	AR	
72CF8945-00	1101	FLEXIBLE CONTROL	挠性控制索	AR	
SC4700-5	5175	YAW DAMPER SERVOACTUATOR	偏航阻尼伺服作动	AR	SV
SC4700-5	13246	YAW DAMPER SERVOACTUATOR	偏航阻尼伺服作动	AR	SV
0212KTU11	993589	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU11	993588	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU17	993243	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU17	993242	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU09	993543	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
D5757032200200	A9033	STRU ASSY	支架组件	AR	SV
3540000-1	FRTR4334	TEMPERATURE SENSOR	温度传感器	AR	
FE171-000	FR1153	CABLE TENSION REGULATOR	钢索张力调节器	AR	
864-001	0724	LIGHTED VISUAL ICING IND	照明结冰指示器	AR	
72303102-4	3372	WING TIP NAVIGATION LIGHT	翼尖航行灯	AR	
520913	G1410438	CONST. SPEED MOTOR/GENERAT	恒速马达发电机	AR	SV
D9550001801700	FR2070	SIDE STICK ASSY F/O	侧杆组件	AR	
D9550001901700	FR2070	SIDE STICK ASSY CAPT	侧杆组件	AR	
1554A9900-01	00309	HP-MANIFOLD (BLUE)	高压总管	AR	
BHC1060-04	3571	VALVE-PRIORITY	优先活门	AR	SV
CZ9284E	HEK73798	TRANSDUCER-PRESSURE	压力传感器	AR	SV
450-2-3100-00	57781	SWITCH-PRESSURE	压力电门	AR	SV
50-2-3100-00	28544	SWITCH-PRESSURE	压力电门	AR	SV
114151004	CWDD-DH19	VALVE-HIGH PRESSURE RELIEF	释压活门	AR	
71190400010NCOA	50828009	VALVE-SAMPLING	取样活门	AR	SV
QA06304	RG11-220	FILTER	油滤	AR	
ZCV64-10	8050669	CHECK VALVE	0	AR	
9107A00004-01	452	SWITCH-PERSSURE	压力电门	AR	
3530000-1	FRTR3431	SENSOR-FUEL LEVEL	油面传感器	AR	
3530000-1	FRTR3431	SENSOR-FUEL LEVEL	油面传感器	AR	
3530000-1	FRTR3431	SENSOR-FUEL LEVEL	油面传感器	AR	
3530000-1	FRTR3430	SENSOR-FUEL LEVEL	油面传感器	AR	

801B0500-01	V2141	SHAFT ASSY	杆组件	AR	
801B4700-01	V2155	SHAFT ASSY	杆组件	AR	
833B1100-01	V2170	SHAFT ASSY	杆组件	AR	
833B1300-01	V2167	SHAFT ASSY	杆组件	AR	
801B4700-01	V2156	SHAFT ASSY	杆组件	AR	
833A0600-01	V2185	SHAFT ASSY	杆组件	AR	
833A2000-01	V2177	SHAFT ASSY	杆组件	AR	
801A0300-01	V2185	SHAFT ASSY	杆组件	AR	
801B1300-01	V2138	SHAFT ASSY	杆组件	AR	
801B0600-01	V2139	SHAFT ASSY	杆组件	AR	
833A2200-01	V1101	SHAFT ASSY	杆组件	AR	
801A0300-01	V2186	SHAFT ASSY	杆组件	AR	
801B4800-01	V2148	SHAFT ASSY	杆组件	AR	
833B1200-01	V2172	SHAFT ASSY	杆组件	AR	
833B1000-01	V2200	SHAFT ASSY	杆组件	AR	
801B1400-01	V2156	SHAFT ASSY	杆组件	AR	
801B0700-01	V2145	SHAFT ASSY	杆组件	AR	
801B0700-01	V2163	SHAFT ASSY	杆组件	AR	
833A1500-01	V2174	SHAFT ASSY	杆组件	AR	
833B0200-01	V2167	SHAFT ASSY	杆组件	AR	
833A2400-02	V2834	SHAFT ASSY	杆组件	AR	
833B0300-01	V2166	SHAFT ASSY	杆组件	AR	
833B0800-01	V2167	SHAFT ASSY	杆组件	AR	
833B1000-01	V2201	SHAFT ASSY	杆组件	AR	
833A0700-01	V2172	SHAFT ASSY	杆组件	AR	
833B0900-01	V2206	SHAFT ASSY	杆组件	AR	
801B0600-01	V2156	SHAFT ASSY	杆组件	AR	
833A0600-01	V2186	SHAFT ASSY	杆组件	AR	
801B4400-01	V2179	SHAFT ASSY	杆组件	AR	
801A0800-01	V2144	SHAFT ASSY	杆组件	AR	
801B0500-01	V2160	SHAFT ASSY	杆组件	AR	
801C1700-02	V23908	SHAFT ASSY	杆组件	AR	
833A1900-01	V2174	SHAFT ASSY	杆组件	AR	
833A1800-01	V2171	SHAFT ASSY	杆组件	AR	
833A1800-01	V2172	SHAFT ASSY	杆组件	AR	
833A1600-01	V2171	SHAFT ASSY	杆组件	AR	
833B0900-01	V2205	SHAFT ASSY	杆组件	AR	
801B1600-01	V2144	SHAFT ASSY	杆组件	AR	
833A2400-02	V2833	SHAFT ASSY	杆组件	AR	
801B1300-01	V2155	SHAFT ASSY	杆组件	AR	
833B1300-01	V2166	SHAFT ASSY	杆组件	AR	
801B0400-01	V2140	SHAFT ASSY	杆组件	AR	
833B1200-01	V2173	SHAFT ASSY	杆组件	AR	
833A1900-01	V2173	SHAFT ASSY	杆组件	AR	
801B1400-01	V2138	SHAFT ASSY	杆组件	AR	
833A1700-01	V2171	SHAFT ASSY	杆组件	AR	
833B0800-01	V2168	SHAFT ASSY	杆组件	AR	
801B0400-01	V2141	SHAFT ASSY	杆组件	AR	
833A2000-01	V2176	SHAFT ASSY	杆组件	AR	
833A0700-01	V2171	SHAFT ASSY	杆组件	AR	
833A1700-01	V2170	SHAFT ASSY	杆组件	AR	

833A1600-01	V2170	SHAFT ASSY	杆组件	AR	
833B0300-01	V2167	SHAFT ASSY	杆组件	AR	
801B1200-01	V2153	SHAFT ASSY	杆组件	AR	
833B0400-01	V2169	SHAFT ASSY	杆组件	AR	
833A1500-01	V2173	SHAFT ASSY	杆组件	AR	
833B0200-01	V2166	SHAFT ASSY	杆组件	AR	
833B0400-01	V2170	SHAFT ASSY	杆组件	AR	
833A1400-01	V2167	SHAFT ASSY	杆组件	AR	
801A1500-01	V2150	SHAFT ASSY	杆组件	AR	
801C1900-02	V4323	STEADY BEARING ASSY	轴组件	AR	
801A1500-01	V2149	SHAFT ASSY	杆组件	AR	
801C1900-02	V4322	STEADY BEARING ASSY	轴组件	AR	
801B1600-01	V2161	SHAFT ASSY	杆组件	AR	
833B1100-01	V2169	SHAFT ASSY	杆组件	AR	
833A1400-01	V2168	SHAFT ASSY	杆组件	AR	
801A0800-01	V2143	SHAFT ASSY	杆组件	AR	
801B4800-01	V2147	SHAFT ASSY	杆组件	AR	
801B1200-01	V2136	SHAFT ASSY	杆组件	AR	
801C1900-02	V4434	STEADY BEARING ASSY	轴组件	AR	
801B4600-02	V2223	SHAFT ASSY	杆组件	AR	
801B4600-02	V2222	SHAFT ASSY	杆组件	AR	
801A0200-01	V2185	SHAFT ASSY	杆组件	AR	
801A0200-01	V2186	SHAFT ASSY	杆组件	AR	
D5757030501500	02518	STRU ASSY	支架组件	AR	
622-5134-064	2369	WEATHER RADAR RT DUAL MOI	气象雷达收发基座	AR	
0212KTU13	992954	WING TANK PROBE, FQI	燃油油量组件	AR	
3530000-1	FRTR32014	SENSOR-FUEL LEVEL	油面传感器	AR	
3530000-1	FRTR34307	SENSOR-FUEL LEVEL	油面传感器	AR	
L95F100-603	E95028	FUEL TK OVERPRESSURE PROT	燃油过压保护器	AR	
L95F100-603	31901	FUEL TK OVERPRESSURE PROT	燃油过压保护器	AR	
801C1700-02	V23712	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V24024	STEADY BEARING ASSY	轴承组件	AR	
833C2300-02	V2211	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V24023	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V23857	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V23709	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V23716	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V24017	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V23711	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V23702	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V24020	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V23715	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V23713	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V23856	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V24030	STEADY BEARING ASSY	轴承组件	AR	
833C2300-02	V2212	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V23720	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V23704	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V23703	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V24016	STEADY BEARING ASSY	轴承组件	AR	
801C1700-02	V23719	STEADY BEARING ASSY	轴承组件	AR	

833C5200-02	V2225	STEADY BEARING ASSY	轴承组件	AR	
833A2100-01	V2808	SHAFT ASSY	杆组件	AR	
833C5200-02	V2224	STEADY BEARING ASSY	轴承组件	AR	
801B4400-01	V2178	STEADY BEARING ASSY	轴承组件	AR	
22715-000-02	H3488C	NLG. DOOR ACTUATING CYLIND	前轮舱门作动筒	AR	
A25315-1	H2816	PARKING BRAKE VALVE	刹车活门	AR	
114083003	CWDDDH11	VENT VALVE, MLG	主起落架通气活门	AR	
1905A0000-01	1996	SAFETY VALVE	安全活门	AR	
QA05797	RH15968	FILTER, HYD. HP	油滤	AR	
A25316-101	H2560	SHUTTLE VALVE	关断活门	AR	
3108-89	1179	VOR. ANTENNA	VOR天线	AR	
114087006	CWDDDH66	DOOR BY-PASS VALVE, MLG	主起落架舱门旁通	AR	
D5757065001000000	TS-2413	FLAP	内襟翼	AR	
D5757100800000000	1934	FLAP	外襟翼	AR	
D5757100800100000	1934	FLAP	外襟翼	AR	
D5757065001100000	TS-2413	FLAP	内襟翼	AR	
D5746016800500	SA1863	SLAT	缝翼	AR	
D5746016800800	SA2072	SLAT	缝翼	AR	
D5746027800700	SA2070	SLAT	缝翼	AR	
D5746027800600	SA2070	SLAT	缝翼	AR	
D5746047800900	SA2070	SLAT	缝翼	AR	
D5746047800800	SA2070	SLAT	缝翼	AR	
D5746037800900	SA2070	SLAT	缝翼	AR	
D574605900900	SA2070	SLAT	缝翼	AR	
D574605900800	SA2070	SLAT	缝翼	AR	
D5754000000800Z	AP1086	AILERON	副翼	AR	
D5754000000900Z	AP1107	AILERON	副翼	AR	
D55471002000000002	TS-2446	RUDDER	方向舵	AR	
0212KTU13	992955	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU01	993407	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
3540000-1	FRTR4325	TEMPERATURE SENSOR	温度传感器	AR	
3530000-1	FRTR3429	SENSOR-FUEL LEVEL	油面传感器	AR	
3530000-1	FRTR3418	SENSOR-FUEL LEVEL	油面传感器	AR	
3540000-1	FRTR4327	TEMPERATURE SENSOR	温度传感器	AR	
201117017	CWDDDH60	UPLOCK, MLG	起落架上锁	AR	
201122008	CWDDDH13	DOOR UPLOCK, MLG	起落架上锁	AR	
201122008	CWDDDH83	DOOR UPLOCK, MLG	起落架上锁	AR	
201117018	CWDDDH62	UPLOCK, MLG	起落架上锁	AR	
114087006	DH-1427-	DOOR BY-PASS VALVE, MLG	主起落架舱门旁通	AR	
3540000-1	FRTR4333	TEMPERATURE SENSOR	温度传感器	AR	
3530000-1	FRTR3430	SENSOR-FUEL LEVEL	油面传感器	AR	
3530000-1	FRTR3430	SENSOR-FUEL LEVEL	油面传感器	AR	
L83A13-614	25187	VALVE-DRAIN, WATER	排水活门	AR	
9811839	FRTR193B	CHECK VALVE	单向活门	AR	
L83A13-610	37337	VALVE-DRAIN WATER	排水活门	AR	
A25461-104	H0875	AUTOMATIC SELECTOR	自动选择开关	AR	
114086001	CWDDDH70	CUT-OUT VALVE	关断活门	AR	
A25434006-3000	H0584	EMER. BRK. DUAL DISTR. VALV	应急活门	AR	
114122014	DH-4363-	DOOR ACTUATOR, MLG	起落架舱门作动筒	AR	SV
114122014	SA080653	DOOR ACTUATOR, MLG	起落架舱门作动筒	AR	SV
NP165331-1	19127H19	WINDSHIELD	风挡	AR	

HTE69000-1	20164PA	SWITCH-P	P电门	AR	SV
3530000-1	FRTR3430	SENSOR-FUEL LEVEL	油面传感器	AR	
3530000-1	FRTR3436	SENSOR-FUEL LEVEL	油面传感器	AR	
3530000-1	FRTR3431	SENSOR-FUEL LEVEL	油面传感器	AR	
3530000-1	FRTR3429	SENSOR-FUEL LEVEL	油面传感器	AR	
L83A13-614	25188	VALVE-DRAIN, WATER	排水活门	AR	
Z030H0005110	35524	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35506	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35520	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35510	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	31019	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35509	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35523	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35527	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35517	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35514	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35503	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35518	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35507	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35521	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35505	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	32367	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35519	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35512	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35504	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
0212KTU01	993409	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
655CC01Y1	2396	CONTACTOR	接触器	AR	
3530000-1	FRTR3200	SENSOR-FUEL LEVEL	油面传感器	AR	
3530000-1	FRTR3199	SENSOR-FUEL LEVEL	油面传感器	AR	
HTE420044	FR105BB	PRESSURE HOLDING VALVE	压力保持活门	AR	
788A0000-02	V2139	RIGHT ANGLE GEARBOX	齿轮箱	AR	
S1821502-02	LX110002	ELT	应急定位器	AR	SV
C93R38-606	21217	FUEL PUMP CANISTER	燃油泵壳体	AR	
C93R38-601	21267	FUEL PUMP CANISTER	燃油泵壳体	AR	
C93R38-601	21266	FUEL PUMP CANISTER	燃油泵壳体	AR	
C93R38-606	21214	FUEL PUMP CANISTER	燃油泵壳体	AR	
321000M03	6705	SIDE STICK TRANSDUCER UN	驾驶杆传感器	AR	SV
321000M03	6707	SIDE STICK TRANSDUCER UN	驾驶杆传感器	AR	SV
9811839	FRTR188B	CHECK VALVE	单项活门	AR	
9811839	FRTR189B	CHECK VALVE	单项活门	AR	
789A0000-02	V2198	LINE GEARBOX	线性变速器	AR	
L95F50-603	23170	FUEL TK OVERPRESSURE PRO	超压保护	AR	SV
L95F50-603	B94572	FUEL TK OVERPRESSURE PRO	超压保护	AR	SV
3530000-1	FRTR3431	SENSOR-FUEL LEVEL	油面传感器	AR	
3530000-1	FRTR3430	SENSOR-FUEL LEVEL	油面传感器	AR	
3530000-1	FRTR3431	SENSOR-FUEL LEVEL	油面传感器	AR	
3530000-1	FRTR3429	SENSOR-FUEL LEVEL	油面传感器	AR	
0212KTU10	993614	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU09	993545	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU09	993542	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU10	993615	WING TANK PROBE, FQI	油箱燃油油量组件	AR	

HTE900087-001	FR235BB	FUEL TRANSFER VALVE	燃油转换活门	AR	
HTE900087-001	FR234BB	FUEL TRANSFER VALVE	燃油转换活门	AR	
9811839	FRTR194BF	CHECK VALVE	单向活门	AR	
9811839	FRTR223BF	CHECK VALVE	单向活门	AR	
Z030H0005110	35526	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	35508	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z040H0006110	07573	DEU, DECODER ENCODER UNIT	B型解码/编码组件	AR	
Z030H0005110	35525	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	30836	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
D3214022000200	SHL13548	NUT ASSEMBLY	螺帽组件	AR	
D3215303000800	F07924-7	PIN	销子	AR	
HTE900087-001	FR236BB	FUEL TRANSFER VALVE	燃油转换活门	AR	
763A0000-03	11564	TEMPERATURE SENSOR	温度传感器	AR	SV
763A0000-03	11606	TEMPERATURE SENSOR	温度传感器	AR	SV
J172ABM	10210	ACCELEROMETER	加速计	AR	
J172ABM	10287	ACCELEROMETER	加速计	AR	
763A0000-03	11577	TEMPERATURE SENSOR	温度传感器	AR	SV
1298A0000-01	04887	VALVE, CHECK TRIM AIR	活门	AR	SV
SB209L1A1-1483	17034	HYDR. ACCUMULATOR	储压器	AR	SV
18330904-2	66802A	HIGH PRESSURE GAUGE	压力表	AR	SV
HTE510016	M415CV029	ACCUMULATOR GAS CHARGING	储压表	AR	SV
SB209L1A1-1484	30174	HYDR. ACCUMULATOR	储压器	AR	
18330904-2	66799A	HIGH PRESSURE GAUGE	压力表	AR	SV
HTE510016	C162074	ACCUMULATOR GAS CHARGING	储压表	AR	SV
SB209L1A1-1483	20348	HYDR. ACCUMULATOR	储压器	AR	SV
18330904-2	66810A	HIGH PRESSURE GAUGE	压力表	AR	SV
HTE510016	C162075	ACCUMULATOR GAS CHARGING	储压表	AR	SV
HTE420044	FR106BB	PRESSURE HOLDING VALVE	活门	AR	
5822-21	NA001	BATTERY	电池	AR	
5822-21	NA002	BATTERY	电池	AR	
5822-21	NA003	BATTERY	电池	AR	
3530000-1	FRTR3437	SENSOR-FUEL LEVEL	油面传感器	AR	
24E507009G03	N1234921	HEATER-WATER LAVATORY	厕所水加热器	AR	SV
24E507009G03	UJW12497	HEATER-WATER LAVATORY	厕所水加热器	AR	SV
322000M02	2414	TRANSDUCER UNIT	传感器	AR	SV
322000M02	2162	TRANSDUCER UNIT	传感器	AR	SV
MF10-05-11	104650	CREW OXYGEN MASK	机组氧气面罩	AR	SV
MXP801	25002	FLIGHT CREW MASK STOWAGE	机组氧气面罩储存	AR	
MF10-05-11	SE02411	CREW OXYGEN MASK	机组氧气面罩	AR	SV
MXP801	SE03636	FLIGHT CREW MASK STOWAGE	机组氧气面罩储存	AR	
MF10-05-11	SE02419	CREW OXYGEN MASK	机组氧气面罩	AR	SV
MF10-05-11	SE29616	CREW OXYGEN MASK	机组氧气面罩	AR	SV
MXP401	7972	FLIGHT CREW MASK STOWAGE	机组氧气面罩储存	AR	
J172ABM	10219	ACCELEROMETER	加速计	AR	
J172ABM	10289	ACCELEROMETER	加速计	AR	
114087007	DH-2011-C	DOOR BY-PASS VALVE, MLG	主起落架旁通活门	AR	
3601-91	DS4126	PYLON FIRE DETECTOR	火警线	AR	
C20105000	09948	TACHOMETER	轮速传感器	AR	
C20105000	09949	TACHOMETER	轮速传感器	AR	
C20105000	09952	TACHOMETER	轮速传感器	AR	
C20105000-2	58924	TACHOMETER	轮速传感器	AR	SV

HTE900087-001	FR233BB	FUEL TRANSFER VALVE	燃油转换活门	AR	
C19BQ0016	175	RESERVOIR HYDR. BLUE	液力油箱	AR	
18301905-1	001720	PRESSURE GAUGE AIR	压力表	AR	
70400	80918360	VALVE RELIEF AIR	释压活门	AR	
HTE690035-1	20002	PRESSURE SWITCH AIR	压力电门	AR	
716TS06Y	1111	NW. STRG. HANDWHEEL XMTR. UN	转弯手柄	AR	
3530000-1	FRTR34301	SENSOR-FUEL LEVEL	油面传感器	AR	
711TS06Y	1117	NW. STRG. HANDWHEEL XMTR. UN	转弯手柄	AR	SV
Z030H0005110	35511	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
0212KTU07	992705	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
0212KTU06	993059	WING TANK PROBE, FQI	油箱燃油油量组件	AR	
D5311047700007	NT1059	NOSE RADOME	雷达罩	AR	
D3215303200800	F07924-3	PIN	销子	AR	
D3214022000200	SHL23815	NUT ASSEMBLY	螺帽	AR	
763A0000-03	11583	TEMPERATURE SENSOR	温度传感器	AR	SV
2598D	5377	LIGHT TRANSFORMER	变压器	AR	
2598D	5491	LIGHT TRANSFORMER	变压器	AR	
796-809-6A	3096	FUEL CADENSICON	电容式密度计	AR	SV
L95F50-603	23101	FUEL TK OVERPRESSURE PROT	燃油过压保护器	AR	SV
9815715	FRTR049BF	RELIEF VALVE	释压活门	AR	
114083003	CWDDDH889	VENT VALVE, MLG	主起落架通气活门	AR	
2LA455010-00	1571561	STROBE LIGHT	频闪灯	AR	SV
S4-3402180	01498	ELECTRIC. SELECTOR VALVE	电子选择活门	AR	
330400M01	2323	THROTTLE CONTROL UNIT	油门控制组件	AR	
3901395	339BB	PUMP JET	引射泵	AR	
3901395	365BB	PUMP JET	引射泵	AR	
RDAV3001-35	200040	CONTROL UNIT-SYSTEM, VIDEO	视频系统控制组件	AR	
D23278100	COU2382	TOWING ADAPTER ASSY	牵引组件	AR	
D23119751-1	B574	NLG ELECTRICAL BOX	电子盒	AR	SV
C24736001-1	H0806	ELECTRO-HYD. STEERING MODU	液压转弯电子组件	AR	SV
30-1883-5	1970	LH WING/ENGINE SCAN LIGHT	灯	AR	
30-1883-6	1936	LH WING/ENGINE SCAN LIGHT	灯	AR	
HTE900135	FR209BA	FUEL TRANSFER VALVE	燃油转换活门	AR	
330400M01	AG06117	THROTTLE CONTROL UNIT	油门控制组件	AR	
521100	F9921694	GENERATOR CONTROL UNIT	发动机控制组件	AR	
C49AA0221	1216	CANISTER, PUMP FUEL	燃油泵	AR	
986F12-1	2243	CHECK VALVE, PRESS. SER	单向活门	AR	
986F12-1	2276	CHECK VALVE, PRESS. SER	单向活门	AR	
C82LL0010	24173	DRAIN VALVE	排水活门	AR	SV
ZCV63-8	9042998	CHECK VALVE	单向活门	AR	
ZCV63-8	9012687	CHECK VALVE	单向活门	AR	
ZCV63-8	9042999	CHECK VALVE	单向活门	AR	
ZCV63-6	90310122	CHECK VALVE	单向活门	AR	
ZCV63-6	90310120	CHECK VALVE	单向活门	AR	
ZCV63-6	90310121	CHECK VALVE	单向活门	AR	
ZCV63-6	90310124	CHECK VALVE	单向活门	AR	
ZCV63-6	90310125	CHECK VALVE	单向活门	AR	
ZCV63-6	90310126	CHECK VALVE	单向活门	AR	
ZCV63-6	90310119	CHECK VALVE	单向活门	AR	
ZCV63-6	90310123	CHECK VALVE	单向活门	AR	
ZCV63-4	8120155	CHECK VALVE	单向活门	AR	

ZCV63-4	81201157	CHECK VALVE	单向活门	AR	
ZCV63-4	81218218	CHECK VALVE	单向活门	AR	
ZCV63-4	90302114	CHECK VALVE	单向活门	AR	
ZCV63-4	81218204	CHECK VALVE	单向活门	AR	
ZCV63-6-1	90423324	CHECK VALVE	单向活门	AR	
ZCV63-6-1	90417235	CHECK VALVE	单向活门	AR	
ZCV63-6-1	90417254	CHECK VALVE	单向活门	AR	
ZCV63-6-1	90417241	CHECK VALVE	单向活门	AR	
ZCV63-6-1	90417160	CHECK VALVE	单向活门	AR	
ZCV64-10	90223115	CHECK VALVE	单向活门	AR	
ZCV64-12	8122377	CHECK VALVE	单向活门	AR	
ZCV64-10	81123118	CHECK VALVE	单向活门	AR	
C24730001-6	H2222	NLG. UNLOCK ASSY	前架上位锁	AR	
C24730100-1	H3764	NLG. DOOR UNLOCK ASSY	前起舱门锁组件	AR	
789A0000-02	V2199	LINE GEARBOX	线性变速器	AR	
6137-3	1448	RUDDER TRIM ACTUATOR	方向舵配平作动器	AR	
321000M03	6713	SIDE STICK TRANSDUCER UN	侧杠传感器组件	AR	SV
321000M03	6606	SIDE STICK TRANSDUCER UN	侧杠传感器组件	AR	SV
769B0000-01	02317	CHECK VALVE	单向活门	AR	
HTE690047	Q35130267	SWITCH PRESS. HOT AIR	热空气压力电门	AR	
ZCV63-6-1	90423368	CHECK VALVE	单向活门	AR	
ZCV63-6-1	90423277	CHECK VALVE	单向活门	AR	
3530000-1	FRTR34309	SENSOR-FUEL LEVEL	油面传感器	AR	
3530000-1	FRTR34306	SENSOR-FUEL LEVEL	油面传感器	AR	
ZRA380-00	ASA11386	TRANSDUCER	传感器	AR	
ZRA1990030	4377	TRANSDUCER	传感器	AR	
ZRA1990030	6166	TRANSDUCER	传感器	AR	
ZRA1990030	4499	TRANSDUCER	传感器	AR	
9508175	FRTR359BF	FLOAT VENT VALVE	通气浮子活门	AR	
9508175	FRTR362BF	FLOAT VENT VALVE	通气浮子活门	AR	
9508175	FRTR352BF	FLOAT VENT VALVE	通气浮子活门	AR	
9508175	FRTR361BF	FLOAT VENT VALVE	通气浮子活门	AR	
CG7G0	1052	AVIONICS COMPARTMENT SMO	电子仓烟雾探测器	AR	
530AL01CN	3077	PWR SUPPLY DECOUPLING UN	电源供给去耦组件	AR	
530AL01CN	3075	PWR SUPPLY DECOUPLING UN	电源供给去耦组件	AR	
HTE310021-1	FR126BB	AIR INLET VALVE	进气阀	AR	
HTE310021-1	FR125BB	AIR INLET VALVE	进气阀	AR	
2LA005413-01	1082	OVERWING LIGHT	翼上灯	AR	
2LA005127-01	1042	OVERWING LIGHT	翼上灯	AR	
2LA005414-01	1079	OVERWING LIGHT	翼上灯	AR	
2LA005128-01	1056	OVERWING LIGHT	翼上灯	AR	
HTE900095	FR103BB	TRANSFER VALVE DRIVE SHA	转换驱动轴	AR	
HTE900095	FR102BB	TRANSFER VALVE DRIVE SHA	转换驱动轴	AR	
HTE900096	FR101BB	TRANSFER VALVE DRIVE SHA	转换驱动轴	AR	
HTE900096	FR102BB	TRANSFER VALVE DRIVE SHA	转换驱动轴	AR	
190QA01	3975	CURRENT TRANSFORMER	电流互感器	AR	
190QA01	3978	CURRENT TRANSFORMER	电流互感器	AR	
310ZN01Y01	16972	UNBALANCE DETECTOR	不平衡探测器	AR	
310ZN01Y01	3911	UNBALANCE DETECTOR	不平衡探测器	AR	
HTE900118-001	FR149BB	LOW PRESSURE FUEL VALVE	低压燃油活门	AR	SV
HTE900118-001	FR148BB	LOW PRESSURE FUEL VALVE	低压燃油活门	AR	SV

788A0000-02	V2140	RIGHT ANGLE GEARBOX	齿轮箱	AR	
4-60000H882-00	3.68E+11	DRAINMAST	排水桅杆	AR	SV
HTE900133	FR186BA	FUEL DEFUEL/TRANSFER VALV	转换活门	AR	
HTE69000-1	30040699	SWITCH-P	P电门	AR	SV
41-2-1100-02	1242	ACTUATOR, EMER. RAM AIR	冲压进气口活门	AR	SV
790A0000-02	V3159	BEVEL GEARBOX 19 DEG.	齿轮箱	AR	
HTE900135	FR209BA	FUEL TRANSFER VALVE	燃油转换活门	AR	
2LA005469-00	6667	WARNING LIGHT PANEL	警告灯面板	AR	
2LA005469-00	6736	WARNING LIGHT PANEL	警告灯面板	AR	
C19DS0026	212	RESERVOIR HYDR. GREEN	液力油箱	AR	
18301905-1	001508	PRESSURE GAUGE AIR	压力表	AR	
70400	3523	VALVE RELIEF AIR	释压活门	AR	
HTE690035-1	20083	PRESSURE SWITCH AIR	压力电门	AR	
C19DS0016	209	RESERVOIR HYDR. YELLOW	液力油箱	AR	
18301905-1	001501	PRESSURE GAUGE AIR	压力表	AR	
70400	3485	VALVE RELIEF AIR	释压活门	AR	
HTE690035-1	20092	PRESSURE SWITCH AIR	压力电门	AR	
822-0987-003	162412	HF-ANTENNA COUPLER	高频天线耦合器	AR	SV
ZCV63-4	81218273	CHECK VALVE	单向活门	AR	
ZCV63-6-1	90423338	CHECK VALVE	单向活门	AR	
3530000-1	C004984	SENSOR-FUEL LEVEL	油面传感器	AR	
SPSA320-10-2-2	350	FIXED SIDE WINDOW	固定风挡	AR	
SPSA320-9-2-2	4381	FIXED SIDE WINDOW	固定风挡	AR	SV
SPSA320-8-4-2	18346	SLIDING SIDE WINDOW	风挡	AR	
TAAI2-33PE00-01	1121	MECHANICAL PILOT SEAT	驾驶员座椅	AR	
5XA005033-00	2497	CONTROLLER-LIGHTING	亮度调节器	AR	
5XA005032-01	1312	CONTROLLER-LIGHTING	亮度调节器	AR	
5XA005033-00	2506	CONTROLLER-LIGHTING	亮度调节器	AR	
50-2-3100-00	11718	SWITCH PRESSURE HYD.	液压电门	AR	SV
A25312-1	H2115	THROTTLE VALVE	节流阀	AR	
B42CA2002	5097	VALVE NON RETURN	止回阀	AR	
RDAX7673-10	104003	LOADABLE PRAM	可装载预录机	AR	
9811820	FRTR147BF	CHECK VALVE	单向活门	AR	
9811820	FRTR148BF	CHECK VALVE	单向活门	AR	
9811839	FRTR190BF	CHECK VALVE	单向活门	AR	
ZCV63-6-1	90417178	CHECK VALVE	单向活门	AR	
B42CA2002	5034	VALVE NON RETURN	止回阀	AR	
2407-89-03	5416	ATC/DME. ANTENNA	ATC/DME天线	AR	
ZCV64-12	90222441	CHRCK VALVE	单向活门	AR	
B42CA2002	5104	VALVE NON RETURN	止回阀	AR	
790A0000-02	V3290	BEVEL GEARBOX	齿轮箱	AR	
766A0000-01	02797	SENSOR TEMP. PNEUM	温度传感器	AR	
766A0000-01	02769	SENSOR TEMP. PNEUM	温度传感器	AR	
833B0100-01	V2168	SHAFT ASSY	轴杆组件	AR	
833B0100-01	V2169	SHAFT ASSY	轴杆组件	AR	
786-052	3064	FUEL VENT PROTECTOR	燃油通风保护器	AR	
786-052	3029	FUEL VENT PROTECTOR	燃油通风保护器	AR	
ZCV64-20	90324367	CHECK VALVE	单向活门	AR	
8420B1-201	8420B1-20	COCKPIT-DOOR SURVEILLANCE	驾驶舱门监视显示	AR	
8450B5	8450B5-29	HINGE ASSY-CDSS	驾驶舱门监视显示	AR	
ZCV64-20	90324348	CHECK VALVE	单向活门	AR	

ZCV64-12	90118303	CHECK VALVE	单向活门	AR	
ZCV64-10	80923341	CHECK VALVE	单向活门	AR	
ZCV64-10	80923351	CHECK VALVE	单向活门	AR	
ZCV63-8	90104190	CHECK VALVE	单向活门	AR	
ZCV63-8	81116134	CHECK VALVE	单向活门	AR	
801C1700-02	V24021	STEADY BEARING ASSY	轴	AR	
801C1700-02	V24028	STEADY BEARING ASSY	轴	AR	
E03A00	3631	FIRE-SHUT-OFF-VALVE	关断活门	AR	
E03A00	3787	FIRE-SHUT-OFF-VALVE	关断活门	AR	
FRH050003	FR088BB	INDICATOR, MAGNETIC LEVEL	磁尺	AR	
773A0000-01	08046	SENSOR TEMP.	温度传感器	AR	
773A0000-01	07779	SENSOR TEMP.	温度传感器	AR	
773A0000-01	03509	SENSOR TEMP.	温度传感器	AR	
C20215000	01475	BRAKE PEDAL TRANSMITTER	刹车脚踏传感器	AR	SV
70200	4510	VALVE	活门	AR	
ZCV63-6-1	90417116	CHECK VALVE	单向活门	AR	
ZCV212	90910307	DOUBLE CHECK VALVE	双向活门	AR	
ZCV63-4	9012244	CHECK VALVE	单向活门	AR	
ZCV63-4	81218169	CHECK VALVE	单向活门	AR	
ZCV63-4	81218270	CHECK VALVE	单向活门	AR	
833A2100-01	V2809	SHAFT ASSY	轴杆组件	AR	
C24840010-2	H1819	MANIFOLD	总管	AR	
C24839010-2	H1823	MANIFOLD	总管	AR	
749198-2	H0583	HYDRAULIC RESERVOIR	液力油箱	AR	
833A0500-01	V1102	SHAFT ASSY	轴杆组件	AR	
2LA455010-00	2216	STROBE LIGHT	频闪灯	AR	SV
1559A9900-01	00311	HP-MANIFOLD	高压总管	AR	
450-2-3100-00	05423	SWITCH-PRESSURE	压力电门	AR	SV
50-2-3100-00	11221	SWITCH-PRESSURE	压力电门	AR	SV
CZ9284E	HEK75374	PRESSURE TRANSDUCER	压力传感器	AR	SV
114151004	CWDD-DH14	VALVE-HIGH PRESSURE RELIEF	高压释放活门	AR	
71190400010NCOA	514360012	VALVE-SAMPLING	取样阀	AR	SV
QA06304	RG1-2365	FILTER	油滤	AR	
ZCV64-16	61126551	CHECK VALVE	单向活门	AR	
9107A00004-01	447	SWITCH-PERSSURE	压力电门	AR	
1553A9900-01	00301	HP-MANIFOLD	高压总管	AR	
50-2-3100-00	11700	SWITCH-PRESSURE	压力电门	AR	SV
50-2-3100-00	11702	SWITCH-PRESSURE	压力电门	AR	SV
9107A00005-01	156	SWITCH-PERSSURE	压力电门	AR	
114151004	CWDD-DH49	VALVE-HIGH PRESSURE RELIEF	高压释放活门	AR	
CZ9284E	HEK19986	PRESSURE TRANSDUCER	液压传感器	AR	SV
ZCV64-16	80825179	VALVE-CHECK	单向活门	AR	
71190400010NCOA	508280111	VALVE-SAMPLING	取样阀	AR	SV
QA06304	RG1-2368	FILTER	油滤	AR	
114170008	DH-1154-C	SELECTOR VALVE MANIFOLD	选择活门	AR	
1555A9900-01	00311	PTU-MANIFOLD (GREEN)	PTU总管	AR	
A25313002-1	H4041	SELECTOR VALVE	选择活门	AR	
9107A00004-01	483	SWITCH-PERSSURE	压力电门	AR	
BHC1060-04	3612	VALVE-PRIORITY	优先活门	AR	SV
16800-01-00	05T2448	3RD. OCCUPANT SEAT	第3观察员座椅	AR	
9028A0004-01	90028A007	POS. PICK OFF UNIT	位置传感器	AR	

14330-230	NA001	FLUSH VALVE	冲洗活门	AR	
14330-230	@SD20210	FLUSH VALVE	冲洗活门	AR	
786A0000-12	02287	POWER CONTROL UNIT	动力控制组件	AR	
9028A0004-01	08887	POSITION PICK-OFF UNIT	位置传感器	AR	
9028A0004-01	08886	POSITION PICK-OFF UNIT	位置传感器	AR	
787A0000-07	04613	VALVE BLOCK	给油阀	AR	
787A0000-07	04606	VALVE BLOCK	给油阀	AR	
786A0000-12	02288	POWER CONTROL UNIT	动力控制组件	AR	
9028A0004-01	09125	POSITION PICK-OFF UNIT	位置传感器	AR	
9028A0004-01	09144	POSITION PICK-OFF UNIT	位置传感器	AR	
787A0000-07	04616	VALVE BLOCK	给油阀	AR	
787A0000-07	04608	VALVE BLOCK	给油阀	AR	
C24837101-4	H1649	MANIFOLD	刹车伺服活门进气	AR	
CZ9284E	HEK20485	PRESSURE TRANSDUCER	压力传感器	AR	SV
CZ9284E	HEK20489	PRESSURE TRANSDUCER	压力传感器	AR	SV
C24837101-4	H1703	MANIFOLD	刹车伺服活门进气	AR	
CZ9284E	HEK50175	PRESSURE TRANSDUCER	压力传感器	AR	SV
CZ9284E	HEK50532	PRESSURE TRANSDUCER	压力传感器	AR	SV
ST3100-23-10	05693	ATTENDANT PHONE	乘务员电话	AR	
HC3100-23-10	06717	ATTENDANT PHONE BASE	乘务员电话基座	AR	
ST3100-23-10	2153	ATTENDANT PHONE	乘务员电话	AR	
HC3100-23-10	1368	ATTENDANT PHONE BASE	乘务员电话基座	AR	
ST3100-23-10	2978	ATTENDANT PHONE	乘务员电话	AR	
HC3100-23-10	06301	ATTENDANT PHONE BASE	乘务员电话基座	AR	
ST3100-33-10	99	ATTENDANT PHONE	乘务员电话	AR	
HC3100-33-10	1002	ATTENDANT PHONE BASE	乘务员电话基座	AR	
S67-1575-165	449-8691	GPS ANTENNA	GPS 天线	AR	
DLRBA000	1310	DATA LOADING ROUTING BOX	航线数据加载盒	AR	
212096-3-3	S3218014	HF/SAT AUDIO SELECT PENL	选择面板	AR	
321-400-070-0	5780	COWL OPEN ACT	发动机整流罩打开	AR	
321-400-070-0	10834	COWL OPEN ACT	发动机整流罩打开	AR	
321-400-070-0	9483	COWL OPEN ACT	发动机整流罩打开	AR	
321-400-070-0	5177	COWL OPEN ACT	发动机整流罩打开	AR	
1555A9900-01	00301	MANIFOLD-HP	高压总管	AR	
9107A00005-01	457	SWITCH-PERSSURE	压力电门	AR	
BHC1060-04	17200	VALVE-PRIORITY	优先活门	AR	SV
ZCV64-12	80417323	CHECK VALVE	单向活门	AR	
D2727040001200M	TH-1130	AFU	模拟感觉组件	AR	
P3C0040800	3804	RECIRCULATION FILTER HOUS	预冷器出口温度传	AR	
D323-70101-000-00	778	VERTEILERBLOCK	分配部件	AR	
762080-1	H0845	SAFETY VALVE	安全活门	AR	SV
762080-1	H1073	SAFETY VALVE	安全活门	AR	SV
1158000-15	FR581BA	CHECK VALVE	单向活门	AR	
282-1-3100-00	04428	PRESSURE SWITCH	压力电门	AR	
C82LL0010	3782	DRAIN VALVE	排水活门	AR	SV
C82LL0010	3754	DRAIN VALVE	排水活门	AR	SV
C29DM6A	HAK8123	PRESSURE TRANSDUCER	压力传感器	AR	
C29DM6A	HAK33865	PRESSURE TRANSDUCER	压力传感器	AR	
C29DM6A	HAK7874	PRESSURE TRANSDUCER	压力传感器	AR	
800-160-201	0805016	VIDEO PLAYER	视频播放器	AR	
800-160-201	0812079	VIDEO PLAYER	视频播放器	AR	

60128-101	C3097	SURVIVAL KIT	SK包	AR	SV
60128-101	C3243	SURVIVAL KIT	SK包	AR	SV
119003-21	0A4-32802	CERW PBE	机组呼吸保护装置	AR	
119003-21	004-11160	CERW PBE	机组呼吸保护装置	AR	
119003-21	0A4-32803	CERW PBE	机组呼吸保护装置	AR	
119003-21	004-11161	CERW PBE	机组呼吸保护装置	AR	
119003-21	0A4-32801	CERW PBE	机组呼吸保护装置	AR	
119003-21	0A4-32800	CERW PBE	机组呼吸保护装置	AR	
119003-21	004-10693	CERW PBE	机组呼吸保护装置	AR	
DO-160A	N/A	HEADSET	耳麦	AR	
DO-160A	N/A	HEADSET	耳麦	AR	
DO-160A	N/A	HEADSET	耳麦	AR	
N/A	N/A	HAND OF WHEAT	手麦	AR	
N/A	N/A	HAND OF WHEAT	手麦	AR	
N/A	N/A	HAND OF WHEAT	手麦	AR	
058-001-00	5671	ROTARY SWITCH	旋转开关	AR	
7530334	20602	SELECTOR, TEMP.	温度选择器	AR	
058-001-00	5672	ROTARY SWITCH	旋转开关	AR	
777A0000-01	04818	SELECTOR, TEMP.	温度选择器	AR	
777A0000-01	04950	SELECTOR, TEMP.	温度选择器	AR	
777A0000-01	04852	SELECTOR, TEMP.	温度选择器	AR	
058-001-00	5673	ROTARY SWITCH	旋转开关	AR	
9027-20010	9940545	SELECTOR, LDG. FIELD EL	着落高度选择器	AR	SV
87232323V01	VL2064012	DUCT TEMP. SENSOR	管道温度传感器	AR	
C24592000-1	H1863	MASTER CYLINDER	底座马达	AR	
C24592000-1	H1870	MASTER CYLINDER	底座马达	AR	
2510154-01-00	961	4TH. OCCUPANT SEAT	第四观察员座椅	AR	
ZCV63-6-1	90417222	HYDRAULIC CHECK VALVE	单向活门	AR	
058-001-00	5674	ROTARY SWITCH	旋转开关	AR	
D0003000100000	4906	RHEOSTAT	旋转电门	AR	
D9251092000000	1451	PANEL	面板	AR	
D9251066100000	1445	PANEL	面板	AR	
D9251220400000	1448	PANEL	面板	AR	
D9251088100000	1444	PANEL	面板	AR	
D9251081000000	1448	PANEL	面板	AR	
D2727025000400	N/A	ROD SPRING	杆弹簧	AR	
642-3801-515	2586001	THRUST	反推	AR	
321-400-705-0	5095	COWL OPEN ACT	整流罩作动筒	AR	
642-3802-517	2587001	THRUST	反推	AR	
321-400-705-0	5091	COWL OPEN ACT	整流罩作动筒	AR	
642-3801-515	2584001	THRUST	反推	AR	
321-400-707-0	5083	COWL OPEN ACT	整流罩作动筒	AR	SV
642-3802-517	2585001	THRUST	反推	AR	
321-400-707-0	5340	COWL OPEN ACT	整流罩作动筒	AR	SV
622-5132-622	7529	WEATHER RADAR TRANSCEIVER	气象雷达收发机	AR	
B397BAM0624	Q00140008	FLIGHT AUGMENTATION COMPUTE	飞行增稳计算机	AR	SV
B397BAM0624	6541	FLIGHT AUGMENTATION COMPUTE	飞行增稳计算机	AR	SV
B372BAM0515	6595	SPOILER ELEVATOR COMPUTE	飞控计算机	AR	SV
B372BAM0515	6667	SPOILER ELEVATOR COMPUTE	飞控计算机	AR	SV
759D0000-02	0651	Pack Controller	空调控制器	AR	
B372BAM0515	Q00136012	SPOILER ELEVATOR COMPUTE	飞控计算机	AR	SV

30042-0000-0501	2341	FUEL LEVEL SENSING CONTROL	油位传感控制组件	AR	
SIC5059-11-0207	1343	Fuel Quantity-Indicating	燃油指示计算机	AR	
822-1293-332	145872	TCAS COMPUTER	空中防撞系统计算机	AR	
49-170-11	49-170BAC	SLAT/FLAP CONTROL COMPUTE	襟缝翼控制计算机	AR	SV
49-170-11	04685	SLAT/FLAP CONTROL COMPUTE	襟缝翼控制计算机	AR	SV
350E053021818	0E0013079	FLIGHT WARNING COMPUTER,	飞行警告计算机	AR	SV
350E053021818	0E0017154	FLIGHT WARNING COMPUTER,	飞行警告计算机	AR	SV
785-002-8	2583	BLEED MONITORING COMPUTE	引气监控计算机	AR	
30042-0000-0501	8870	FUEL LEVEL SENSING CONTROL	油位传感控制组件	AR	
9615325070	5743	DISPLAY MANAGEMENT COMPUTE	显示管理计算机	AR	
9615325070	998256006	DISPLAY MANAGEMENT COMPUTE	显示管理计算机	AR	
822-0329-020	3R71K	DME INTERROGATOR	测距机询问器	AR	
9615325070	5689	DISPLAY MANAGEMENT COMPUTE	显示管理计算机	AR	
822-0329-020	120019	DME INTERROGATOR	测距机询问器	AR	
350E5500204	0E5011981	SDAC	系统数据采集集中	AR	
350E5500204	0E5011126	SDAC	系统数据采集集中	AR	
822-0330-020	121325	HF/COMM TRANSCEIVER	高频收发机	AR	
822-0330-020	1060	HF/COMM TRANSCEIVER	高频收发机	AR	
RD-AV3001-35	200020	V. S. C. U	录像系统控制组件	AR	
Z010H0005	03896	CIDS DIRECTOR	客舱内部通讯数据	AR	
B401ACM0507	1319	CFDIU	中央故障显示接口	AR	
822-0297-020	185619	VOR RECEIVER	接收机	AR	SV
822-0297-020	150746	VOR RECEIVER	接收机	AR	SV
115370-1016	4144	FLIGHT CONTROL DATA CONC	飞行控制数据采集	AR	SV
115370-1016	1936	FLIGHT CONTROL DATA CONC	飞行控制数据采集	AR	SV
965-1676-003	EMK5-3524	GPWC, GROUND PROXIMITY WA	近地警告计算机	AR	SV
AMU2790CB06	1410	AUDIO MANAGEMENT UNIT	音频管理组件	AR	
775D0000-01	01420	CONTROLLER ZONE TEMP	区域控制器	AR	
Z010H0005	03106	CIDS DIRECTOR	客舱内部通讯数据	AR	
680203037A	0234	RAT-RAM AIR TURBINE	冲压空气涡轮	AR	SV
520550	F9227771	RAT PUMP	液压泵	AR	
822-1338-021	160LYP	ATC TRANSPONDER	模式应答机	AR	
465020-03030318	2907	ADIRU	大气数据惯性基准	AR	
465020-03030318	3465	ADIRU	大气数据惯性基准	AR	
3888394-121205	221	ELECTRONIC CONTROL BOX	电子控制盒	AR	
822-1338-021	112KL	ATC TRANSPONDER	模式应答机	AR	
3957985114	2566	ENGINE INTERFACE UNIT	发动机连接组件	AR	
241-246-022-004	AA38121	ENG VIBRATION MONITORING	发动机振动监控组	AR	
759D0000-02	0489	Pack Controller	空调控制器	AR	
9022-15702-11	9931818	CABIN PRESSURE CONTROLLE	客舱压力控制器	AR	
465020-03030318	2281	ADIRU	大气数据惯性基准	AR	
746923E	2300	ELECTRICAL GENERATION INT	发电接口装置	AR	
746923E	3737	ELECTRICAL GENERATION INT	发电接口装置	AR	
9022-15702-11	9867386	CABIN PRESSURE CONTROLLE	客舱压力控制器	AR	
740120C	5100	GENERATOR CONTROL UNIT	电源控制组件	AR	SV
740121B	1344	GROUND POWER CONTROL UNIT	地面电源控制组件	AR	
3957985114	Q05720012	ENGINE INTERFACE UNIT	发动机连接组件	AR	
822-1047-030	12798	VHF/COMM TRANSCEIVER	甚高频收发机	AR	
822-1047-030	8254	VHF/COMM TRANSCEIVER	甚高频收发机	AR	
822-1047-030	6848	VHF/COMM TRANSCEIVER	甚高频收发机	AR	
822-0299-020	144547	ADF RECEIVER	收发机	AR	SV

RD-AX7095-01	C853247	CD REPRODUCER	播放器	AR	
822-0987-003	182345	HF ANTENNA COUPLER	高频无线耦合器	AR	SV
822-0299-020	118695	ADF RECEIVERADF	收发机	AR	SV
Y192	H04325	TRANSFORMER RECTIFIER	变压整流器	AR	SV
MF10-05-11	SE02330	CREW OXYGEN MASK	全脸快带式氧气面	AR	SV
MXP801	SE06315	FLIGHT CREW MASK STOWAGE	机组面罩存储盒	AR	
MF10-05-11	85921	CREW OXYGEN MASK	全脸快带式氧气面	AR	SV
822-0987-003	181131	HF ANTENNA COUPLER	高频无线耦合器	AR	SV
800-160-201	0711044	VIDEO	播放机	AR	
47215920BB00	47215920	PROBES HEAT COMPUTER	探头加温计算机	AR	SV
800-160-201	0805055	DIGITAL VIDEO REPRODUCER	数码视频播放器	AR	
RD-AV9810-01	120231	DISPLAY UNIT	显示组件	AR	
MXP801	SE07434	FLIGHT CREW MASK STOWAGE	机组面罩存储盒	AR	
740120C	5337	GENERATOR CONTROL UNIT	电源控制组件	AR	SV
RD-AV9809-01	150071	DISPLAY UNIT	显示组件	AR	
RD-AV9810-01	201073	DISPLAY UNIT	显示组件	AR	
RD-AV9810-01	120201	DISPLAY UNIT	显示组件	AR	
MXP801	21190	FLIGHT CREW MASK STOWAGE	机组面罩存储盒	AR	
740120C	5101	GENERATOR CONTROL UNIT	电源控制组件	AR	SV
RD-AV9809-01	150062	DISPLAY UNIT	显示组件	AR	
RD-AV9810-01	C101199	DISPLAY UNIT	显示组件	AR	
RD-AV9810-01	120340	DISPLAY UNIT	显示组件	AR	
600611-00-601	06104052	CONTROLLER	后货舱加热控制器	AR	
RD-AV9809-01	111652	DISPLAY UNIT	显示组件	AR	
RD-AV9810-01	120063	DISPLAY UNIT	显示组件	AR	
RD-AV9810-01	201069	DISPLAY UNIT	显示组件	AR	
1663214301	B3597	PROBES HEAT COMPUTER	探头加温计算机	AR	
35-0L5-1005-08	2436	BATTERY CHARGE LIMITER -	电瓶充电限制器	AR	SV
47215920BB00	47215920	PROBES HEAT COMPUTER	探头加温计算机	AR	SV
6664287-0	2314	WINDOW HEAT COMPUTER	窗户加温计算机	AR	
RD-AV9809-01	201979	DISPLAY UNIT	显示组件	AR	
RD-AV9809-01	200124	DISPLAY UNIT	显示组件	AR	
RD-AV9810-01	G173728	DISPLAY UNIT	显示组件	AR	
1B1000-1GS	M8957250	STATIC INVERTER	静变流器	AR	SV
416-00318-003	41600318	WINDOW HEAT COMPUTER	窗户加温计算机	AR	
35-0L5-1005-08	0L500253	BATTERY CHARGE LIMITER -	电瓶充电限制器	AR	SV
35-0D5-1003	0D500247	COCKPIT LOUD SPEAKER	扬声器	AR	SV
RD-AV9809-01	120078	DISPLAY UNIT	显示组件	AR	
RD-AV9809-01	111558	DISPLAY UNIT	显示组件	AR	
RD-AV9810-01	120169	DISPLAY UNIT	显示组件	AR	
2610-13-1	714	CLOCK	时钟	AR	
2LA005469-00	6684	WARNING LIGHT PANEL	警告灯面板	AR	
2LA005469-00	6696	WARNING LIGHT PANEL	警告灯面板	AR	
2LA005469-00	6501	WARNING LIGHT PANEL	警告灯面板	AR	
2LA005469-00	6694	WARNING LIGHT PANEL	警告灯面板	AR	
K217ABM11	1477	FLIGHT CONTROL UNIT	飞行控制组件	AR	SV
RD-AV9809-01	111672	DISPLAY UNIT	显示组件	AR	
RD-AV9809-01	110914	DISPLAY UNIT	显示组件	AR	
14404-010	99030619	CONT VAC SYS	真空系统控制器	AR	
3025	2280	STATIC INVERTER	静变流器	AR	
D92550032002	AF5073	REFUEL PANEL	加油面板	AR	

558CA01Y1	6719	TPST NO CONTACTOR	接触器	AR	
558CA01Y1	6717	TPST NO CONTACTOR	接触器	AR	
558CA01Y1	6716	TPST NO CONTACTOR	接触器	AR	
558CA01Y1	6715	TPST NO CONTACTOR	接触器	AR	
0861ED	41	ANGLE OF ATTACK SENSOR, A	迎角传感器	AR	SV
558CA01Y1	6718	TPST NO CONTACTOR	接触器	AR	
465010-0300-0300	0246	ADIRS CDU	控制显示组件	AR	
3214-54-10	2079	EPSU, EMERGENCY POWER SUP	应急电源供应组件	AR	
3214-54-10	008362	EPSU, EMERGENCY POWER SUP	应急电源供应组件	AR	
3214-54-10	008361	EPSU, EMERGENCY POWER SUP	应急电源供应组件	AR	
4236564	80607	TAXI LIGHT	滑行灯	AR	
4236534	75170	RUNWAY TURNOFF LIGHT	跑道转弯灯	AR	
558CA01Y1	6714	TPST NO CONTACTOR	接触器	AR	
Z030H0005110	30780	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34586	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34584	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34587	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
3108-89	1143	VOR. ANTENNA	甚高频全向信标天	AR	
Z030H0005110	34588	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34585	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34589	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z220H0002110	220H00006	CONTROLUNIT	废水防冰控制组件	AR	
Z220H0002110	04241	CONTROLUNIT	废水防冰控制组件	AR	
Z040H000820A	040H00013	DEU, DECODER ENCODER UNIT	B型解码/编码组件	AR	
Z030H0005110	030H00066	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z040H000820A	040H00013	DEU, DECODER ENCODER UNIT	B型解码/编码组件	AR	
Z212H0001110	03313	CONTROLUNIT	废水防冰控制组件	AR	
Z040H000820A	09893	DEU, DECODER ENCODER UNIT	B型解码/编码组件	AR	
503CA02F1-02Y1	2749	DOUBLE THREEMPOLE CONTACTO	接触器	AR	
2LA403702-01	9377	TAIL NAVIGATION LIGHT	尾部导航灯	AR	
Z030H0005110	34598	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z040H000820A	040H00013	DEU, DECODER ENCODER UNIT	B型解码/编码组件	AR	
Z030H0005110	34597	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34596	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34594	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34595	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34592	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34591	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34590	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
3105-89	1446	GLIDE ANTENNA	下滑道天线	AR	
64050-866-1	Q09745003	STANDBY AIRSPEED INDICATO	备用空速显示器	AR	SV
503CA02F1-02Y1	2756	DOUBLE THREEMPOLE CONTACTO	接触器	AR	
Z050H6045090	050H60009	CIDS CAM	客舱分布模块	AR	
Z030H0005110	34600	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34599	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34609	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34608	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34601	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34605	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34607	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
564CA02FY1	3804	60A THREEMPOLE CONTACTOR	接触器	AR	

4236534	78718	RUNWAY TURNOFF LIGHT	跑道转弯灯	AR	
640CC01Y1	8990	200A SINGLEPOLE CONTACTOR	接触器	AR	
640CC01Y1	8991	200A SINGLEPOLE CONTACTOR	接触器	AR	
87232323V00	VL2064003	DUCT TEMPERATURE SENSOR	电子通风管道温度	AR	
PPA1102-00	3643	CARGO SMOKE DETECTOR	货舱烟雾探测器	AR	SV
PPA1102-00	13026	CARGO SMOKE DETECTOR	货舱烟雾探测器	AR	SV
PPA1102-00	13503	CARGO SMOKE DETECTOR	货舱烟雾探测器	AR	SV
PPA1102-00	7591	CARGO SMOKE DETECTOR	货舱烟雾探测器	AR	SV
PPA1202-00	4591	SMOKE DETECTOR	货舱烟雾探测器	AR	
PPA1202-00	9333	SMOKE DETECTOR	货舱烟雾探测器	AR	
PPA1202-00	9365	SMOKE DETECTOR	货舱烟雾探测器	AR	
Z111H0033151	07856	AIP-ATTENDANT INDICATION	乘务员指示面板	AR	
Z111H0033151	111H00014	AIP-ATTENDANT INDICATION	乘务员指示面板	AR	
101809	9831578A	ALTITUDES WITCH	高度电门	AR	
864-001	0653	Lighted Icing Indicator	照明结冰指示器	AR	
87232324V00	1186	SKIN TEMPERATURE SENSOR	电子通风蒙皮温度	AR	
Z111H0033151	07817	AIP-ATTENDANT INDICATION	乘务员指示面板	AR	
600612-00-510	21031	TEMPERATURE SENSOR	温度传感器	AR	
310ZN01Y01	3812	UNBALANCE DETECTOR	不平衡探测器	AR	
PPA1102-00	2153	CARGO SMOKE DETECTOR	货舱烟雾探测器	AR	SV
310ZN01Y01	3811	UNBALANCE DETECTOR	不平衡探测器	AR	
190QA01	3871	CURRENT TRANSFORMER	交流电流互感器	AR	
190QA01	3877	CURRENT TRANSFORMER	交流电流互感器	AR	
CGDU2000-00	6767	SMOKE DETECTOR	电子舱烟雾探测器	SV	
PPA1102-00	1873	CARGO SMOKE DETECTOR	货舱烟雾探测器	AR	SV
1X2005012-00	2660	LOADING AREA LIGHT	装载区域灯	AR	
QA06423-01	N/A	RECIRCLATION FILTER CART	再循环过滤滤芯	AR	SV
QA06423-01	N/A1	RECIRCLATION FILTER CART	再循环过滤滤芯	AR	SV
8ES455012-00	1970	POWER SUPPLY UNIT	电源供应组件	AR	SV
3720-01-01	UL8722	FIRE DETECTION UNIT	火警探测组件	AR	
LA2TOG20503B050	2T0002129	A. T. S. U	空中交通服务组件	AR	
8ES005309-00	2802	POWER SUPPLY UNIT	电源供应组件	AR	
8ES455012-00	1167	POWER SUPPLY UNIT	电源供应组件	AR	SV
RD-AX7675-51	C359711	REPRODUCER-PRERECORD ANNC	音乐磁带播放器	AR	
521100	F9911174	GENERATOR CONTROL UNIT	恒速马达发电机控	AR	
RAI2800M0706	Q00160006	SM/E DET. CONTR. UNIT	烟雾探测器控制组	AR	SV
8420B1-201	8420B1-20	COCKPIT-DOOR SURVEILLANCE	驾驶舱监视器	AR	
8450B5	8450B5-13	SURVEILLANCE-SYSTEM HINGE	监视系统铰链组件	AR	
RD-AX1301-2D	103075	MAIN MULTIPLEXER	主转接器	AR	
87232329V03	4737	AIR DATA MODULE, ADM	大气数据组件	AR	SV
9599-607-14942	14942-113	RADIO ALTIMETER TRANSCIEV	无线电高度收发机	AR	SV
1209-100	20751	PRESSURE SWITCH	压力电门	AR	SV
710100-2	49FPPP	IRIDIUM COMMUNICATION SY	铱星通信系统	AR	
8ES005309-00	2424	POWER SUPPLY UNIT	电源供应组件	AR	
622-5130-021	11YPH	WEATHER RADAR DUAL CTL UN	气象雷达控制组件	AR	
3106-89	1464	LOCALIZER ANTENNA	航向天线	AR	
Z130H0086110	01179	FORWARD ATTENDANT PANEL	前乘务员面板	AR	
ACP2788AB04	5741	AUDIO CONTROL PANEL	音频控制面板	AR	SV
ACP2788AB04	3192	AUDIO CONTROL PANEL	音频控制面板	AR	SV
ACP2788AB04	2788-8558	AUDIO CONTROL PANEL	音频控制面板	AR	SV
C12404AB02	C12404001	ATC/TCAS CONTROL UNIT	ATC/TACS控制组件	AR	

3720-01-01	UL6600	FIRE DETECTION UNIT	火警探测组件	AR	
87232329V03	2334	•	大气数据组件	AR	SV
60128-101	C3475	SURVIVAL KIT	救生包	AR	SV
60128-101	C2558	SURVIVAL KIT	救生包	AR	SV
60128-101	C1808	SURVIVAL KIT	救生包	AR	SV
60128-101	C3593	SURVIVAL KIT	救生包	AR	SV
5XA005032-01	1330	LIGHT CONTROUER	照明控制器	AR	
5XA005033-00	2404	LIGHT CONTROUER	照明控制器	AR	
119003-21	004-04734	SMOKEHOODS (PBE	防烟面罩	AR	
119003-21	0A4-29707	SMOKEHOODS (PBE	防烟面罩	AR	
119003-21	004-04794	SMOKEHOODS (PBE	防烟面罩	AR	
119003-21	0A4-29709	SMOKEHOODS (PBE	防烟面罩	AR	
119003-21	0A4-29710	SMOKEHOODS (PBE	防烟面罩	AR	
119003-21	0A4-29708	SMOKEHOODS (PBE	防烟面罩	AR	
119003-21	0A4-29724	SMOKEHOODS (PBE	防烟面罩	AR	
87232329V03	2340	AIR DATA MODULE, ADM	大气数据组件	AR	SV
87232329V03	2953	AIR DATA MODULE, ADM	大气数据组件	AR	SV
87232329V03	3752	AIR DATA MODULE, ADM	大气数据组件	AR	SV
87232329V03	3751	AIR DATA MODULE, ADM	大气数据组件	AR	SV
64141-580-1	4810	STANDBY ALTIMETER	备用高度表	AR	SV
648822061	2389	BRAKE PRESSURE INDICATOR	刹车压力传感器	AR	
VD3920	99021335	EXTRACTION FAN	厕所和厨房抽气风	AR	SV
30-1883-5	1902	RH WING/ENGINE SCAN LIGHT	大翼发动机观察灯	AR	
30-1883-6	1921	RH WING/ENGINE SCAN LIGHT	大翼发动机观察灯	AR	
1X2005097-00	1074320	LOGO LIGHT	航徽灯	AR	SV
1X2005097-00	2759	LOGO LIGHT	航徽灯	AR	SV
Y005-2	3396	TRANSFORMER RECTIFIER	变压整流器	AR	
Y005-2	3393	TRANSFORMER RECTIFIER	变压整流器	AR	
622-5001-504	149JW	VOR/ADF DDRMI	无线电电磁指示器	AR	
AC68A200	6272	MULTIPUROSE DISK DRIVE UN	多用途磁盘驱动器	AR	
Z020H0001112	01209	PROGRAM A. TEST PANEL	程序测试面板	AR	
622-8973-104	40KV5G	TCAS DIRECTIONAL ANTENNA	空中防撞系统天线	AR	
8ES005304-00	1400	POWER SUPPLY UNIT	尾锥频闪灯电源供	AR	SV
622-8973-104	4588HM	TCAS DIRECTIONAL ANTENNA	空中防撞系统天线	AR	
682007004	UEDH36998	RAT GROUND CONTROL UNITR/	地面控制组件	AR	
655CC01Y1	2320	CONTACTOR	接触器	AR	
528-80	3208	WING TIP NAVIGATION LIGHT	翼尖导航灯	AR	
711TS06Y	1155	NW. STRG. HANDWHEEL XMTR. UN	前轮转弯手轮控制	AR	SV
655CC01Y1	2319	CONTACTOR	接触器	AR	
3001-01-111	9901-0107	LINEAR ACCELEROMETER	三轴线性加速度计	AR	SV
564CA01Y1	11000	CONTACTOR	接触器	AR	
5906733	8472	AV CURRENT TRANSFORMER	交流电流互感器	AR	
5906733	8471	AV CURRENT TRANSFORMER	交流电流互感器	AR	
210TS07Y01	1999	LANDING GEAR CONTROL LEVI	起落架正常控制手	AR	SV
5XA005033-00	2239	LIGHT CONTROLLER	照明控制器	AR	
93-A150-20	01330	CVR MECROPHONE AMPLIFIER	驾驶舱语音记录器	AR	
755D0000-01	81210-663	REHEATER	再加热器	AR	
755D0000-01	81210-651	REHEATER	再加热器	AR	
C19DS0016	143	RESERVOIR HYDR. YELLOW	黄液压系统油箱	AR	
18301905-1	48697D	PRESSURE GAUGE AIR	气压表	AR	
70400	80918383	VALVE RELIEF AIR	空气安全阀	AR	

HTE690035-1	548	AIR PRESSURE SWITCH AIR	压力电门	AR	
C19DS0026	150	GREEN HYDR RESERVOIR	绿液压系统油箱	AR	
18301905-1	49137D	AIR PRESSURE GAUGE	气压表	AR	
70400	80918437	AIR VALVE RELIEF	空气安全阀	AR	
HTE690035-1	622	PRESSURE SWITCH	压力电门	AR	
786-052	2973	PROTECTOR	保护器	AR	
747A0000-03	02331	EXTRACTOR-WATER	水分离器	AR	
747A0000-03	02332	EXTRACTOR-WATER	水分离器	AR	
C19BQ0016	170	RESERVOIR HYDR. BLUE	蓝系统液压油箱	AR	
18301905-1	49359D	PRESSURE GAUGE AIR	气压表	AR	
70400	12317	VALVE RELIEF AIR	空气安全阀	AR	
HTE690035-1	Q20140039	PRESSURE SWITCH AIR	压力电门	AR	
786-052	2870	PROTECTOR	保护器	AR	
693335	MX629997	PACKAGE E-PUMP	电动泵	AR	
1553A0000-01	00146	MANIFOLD-HP ASSY	高压总管组件	AR	
QA06304	RF11-1923	FILTER-HP	高压油滤	AR	
CZ9284E	HEK17559	PRESSURE TRANSDUCER	传感器	AR	SV
50-2-3100-00	8814	SWITCH PRESSURE	压力电门	AR	SV
50-2-3100-00	8826	SWITCH PRESSURE	压力电门	AR	SV
9107A0005-01	007	SWITCH PRESSURE	压力电门	AR	
114151004	CWDD-DH43	VALVE RELIEF	释压活门	AR	
ZCV64-16	90104123	CHECK VALVE	单向活门	AR	
71190400010NCOA	M75931017	SAMPLING VALVE	取样活门	AR	SV
31077-111	9079	INBD. SPOILER SERVOCONTROI	扰流板伺服控制器	AR	
31077-111	9081	INBD. SPOILER SERVOCONTROI	扰流板伺服控制器	AR	
31077-111	9083	INBD. SPOILER SERVOCONTROI	扰流板伺服控制器	AR	
31077-111	27834	INBD. SPOILER SERVOCONTROI	扰流板伺服控制器	AR	
31077-111	9077	INBD. SPOILER SERVOCONTROI	扰流板伺服控制器	AR	
31077-211	53881	INBD. SPOILER SERVOCONTROI	扰流板伺服控制器	AR	
31077-111	31295	INBD. SPOILER SERVOCONTROI	扰流板伺服控制器	AR	
31077-111	9075	INBD. SPOILER SERVOCONTROI	扰流板伺服控制器	AR	
31077-111	9078	INBD. SPOILER SERVOCONTROI	扰流板伺服控制器	AR	
31077-111	9076	INBD. SPOILER SERVOCONTROI	扰流板伺服控制器	AR	
829B0000-01	04356	ACTUATOR A-SLAT缝翼A	型作动器	AR	
829B0000-01	04357	ACTUATOR A-SLAT缝翼A	型作动器	AR	
830A0000-04	16906	ACTUATOR B-SLAT缝翼B	型作动器	AR	
830A0000-04	16904	ACTUATOR B-SLAT缝翼B	型作动器	AR	
831A0000-05	04379	WING TIP BRAKE	襟翼翼尖刹车	AR	
831A0000-05	04380	WING TIP BRAKE	襟翼翼尖刹车	AR	
830A0000-04	16905	ACTUATOR B-SLAT缝翼B	型作动器	AR	
830A0000-04	16899	ACTUATOR B-SLAT缝翼B	型作动器	AR	
830A0000-04	16895	ACTUATOR B-SLAT缝翼B	型作动器	AR	
830A0000-04	16898	ACTUATOR B-SLAT缝翼B	型作动器	AR	
830A0000-04	16901	ACTUATOR B-SLAT缝翼B	型作动器	AR	
830A0000-04	16894	ACTUATOR B-SLAT缝翼B	型作动器	AR	
830A0000-04	16897	ACTUATOR B-SLAT缝翼B	型作动器	AR	
830A0000-04	16893	ACTUATOR B-SLAT缝翼B	型作动器	AR	
829B0000-01	04359	ACTUATOR A-SLAT缝翼A	型作动器	AR	
829B0000-01	04358	ACTUATOR A-SLAT缝翼A	型作动器	AR	
830A0000-04	16903	ACTUATOR B-SLAT缝翼B	型作动器	AR	
830A0000-04	16902	ACTUATOR B-SLAT缝翼B	型作动器	AR	

830A0000-04	16900	ACTUATOR B-SLAT缝翼B	型作动器	AR	
830A0000-04	16896	ACTUATOR B-SLAT缝翼B	型作动器	AR	
830A0000-04	16891	ACTUATOR B-SLAT缝翼B	型作动器	AR	
830A0000-04	16892	ACTUATOR B-SLAT缝翼B	型作动器	AR	
P99C38-601	21127	FUEL PUMP - TANK	燃油泵	AR	
P99C38-601	21128	FUEL PUMP - TANK	燃油泵	AR	
14320-230-203	0707	FLUSH CONTROL UNIT	冲洗控制单元	AR	
15800-440	515	RINSE VALVE	冲洗活门	AR	SV
14320-230-205	7125	FLUSH CONTROL UNIT	冲洗控制单元	AR	
15800-440	13881	RINSE VALVE	冲洗活门	AR	SV
31075-840	17566	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
31075-840	7966	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
793A0000-07	V2221	ACTUATOR-FLAP, NO	号襟翼滑轨作动器	AR	
C24730100	H1720	NLG. DOOR UPLOCK ASSY	前起落架舱门上位	AR	
810A0000-05	08412	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	SV
748A0000-08	02322	VALVE-ANTI ICING	防冰活门	AR	
810A0000-05	03776	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	SV
810A0000-05	03775	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	SV
31075-840	9370	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
A25461-104	H0856	AUTOMATIC SELECTOR	自动选择器	AR	
C24730001-6	H2129	NLG. UPLOCK ASSY	前起落架上位锁组	AR	
794A0000-06	U2107	ACTUATOR-FLAP, NO	号襟翼滑轨作动器	AR	
769106A	CWDD-DH2-	AGCM	地面检查模块	AR	
201117017	CWDD-DH3-	MLG UPLOCK	主起落架上位锁组	AR	
QA05561	RH1-1006	FILTER HYD. LP	低压油滤组件	AR	
TM113-1	2757	TRANSDUC. /SWITCH-TEMP	温度传感器	AR	
793A0000-07	V2220	ACTUATOR-FLAP, NO	号襟翼滑轨作动器	AR	
792A0000-07	V2227	ACTUATOR-FLAP, NO	襟翼滑轨号作动器	AR	
791A0000-06	V2200	FLAP ACTUATOR NO	襟翼作动器	AR	
QA05561	RH1-1005	FILTER HYD. LP	低压油滤组件	AR	
TM113-1	10208	TEMP SENSOR TRANSMITTER	温度传感器	AR	
794A0000-06	U2048	ACTUATOR-FLAP, NO	号襟翼滑轨作动器	AR	
792A0000-07	V2226	FLAP ACTUATOR NO	襟翼作动器	AR	
791A0000-06	V2202	FLAP ACTUATOR NO	襟翼作动器	AR	
201122008	CWDD-DH31	DOOR UPLOCK	主起落架舱门上位	AR	
201117018	CWDD-DH17	MLG UPLOCK	主起落架上位锁组	AR	
801A0200-01	V2101	SHAFT ASSY	扭力轴	AR	
801C1900-02	V4278	STEADY BEARING ASSY	支撑轴承	AR	
801A0200-01	V2102	TORQUE SHAFT	扭力轴	AR	
801C1900-02	V4279	STEADY BEARING ASSY	支撑轴承	AR	
801B4600-02	V2137	TORQUE SHAFT	扭力轴	AR	
769B0000-01	02253	CHECK VALVE	单向阀组件	AR	
769B0000-01	02245	CHECK VALVE	单向阀组件	AR	
622-5134-064	2125	WEATHER RADAR RT DUAL MOI	气象雷达收发机安	AR	
786A0000-12	02219	POWER CONTROL UNIT	动力控制组件	AR	
9028A0004-01	08777	POSITION PICK OFF UNIT	位置反馈组件	AR	
9028A0004-01	08785	POSITION PICK OFF UNIT	位置反馈组件	AR	
787A0000-07	04480	VALVE BLOCK	活门块	AR	
787A0000-07	04501	VALVE BLOCK	活门块	AR	
786A0000-12	02222	POWER CONTROL UNIT	动力控制组件	AR	
9028A0004-01	08808	POSITION PICK OFF UNIT	位置反馈组件	AR	

9028A0004-01	08419	POSITION PICK OFF UNIT	位置反馈组件	AR	
787A0000-07	04485	VALVE BLOCK	活门块	AR	
787A0000-07	04526	VALVE BLOCK	活门块	AR	
C93R38-601	20925	FUEL PUMP CANISTER	燃油泵护罩	AR	
C93R38-601	20951	FUEL PUMP CANISTER	燃油泵护罩	AR	
C93R38-606	21129	FUEL PUMP CANISTER	燃油泵护罩	AR	
C93R38-606	21113	FUEL PUMP CANISTER	燃油泵护罩	AR	
C93R38-606	21122	FUEL PUMP CANISTER	燃油泵护罩	AR	
C93R38-606	21123	FUEL PUMP CANISTER	燃油泵护罩	AR	
4101002-9	1365	POWER TRANSFER UNIT	动力转换组件	SV	SV
FE240-004	1559	DOOR DAMPER CYLINDER	客舱门紧急阻尼气	AR	SV
FE240-004	1472	DOOR DAMPER CYLINDER	客舱门紧急阻尼气	AR	SV
FE240-004	1478	DOOR DAMPER CYLINDER	客舱门紧急阻尼气	AR	SV
114170009	CWDD-DH96	SELECTOR VALVE MANIFOLD	选择活门总管组件	AR	
114079018	CWDD-DH53	SELECTOR VALVE	选择活门	AR	
114079019	CWDD-DH89	SELECTOR VALVE	选择活门	AR	
ZCV64-12	81113774	CHCK VALVE	单向活门	AR	
11-851154-6	02224	PRECOOLER EXCHANGER	引气预冷交换器	AR	
11-851154-6	03104	PRECOOLER EXCHANGER	引气预冷交换器	AR	
1554A0000-01	00174	BLUE HYDRAULIC SYSTEM MAN	蓝系统液压总管	AR	
QA06304	RG11-2275	FILTER-HP	高压油滤	AR	
CZ9284E	HEK16695	PRESSURE TRANSDUCER	压力传感器	AR	SV
71190400010NCOA	508280006	SAMPLING VALVE	取样活门	AR	SV
BHC1060-04	3570	PRIORITY VALVE	优先活门	AR	SV
114151004	CWDD-DH78	RELIEF VALVE	释压活门	AR	
ZCV64-10	901182	CHECK VALVE	单向活门	AR	
50-2-3100-00	10896	PRESSURE SWITCH	压力电门	AR	SV
50-2-3100-00	10897	PRESSURE SWITCH	压力电门	AR	SV
9107A0004-01	020	PRESSURE SWITCH	压力电门	AR	
1559A9900-02	1559A99L	GREEN HYDRAULIC SYSTEM MA	绿系统液压总管	AR	
QA06304-01	RY9-3810	FILTER-HP	高压油滤	AR	
CZ9284E	HEK60017	PRESSURE TRANSDUCER	压力传感器	AR	SV
450-2-3100-00	29545	PRESSURE SWITCH	压力电门	AR	SV
450-2-3100-00	29567	PRESSURE SWITCH	压力电门	AR	SV
P7119HP	459490030	SAMPLING VALVE	取样活门	AR	
ZCV64-16	12-0525-4	CHECK VALVE	单向活门	AR	
114151004	CH1207826	RELIEF VALVE	释压活门	AR	
9107A0004-02	15306	PRESSURE SWITCH	压力电门	AR	
V2T152D	L03148	AIR VALVE	空气活门	AR	SV
V2T152D	07445	AIR VALVE	空气活门	AR	SV
V2T152D	3399	AIR VALVE	空气活门	AR	SV
CT191B	1148	AIR CHECK VALVE	单向阀	AR	
V2T127D	2036	AIR BUTTERFLY VALVE	空调进气活门	AR	SV
C24839010-2	H1777	MANIFOLD (ALTN BRK SV) B	备用刹车伺服活门	AR	
C25243002-2	H3874	SAFETY VALVE	安全活门	AR	
C25243002-2	H3862	SAFETY VALVE	安全活门	AR	
C20103500	08277	BRAKE SERVOVALVE	刹车伺服活门	AR	
C20103500	08278	BRAKE SERVOVALVE	刹车伺服活门	AR	
4063-18221	9917253	ISOLATION VALVE	后货舱通气隔离活	AR	SV
4063-18221	9917259	ISOLATION VALVE	后货舱通气隔离活	AR	SV
1303A0000-04	01816	VALVE, FLOW CONTROL	上游风管的流量控	AR	

1303A0000-04	00290	VALVE, FLOW CONTROL	上游风管的流量控	AR	
4-60000H882-00	TH-02549	DRAIN MAST	排水桅杆	AR	SV
4-60000H882-00	98094	DRAIN MAST	排水桅杆	AR	SV
P99C38-601	21454	FUEL PUMP - TANK	燃油泵	AR	
P99C38-601	21129	FUEL PUMP - TANK	燃油泵	AR	
P99C38-601	21130	FUEL PUMP - TANK	燃油泵	AR	
9508175	FRTR146BF	FLOAT VENT VALVE	通气浮子活门	AR	
9508175	FRTR145BF	FLOAT VENT VALVE	通气浮子活门	AR	
9508175	FRTR144BF	FLOAT VENT VALVE	通气浮子活门	AR	
9508175	FRTR143BF	FLOAT VENT VALVE	通气浮子活门	AR	
330400M01	2159	THROTTLE CONTROL UNIT	推力控制组件	AR	
330400M01	2156	THROTTLE CONTROL UNIT	推力控制组件	AR	
P99C38-601	20463	FUEL PUMP - TANK	燃油泵	AR	
1158000-21	FR517BA	REFUEL VALVE	加油活门	AR	SV
HTE900133	FR163BA	FUEL DEFUEL/TRANSFER VALV	抽油传输活门	AR	
HTE900135	FR170BA	FUEL DEFUEL/TRANSFER VALV	燃油传输活门	AR	
1158000-21	FR065BB	REFUEL VALVE	加油活门	AR	SV
1158000-21	FR139BB	REFUEL VALVE	加油活门	AR	SV
1320A0000-02	1320A00L	VALVE, TRIM AIR	配平空气活门	AR	
746A0000-06	0746A00L	VALVE, TRIM AIR PRESS	压力调节阀	AR	SV
72184101	7337	WATER HEATER	热水器	AR	
72184101	7805	WATER HEATER	热水器	AR	
72184101	8040	WATER HEATER	热水器	AR	
72011412	0419	COFFEE MAKER	咖啡机	AR	
72011412	23140	COFFEE MAKER	咖啡机	AR	
S4-3300520-01	2239	HYD ACTUATOR	液压作动筒	AR	SV
S4-3300520-01	2236	HYD ACTUATOR	液压作动筒	AR	SV
S4-3300520-01	2310	HYD ACTUATOR	液压作动筒	AR	SV
833A1800-01	V2104	TORQUE SHAFT	扭力轴	AR	
833B0300-01	V2099	TORQUE SHAFT	扭力轴	AR	
833A1600-01	V2103	TORQUE SHAFT	扭力轴	AR	
833A1900-01	V2106	TORQUE SHAFT	扭力轴	AR	
833B1300-01	V2099	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23278	STEADY BEARING ASSY	支撑轴承	AR	
833A1900-01	V2105	TORQUE SHAFT	扭力轴	AR	
833A1600-01	V2102	TORQUE SHAFT	扭力轴	AR	
833A1700-01	V2102	TORQUE SHAFT	扭力轴	AR	
833B0300-01	V2098	TORQUE SHAFT	扭力轴	AR	
833A1800-01	V2103	TORQUE SHAFT	扭力轴	AR	
833A1700-01	V2103	TORQUE SHAFT	扭力轴	AR	
833A2000-01	V2109	TORQUE SHAFT	扭力轴	AR	
833B1200-01	V2105	TORQUE SHAFT	扭力轴	AR	
833C2300-02	V2143	STEADY BEARING ASSY	支撑轴承	AR	
833A1500-01	V2105	TORQUE SHAFT	扭力轴	AR	
833B0800-01	V2100	TORQUE SHAFT	扭力轴	AR	
833A1400-01	V2099	TORQUE SHAFT	扭力轴	AR	
833A2400-02	V2766	TORQUE SHAFT	扭力轴	AR	
114122014	CH1010331	DOOR ACTUATOR, MLG	主起落架舱门作动	AR	
114122014	CH1009939	DOOR ACTUATOR, MLG	主起落架舱门作动	AR	
4279204	101863	LH. MOTOR CONVERTER	雨刷马达变频器	AR	
4279198	102810	LH. MOTOR CONVERTER	雨刷马达变频器	AR	SV

801A0800-01	V2104	TORQUE SHAFT	扭力轴	AR	
833A1400-01	V2100	TORQUE SHAFT	扭力轴	AR	
833B0800-01	V2099	TORQUE SHAFT	扭力轴	AR	
833A2400-02	V2765	TORQUE SHAFT	扭力轴	AR	
801B1600-01	V2104	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23269	STEADY BEARING ASSY	支撑轴承	AR	
833B1200-01	V2104	TORQUE SHAFT	扭力轴	AR	
833C2300-02	V2142	STEADY BEARING ASSY	支撑轴承	AR	
833A1500-01	V2106	TORQUE SHAFT	扭力轴	AR	
801B1200-01	V2095	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23274	STEADY BEARING ASSY	支撑轴承	AR	
801B4800-01	V2107	TORQUE SHAFT	扭力轴	AR	
801B0500-01	V2101	TORQUE SHAFT	扭力轴	AR	
801B1300-01	V2097	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23268	STEADY BEARING ASSY	支撑轴承	AR	
801B0600-01	V2099	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23272	STEADY BEARING ASSY	支撑轴承	AR	
801B1400-01	V2098	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23266	STEADY BEARING ASSY	支撑轴承	AR	
801B4700-01	V2116	TORQUE SHAFT	扭力轴	AR	
833B1300-01	V2098	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23282	STEADY BEARING ASSY	支撑轴承	AR	
801B4400-01	V2094	TORQUE SHAFT	扭力轴	AR	
801B4700-01	V2115	TORQUE SHAFT	扭力轴	AR	
801B1600-01	V2103	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23280	STEADY BEARING ASSY	支撑轴承	AR	
801B4800-01	V2108	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V22783	STEADY BEARING ASSY	支撑轴承	AR	
833B1000-01	V2114	TORQUE SHAFT	扭矩轴	AR	
801B0500-01	V2102	TORQUE SHAFT	扭力轴	AR	
801A0300-01	V2101	TORQUE SHAFT	扭力轴	AR	
833B0900-01	V2120	TORQUE SHAFT	扭力轴	AR	
833B1000-01	V2115	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V22782	STEADY BEARING ASSY	支撑轴承	AR	
801C1700-02	V23265	STEADY BEARING ASSY	支撑轴承	AR	
801B1200-01	V2096	TORQUE SHAFT	扭力轴	AR	
801B4400-01	V2095	TORQUE SHAFT	扭力轴	AR	
801A0300-01	V2102	TORQUE SHAFT	扭力轴	AR	
801A0800-01	V2103	TORQUE SHAFT	扭力轴	AR	
833B0900-01	V2119	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23279	STEADY BEARING ASSY	支撑轴承	AR	
801B1400-01	V2097	TORQUE SHAFT	扭力轴	AR	
D5757030501500G	02520	STRU ASSY	互连杆	AR	
D5757030501500G	01959	STRU ASSY	互连杆	AR	
D2727025000400	7881437	ROD-SPRING	定中弹簧	AR	
801B1300-01	V2098	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23275	STEADY BEARING ASSY	支撑轴承	AR	
833B0200-01	V2099	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23267	STEADY BEARING ASSY	支撑轴承	AR	
801C1700-02	V23270	STEADY BEARING ASSY	支撑轴承	AR	
833B0200-01	V2098	TORQUE SHAFT	扭力轴	AR	

833B1100-01	V2101	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23273	STEADY BEARING ASSY	支撑轴承	AR	
833A2000-01	V2108	TORQUE SHAFT	扭力轴	AR	
833B0400-01	V2102	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23276	STEADY BEARING ASSY	支撑轴承	AR	
833B1100-01	V2102	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23277	STEADY BEARING ASSY	支撑轴承	AR	
801C1700-02	V23264	STEADY BEARING ASSY	支撑轴承	AR	
833B0400-01	V2101	TORQUE SHAFT	扭力轴	AR	
41-2-1100-02	1227	ACTUATOR, EMER. RAM AIR	应急冲压空气进口	AR	SV
114083003	CWDD-DH17	VENT VALVE, MLG	通风活门	AR	
831A0000-05	04378	WING TIP BRAKE	翼尖刹车	AR	
831A0000-05	04381	WING TIP BRAKE	翼尖刹车	AR	
114086001	CWDD-DH13	VENT VALVE, MLG	通风活门	AR	
761B0000-01	04859	ACTUATOR, RAMAIR INLET	进气挡板制动器	AR	
22715-000-02	H0634	NLG DOOR ACTUATING CYLINDER	前起落架舱门作动	AR	
748A0000-08	02332	ANTI-ICE VALVE	防冰活门	AR	
QA05604	RG11-3975	FILTER HYD. LP	低压油滤组件	AR	
TM113-1	2652	TEMPERATURE TRANSMITTER	温度传感器	AR	
E03A00	3655	ENG FIRE-SHUT-OFF-VALVE	发动机防火关断活门	AR	
6730F010000	6730-1195	FAN AIR VALVE	风扇气动活门	AR	
0212KTU-07	991337	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探测	AR	
0212KTU-04	992154	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探测	AR	
0212KTU-07	991336	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探测	AR	
0212KTU-08	991357	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探测	AR	
0212KTU-01	991423	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探测	AR	
0212KTU-16	991916	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探测	AR	
0212KTU-16	FR1501702	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探测	AR	
0212KTU-01	991416	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探测	AR	
761B0000-01	02379	ACTUATOR, RAMAIR INLET	进气挡板制动器	AR	
HTE900096	FR013BB	TRANSFER VALVE DRIVE SHAFT	传输活门驱动	AR	
HTE900096	FR014BB	TRANSFER VALVE DRIVE SHAFT	传输活门驱动	AR	
HTE900095	FR019BB	TRANSFER VALVE DRIVE SHAFT	传输活门驱动	AR	
HTE900095	FR020BB	TRANSFER VALVE DRIVE SHAFT	传输活门驱动	AR	
833A2100-01	V2691	DRIVE SHAFT	扭力轴	AR	
833A2100-01	V2690	DRIVE SHAFT	扭力轴	AR	
L95F50-603	23029	FUEL TK OVERPRESSURE PROTECT	过压保护器	AR	SV
790A0000-02	V3103	BEVEL GEARBOX 19 DEG	度斜齿轮箱	AR	
827A0000-02	V1061	GEARBOX, T-T	型齿轮箱	AR	
D290-70174-000-00	952	VERTEILER BLOCK	刹车总管组件	AR	
3022016-000	G1731326	RELIEF VALVE	释压活门	AR	
ZCV63-8	14-0506-1	CHECK VALVE	单向活门	AR	
CZ9DM6A	HAK8000	PRESSURE TRANSDUCER	压力传感器	AR	
0212KTU-14	986395	CENTRE TANK PROBE, FQI	中央油箱燃油量探测	AR	
0212KTU-14	986393	CENTRE TANK PROBE, FQI	中央油箱燃油量探测	AR	
801A1500-01	V2110	TORQUE SHAFT	扭力轴	AR	
0212KTU-03	991322	WING TANK PROBE, FQI	机翼油箱燃油量探测	AR	
0212KTU-03	991321	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探测	AR	
0212KTU-05	991285	WING TANK PROBE, FQI	机翼油箱燃油量探测	AR	
0212KTU-05	991284	WING TANK PROBE, FQI	机翼油箱燃油量探测	AR	
0212KTU-14	986392	CENTRE TANK PROBE, FQI	中央油箱燃油量探测	AR	

0212KTU-06	991391	WING TANK PROBE, FQI	机翼油箱燃油量探	AR	
0212KTU-06	991390	WING TANK PROBE, FQI	机翼油箱燃油量探	AR	
0212KTU-14	986394	CENTRE TANK PROBE, FQI	中央油箱燃油量探	AR	
0212KTU-15	985924	CENTRE TANK PROBE, FQI	中央油箱燃油量探	AR	
HTE310021-1	FR310BA	AIR INLET VALVE	空气进气活门	AR	
801C1900-02	V4236	STEADY BEARING ASSY	支撑轴承	AR	
HTE310021-1	FR048BB	AIR INLET VALVE	空气进气活门	AR	
833C5200-02	V2156	STEADY BEARING ASSY	支撑轴承	AR	
9815715	FRTR014BF	RELIEF VALVE	中央油箱释压活门	AR	
114161003	CWDD-DH1	MODULE-JACK CONTROL	收放控制组件	AR	
833C5200-02	V2155	STEADY BEARING ASSY	支撑轴承	AR	
FRH050003	FR003BB	INDICATOR, MAGNETIC LEVEL	磁性油尺组件	AR	
FRH050003	FR005BB	INDICATOR, MAGNETIC LEVEL	磁性油尺组件	AR	
E03A00	3449	ENG FIRE-SHUT-OFF-VALVE	发动机防火关断活	AR	
HTE900087-001	FR060BB	FUEL TRANSFER VALVE	燃油传输活门	AR	
HTE900087-001	FR059BB	FUEL TRANSFER VALVE	燃油传输活门	AR	
6610-20560-01	353	ACTUATOR, ROTARY	混合器挡板制动器	AR	SV
1320A0000-02	1320-2863	VALVE, TRIM AIR	配平空气活门	AR	
630CC01Y1	7351	CONTACTOR	接触器	AR	
640CC01Y1	8992	200A SINGLEPOLE CONTACTOR	接触器	AR	
564CA01Y1	11002	CONTACTOR	接触器	AR	
1209-100	33407	PRESSURE SWITCH	压力电门	AR	SV
630CC01Y1	7258	100A SINGLE POLE CONTACTOR	接触器	AR	
630CC01Y1	7206	CONTACTOR	接触器	AR	
630CC01Y1	7227	CONTACTOR	接触器	AR	
564CA01Y1	10968	CONTACTOR	接触器	AR	
630CC01Y1	7354	CONTACTOR	接触器	AR	
640CC01Y1	8894	200A SINGLEPOLE CONTACTOR	接触器	AR	
564CA02FY1	3724	CONTACTOR	接触器	AR	
2598D	5342	LIGHT TRANSFORMER	灯变压器	AR	
600612-00-510	14165353	SENSOR, DUCT. TEMP	后货舱温度传感器	AR	
2LA455010-00	1291	STROBE LIGHT	闪光灯	AR	SV
564CA01Y1	10999	CONTACTOR	接触器	AR	
1209-100	3459	PRESSURE SWITCH	压力电门	AR	SV
1905A0000-01	01069	SAFETY VALVE L. G. S	起落架安全活门	AR	
C20215000	03638	BRAKE PEDAL TRANSMITTER	刹车脚踏传感器组	AR	SV
630CC01Y1	7353	CONTACTOR	接触器	AR	
3214-54-10	1633	EPSU, EMERGENCY POWER SUPPLY	应急电源供应组件	AR	
640CC01Y1	8993	200A SINGLEPOLE CONTACTOR	接触器	AR	
Z030H0005110	34602	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	34606	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
0212KTU-17	991550	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
3530000-1	FRTR33214	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
3540000-1	FRTR4116F	TEMPERATURE SENSOR	温度传感器	AR	
0212KTU-04	992153	WING TANK PROBE, FQI	机翼油箱燃油量探	AR	
0212KTU-13	991757	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
3540000-1	FRTR4115F	TEMPERATURE SENSOR	温度传感器	AR	
3530000-1	FRTR33207	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
3540000-1	FRTR4117F	TEMPERATURE SENSOR	温度传感器	AR	
3530000-1	FRTR32534	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
2LA005128-01	5719	TAIL STROBE LIGHT	尾频闪灯	AR	

D2751004-3001-AC	FR3309	FCV UVPANELUV	面板	AR	
780B0000-01	0780B00L	FLAP/SLAT COMMAND SENSOR	指令传感器组件	AR	SV
8ES403703-02	1062326	TRANSFORMER	变压器	AR	
ZCV63-6-1	9031771	HYDRAULIC CHECK VALVE	单向活门	AR	
9028A0004-01	09044	PPU, POSITION PICK-OFF UN	不对称位置传感器	AR	
521A0200-01	03839	ADAPTER PPU-ASSY	适配器组件	AR	
766A0000-01	2209-01	SENSOR TEMP. PNEUM	气动温度传感器	AR	
3530000-1	FRTR30517	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
3530000-1	FRTR33219	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
3530000-1	FRTR33203	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
3530000-1	FRTR33221	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
3530000-1	FRTR30513	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
3530000-1	FRTR33253	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
3530000-1	FRTR33266	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
3530000-1	FRTR33208	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
0212KTU-13	991756	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
3530000-1	C10151547	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
3530000-1	FRTR33220	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
0212KTU-17	991577	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
3530000-1	FRTR33213	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
3530000-1	FRTR33252	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
3530000-1	FRTR33210	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
3530000-1	C990025	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
736A0000-02	04377	MIX TEMPERATURE SENSOR	混合温度传感器	AR	
736A0000-02	04018	MIX TEMPERATURE SENSOR	混合温度传感器	AR	
450-2-3100-00	09149	ELECTRIC PUMP PRESSURE SV	电动泵压力电门	AR	SV
C51LM0020	2683	SELECTOR VALVE	选择活门	AR	
6-1404-0000-4	980320	HYDRAULIK HAND PUMP	手摇泵	AR	SV
3530000-1	FRTR33271	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
3530000-1	FRTR33226	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
DHE1141	2209-02	SWITCHES	电门	AR	SV
8410B2-4-90	8410B2-30	CAMERA	摄像头	AR	SV
3530000-1	FRTR33212	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
DHE1141	2209-03	SWITCHES	电门	AR	SV
S1821502-02	2622118-0	FIXED ELT	应急定位发射机	AR	SV
DHE1141	2209-01	SWITCHES	电门	AR	SV
3530000-1	FRTR33209	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
3530000-1	FRTR33218	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
8410B2-4-90	8410B2-29	CAMERA	摄像头	AR	SV
3540000-1	FRTR4118F	TEMPERATURE SENSOR	温度传感器	AR	
3530000-1	FRTR33206	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
3530000-1	FRTR33213	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
S67-1575-52	512-28521	ACTIVE GPS ANTENNA	天线	AR	
S67-1575-52	512-27829	ACTIVE GPS ANTENNA	天线	AR	
773A0000-01	07037	TEMPERATURE SENSOR	温度传感器	AR	
3601-91-675	246408	FIRE DETECTOR	火警探测器	AR	
2LA005469-00	6563	WARNING LIGHT PANEL	警告灯面板	AR	
9599-607-12352	9083	RADIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
2LA005469-00	6695	WARNING LIGHT PANEL	警告灯面板	AR	
9599-607-12352	15274	RADIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
773A0000-01	15411	TEMPERATURE SENSOR	温度传感器	AR	

9599-607-12352	15269	RADIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
773A0000-01	07676	TEMPERATURE SENSOR	温度传感器	AR	
9599-607-12352	54733	RADIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
3107-89	1922	MARKER ANTENNA	指点信标天线	AR	
0212KTU-11	991377	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
2134-00	YL4544	FIRE DETECTOR	火警探测器	AR	
0212KTU-09	991442	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
0212KTU-11	991378	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
0212KTU-09	991619	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
0212KTU-10	991671	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
0212KTU-09	991441	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
0212KTU-10	991670	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
986F12-1	2083	CHECK VALVE, PRESS. SER	压力勤务单向阀	AR	
S4-3402180	01423	CARGO DOOR ELECTRIC SELEC	电动手动选择阀门	AR	
BA24320A-1	54298	LAVATORY FIRE- EXTINGUISH	厕所灭火瓶	AR	SV
1091A0000-01	02172	WATER INJECTOR	喷水装置	AR	
986F12-1	2147	CHECK VALVE, PRESS. SER	压力勤务单向阀	AR	
1091A0000-01	02011	WATER INJECTOR	喷水装置	AR	
0212KTU-09	991443	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
BA21758	15501	LAVATORY FIRE- EXTINGUISH	厕所灭火瓶	AR	
BA24320A-1	54674	LAVATORY FIRE- EXTINGUISH	厕所灭火瓶	AR	SV
2LA005128-01	1019	OVERWING LIGHT AFT	大翼应急灯	AR	
5906734	12177	3 HOLE CURRENT TRANSFORME	交流电流互感器	AR	
5906734	12178	3 HOLE CURRENT TRANSFORME	交流电流互感器	AR	
5906734	12196	3 HOLE CURRENT TRANSFORME	交流电流互感器	AR	
5906734	12159	3 HOLE CURRENT TRANSFORME	交流电流互感器	AR	
DK120-90	AT153884	UNDER WATER ACOUSTIC BEAC	水下定位信标	AR	SV
C-5K	98111438	STANDBY COMPASS	备用罗盘	AR	
DK120-90	AT151966	UNDER WATER ACOUSTIC BEAC	水下定位信标	AR	SV
5906734	12179	3 HOLE CURRENT TRANSFORME	交流电流互感器	AR	
4550-01-482	3803	FIRE/OVHT DETECTOR	探测元件	AR	
J172ABM	10095	ACCELEROMETER	飞控加速度计	AR	
CMK80-01	2454	PRESSURE SWITCH	低压氧气压力电门	AR	
J172ABM	10115	ACCELEROMETER UNIT	飞控加速度计	AR	
J172ABM	10111	ACCELEROMETER UNIT	飞控加速度计	AR	
4550-01-482	3816	FIRE/OVHT DETECTOR	探测元件	AR	
J172ABM	10094	ACCELEROMETER	飞控加速度计	AR	
342B050000	16501	TEMP. CONTROL THERMOSTAT	风扇空气阀恒温控制	AR	SV
600615-00-503	20709	CONTROLLER, CARGO VENT	通风控制器	AR	SV
ZCV212	00607218	DOUBLE CHECK VALVE	双向活门	AR	
4020W35-3	2084	RAIN REPELLENT GAGE ASSY	防雨液计量组件	AR	
341E030000	02389	SOLENOID THERMOSTAT	压力调节活门控制	AR	SV
S4-3500711	0909	GROUND SERVICE MANIFO	地面渗漏测量总管	AR	
S4-3500711	0557	GROUND SERVICE MANIFO	地面渗漏测量总管	AR	
C49AA0221	1085	CANISTER, PUMP FUEL	燃油泵护罩	AR	
C12CB0010	1089	PUMP, FUEL	燃油泵	AR	
FRH230003C-A	M0108VPRC	PRESSURE REDUCING VALVE	减压阀	AR	
828A0000-02	V4166	BEVEL GEARBOX 63, 5DEG	度斜齿轮箱	AR	
828A0000-02	V4167	BEVEL GEARBOX 63, 5DEG	度斜齿轮箱	AR	
9028A0004-01	09045	POSITION PICK-OFF UNIT	反馈位置传感器组	AR	
9028A0004-01	09042	POSITION PICK-OFF UNIT	反馈位置传感器组	AR	

20700-300	1134	VALVE, FUEL	低压活门	AR	
QA05797	RH15957	FILTER, HYD. HP	油滤组件	AR	
ZCV63-6-1	9031767	HYDRAULIC CHECK VALVE	单向活门	AR	
D05000	7062	DRAIN VALVE	排水阀	AR	SV
208724-0	2356	EMERGENCY ESCAPE ROPE	逃生绳	AR	
208724-0	2355	EMERGENCY ESCAPE ROPE	逃生绳	AR	
972C10-1	1104	SHUTTLE VALVE	换向阀	AR	
ZCV63-6-1	90317131	HYDRAULIC CHECK VALVE	单向活门	AR	
QA05593	RG12-2193	FILTER HYD HP	高压油滤组件	AR	
L83A13-614	24988	WATER DRAIN VALVE	排水活门	AR	
QA05797	RG10-1713	FILTER HYD HP	壳体排放油滤组件	AR	
D2727000700600	151979463	ROD-SPRING	定中弹簧	AR	
114087008	CH1015313	DOOR BY-PASS VALVE, MLG	旁通活门	AR	
201122008	CWDD-DH22	DOOR UPLOCK, MLG	舱门上位锁	AR	
B42CA2002	19132	PRESSURE CHECK VALVE	压力单向活门	AR	
B42CA2002	24852	PRESSURE CHECK VALVE	压力单向活门	AR	
B42CA2002	21557	PRESSURE CHECK VALVE	压力单向活门	AR	
L83A13-614	24989	WATER DRAIN VALVE	排水活门	AR	
A25316-101	H2534	Dual Shuttle Valve	双重换向阀	AR	
L95F50-603	C00705	FUEL TK OVERPRESSURE PROT	过压保护器	AR	SV
L95F50-603	22996	FUEL TK OVERPRESSURE PROT	过压保护器	AR	SV
L83A13-614	24575	WATER DRAIN VALVE	排水活门	AR	
3901395	FRTR130BF	JET PUMP ASSY	引射泵	AR	
3901395	FRTR133BF	JET PUMP ASSY	引射泵	AR	
L83A13-614	24568	WATER DRAIN VALVE	排水活门	AR	
SC4700-5	4157	YAW DAMPER SERVOACTUATOR	偏航阻尼伺服作动	AR	SV
A25315-1	H1911	PARKING BRAKING VALVE	停留刹车活门	AR	
758A0000-02	02396	DOOR BY-PASS VALVE, MLG	旁通活门	AR	SV
S4-3500712	3641	GROUND SERVICE MANIFO	地面渗漏测量总管	AR	
828A0000-02	V4165	BEVEL GEARBOX 63, 5DEG	度斜齿轮箱	AR	
SC4700-5	1901	YAW DAMPER SERVOACTUATOR	偏航阻尼伺服作动	AR	SV
70200	4385	REPRESSURIZATION VALVE	油箱减压阀	AR	
70200	15410	REPRESSURIZATION VALVE	油箱减压阀	AR	
0727540	36051395	REFULE CAPER AND CABLE	加油口盖	AR	
530AL01CN	2988	PWR SUPPLY DECOUPLING UNI	供电分离组件	AR	
530AL01CN	2980	PWR SUPPLY DECOUPLING UNI	供电分离组件	AR	
2407-89-03	240789-18	ATC. ANTENNA	天线	AR	
2439-89-03	243989-38	ATC. ANTENNA	天线	AR	
2407-89-03	5053	ATC. ANTENNA	天线	AR	
AR4714-7	H-E0438	ELACTRICAL RWLEASE STRIKI	静电释放装置	AR	SV
758A0000-02	02406	VALVE-BYPASS	旁通活门	AR	SV
789A0000-02	V2135	LINE GEARBOX	线齿轮箱	AR	
114083003	CWDD-DH29	VENT VALVE	通风活门	AR	
789A0000-02	V2134	BEVEL GEARBOX 19 DEG	度斜齿轮箱	AR	
A25434006-3000	H3315	EMER. BRK. DUAL DISTR. VALVI	备用刹车分配双活	AR	
2598D	A19190	LIGHT TRANSFORMER	灯变压器	AR	
6730C010000	00529	FAN AIR VALVE	风扇气动活门	AR	
ST3100-23-10	2015	HANDSET	手持电话	AR	
HC3100-23-10	1749	HANDSET CRADLE	手持电话支架	AR	
ST3100-23-10	@20171214	HANDSET	手持电话	AR	
HC3100-23-10	08953	HANDSET CRADLE	手持电话支架	AR	

ST3100-23-10	2157	HANDSET	手持电话	AR	
HC3100-23-10	05408	HANDSET CRADLE	手持电话支架	AR	
ST3100-33-10	904	HANDSET	手持电话	AR	
HC3100-33-10	740	HANDSET CRADLE	手持电话支架	AR	
93-A055-66	51985	AMBIENT MICROPHONE	驾驶舱语音记录器	AR	
9811839	FRTR1008	CHECK VALVE	单向活门	AR	
9811839	FRTR1013	CHECK VALVE	单向活门	AR	
9811839	FRTR1011	CHECK VALVE	单向活门	AR	
9811839	FRTR1012	CHECK VALVE	单向活门	AR	
9811839	FRTR1010	CHECK VALVE	燃油泵单向活门	AR	
9811839	FRTR1009	CHECK VALVE	燃油泵单向活门	AR	
ZCV63-6-1	09-09192	HYDRAULIC CHECK VALVE	单向活门	AR	
C24840010-2	H1783	MANIFOLD (ALTN BRK SV) B	备用刹车伺服活门	AR	
C20103500	08247	BREAK SERVOVALE	刹车伺服活门	AR	
C20103500	13537	BREAK SERVOVALE	刹车伺服活门	AR	
C25243002-2	H3810	SAFETY VALVE	安全活门	AR	
C25243002-2	2209-01	SAFETY VALVE	安全活门	AR	
1556A9900-01	2209-01	HP-MANIFOLD	高压总管	AR	
ZCV64-12	80417318	HYDRAULIC CHECK VALVE	单向活门	AR	
BHC1060-04	3435	PRIORITY VALVE	优先活门	AR	SV
35-0F5-1000	Q0930007	A. L. T. B	信号灯控制板	AR	
35-0F5-1000	0F5015738	A. L. T. B	信号灯控制板	AR	
35-0F5-1000	0F5015737	A. L. T. B	信号灯控制板	AR	
35-0F5-1000	0F5015740	A. L. T. B	信号灯控制板	AR	
35-0F5-1000	0F5015741	A. L. T. B	信号灯控制板	AR	
35-0F5-1000	0F5015742	A. L. T. B	信号灯控制板	AR	
AR4709-3	N-C2983	COCKPIT SYSTEM CONTROLLE	驾驶舱门锁系统控	AR	
35-0F5-1000	0F5015736	A. L. T. B	信号灯控制板	AR	
2LA005543-10	322887	CAPTAIN FLOOD LIGHT UNIT	机长泛光灯	AR	
2LA005541-10	1133076	CAPTAIN FLOOD LIGHT UNIT	机长泛光灯	AR	
SB209L1A1-1484	100136	HYDR ACCUMULATOR	蓄压器	AR	
18330904-2	48303D	HIGH PRESSURE GAUGE	蓄压器压力表	AR	SV
HTE510016	C072557	ACCUMULATOR GAS CHECK VA	充气阀	AR	SV
HTE510016	M296CV119	ACCUMULATOR GAS CHARGING	蓄压器充气活门	AR	SV
18330904-2	48905D	PRESSURE GAGE	压力表	AR	SV
SB209L1A1-1484	112821	ACCUMULATOR	蓄压器	AR	
764A0000-03	07502	TEMPERATURE SENSOR	管路温度传感器	AR	
764A0000-03	07763	TEMPERATURE SENSOR	管路温度传感器	AR	
764A0000-03	08030	TEMPERATURE SENSOR	管路温度传感器	AR	
35-0F5-1000	0F5015748	A. L. T. B	信号灯控制板	AR	
35-0F5-1000	0F5015749	A. L. T. B	信号灯控制板	AR	
35-0F5-1000	0F5015747	A. L. T. B	信号灯控制板	AR	
35-0F5-1000	0F5015743	A. L. T. B	信号灯控制板	AR	
35-0F5-1000	0F5015744	A. L. T. B	信号灯控制板	AR	
35-0F5-1000	0F5015750	A. L. T. B	信号灯控制板	AR	
35-0F5-1000	0F5015745	A. L. T. B	信号灯控制板	AR	
2LA007307-00	2996	CABIN OVERPRESSURE INDICA	客舱过压指示灯	AR	SV
2LA007307-00	3048	CABIN OVERPRESSURE INDICA	客舱过压指示灯	AR	SV
35-0F5-1000	Q09300053	A. L. T. B	信号灯控制板	AR	
Z120H0048110	02077	AFT/ADDITIONAL ATTENDANT	附加乘务员面板	AR	
2LA007307-00	3051	CABIN OVERPRESSURE INDICA	客舱过压指示灯	AR	SV

2LA007307-00	3050	CABIN OVERPRESSURE INDICATOR	客舱过压指示灯	AR	SV
2LA005542-50	136	FLOOD LIGHT CENTER	中央探照灯	AR	
SB209L1A1-1483	20111	ACCUMULATOR	蓄压器	AR	SV
18330904-2	038984	PRESSURE GAGE	压力表	AR	SV
HTE510016	M385CV129	ACCUMULATOR GAS CHARGING	蓄压器充气活门	AR	SV
2407-89-03	5363	ATC/DME. ANTENNA	天线	AR	
2407-89-03	5364	ATC/DME. ANTENNA	天线	AR	
2407-89-03	5054	ATC/DME. ANTENNA	天线	AR	
195PN01Y01	1276	RUDDER TRIM INDICATOR	方向舵配平指示器	AR	SV
TA01Z6005	3321	AUTOTRANSFORMER	自耦变压器	AR	
766A0000-01	06347	SENSOR TEMP. PNEUM	自动温度传感器	AR	
788A0000-02	V2103	RIGHT ANGLE GEARBOX	右角齿轮箱	AR	
114087005	CWDD-DH15	DOOR BY-PASS VALVE, MLG	旁通活门	AR	
70200	4358	REPRESSURIZING VALVE	燃油箱释压活门	AR	
9028A0004-01	09043	POSITION PICK OFF UNIT	不对称位置传感器	AR	
790A0000-02	V3192	BEVEL GEARBOX 19 DEG	度斜齿轮箱	AR	
790A0000-02	V3193	BEVEL GEARBOX 19 DEG	度斜齿轮箱	AR	
521A0200-01	03838	ADAPTER PPU-ASSY	适配器组件	AR	
D323-70101-000-00	724	MANIFOLD ASSY	总管组件	AR	
762080-1	H0997	SAFETY VALVE L. G. S	安全活门	AR	SV
762080-1	H1020	SAFETY VALVE L. G. S	安全活门	AR	SV
114087005	CWDD-DH5	DOOR BY-PASS VALVE, MLG	旁通活门	AR	
828A0000-02	V4164	BEVEL GEARBOX 63, 5DEG	度斜齿轮箱	AR	
788A0000-02	V2104	RIGHT ANGLE GEARBOX	右角齿轮箱	AR	
801A1500-01	V2109	TORQUE SHAFT	扭力轴	AR	
801C1900-02	V4237	STEADY BEARING ASSY	支撑轴承	AR	
716TS06Y	1154	NW. STRG. HANDWHEEL XMTR. UN	前轮转弯操纵轮传	AR	
C24592000-1	H1778	MASTER CYLINDER	刹车控制总泵	AR	
C24592000-1	H1773	MASTER CYLINDER	刹车控制总泵	AR	
520913	F9911087	CONST. SPEED MOTOR/GENERATOR	恒速马达发电机控	AR	
D201094-D	2209-01	STATIC PROB	静压探头	AR	
ZCV63-4	9012296	HYDRAULIC CHECK VALVE	单向活门	AR	
ZCV63-6	81210163	CHECK VALVE	单向活门	AR	
ZCV63-4	9012240	HYDRAULIC CHECK VALVE	单向活门	AR	
D201094-D	2209-02	STATIC PROB	静压探头	AR	
ZCV63-6	81210168	CHECK VALVE	单向活门	AR	
ZCV63-6-1	90317133	HYDRAULIC CHECK VALVE	单向活门	AR	
D201094-D	2209-03	STATIC PROB	静压探头	AR	
ZCV64-12	81019293	CHRCK VALVE	单向活门	AR	
ZCV63-6-1	90320128	HYDRAULIC CHECK VALVE	单向活门	AR	
ZCV63-6	81210169	CHECK VALVE	单向活门	AR	
ZCV63-4	9012259	HYDRAULIC CHECK VALVE	单向活门	AR	
ZCV63-6	81210166	CHECK VALVE	单向活门	AR	
ZCV64-12	81113731	CHRCK VALVE	单向活门	AR	
D272-70400-010	TH-1084	ARTIFICIAL FEEL UNIT	配平组件	AR	
12664	9815110	CHECK-VALVE	单向活门	AR	
12664	9815108	CHECK-VALVE	单向活门	AR	
12664	9866128	CHECK-VALVE	单向活门	AR	
HTE69000-1	FR1550BA	SWITCH	电门	AR	SV
DHE1141	2209-06	PROXIMITY SWITCHES	临近电门	AR	SV
ZCV63-8	90104203	CHECK VALVE	单向活门	AR	

DHE1141	2209-04	PROXIMITY SWITCHES	临近电门	AR	SV
DHE1141	2209-05	PROXIMITY SWITCHES	临近电门	AR	SV
6-1404-0000-4	970154	HYDRAULIK HAND PUMP	手摇泵	AR	SV
763A0000-03	11128	SENSOR	传感器	AR	SV
ZCV63-8	81116150	CHECK VALVE	单向活门	AR	
ZCV63-8	90126137	CHECK VALVE	单向活门	AR	
ZCV63-8	90126136	CHECK VALVE	单向活门	AR	
ZCV63-6	81210164	CHECK VALVE	单向活门	AR	
763A0000-03	11089	SENSOR	传感器	AR	SV
ZCV63-6-1	9031775	CHECK VALVE	单向活门	AR	
ZCV63-6	81210167	CHECK VALVE	单向活门	AR	
HTE690047	48060656	SWITCH PRESS HOT AIR	热空气压力活门	AR	
ZCV63-4	90122180	CHECK VALVE	单向活门	AR	
ZCV63-4	90122108	CHECK VALVE	单向活门	AR	
ZCV63-6	81210170	CHECK VALVE	单向活门	AR	
ZCV63-6	81210165	CHECK VALVE	单向活门	AR	
ZCV63-6-1	90317167	CHECK VALVE	单向活门	AR	
ZCV63-4	81201188	CHECK VALVE	单向活门	AR	
763A0000-03	27683	SENSOR	传感器	AR	SV
ZCV64-10	8050652	CHECK VALVE	单向活门	AR	
763A0000-03	31285	SENSOR	传感器	AR	SV
ZCV63-4	81201109	CHECK VALVE	单向活门	AR	
ZCV63-6-1	90317109	CHECK VALVE	单向活门	AR	
ZCV63-4	9012263	CHECK VALVE	单向活门	AR	
ZCV63-4	90122161	CHECK VALVE	单向活门	AR	
ZCV63-6-1	90320119	CHECK VALVE	单向活门	AR	
ZCV63-6-1	90320174	CHECK VALVE	单向活门	AR	
ZCV63-6-1	90317102	CHECK VALVE	单向活门	AR	
763A0000-03	11049	SENSOR	传感器	AR	SV
322000M02	2265	TRANSDUCER UNIT	传感器组件	AR	SV
342300M01	5396	TRANSDUCER UNIT	传感器组件	AR	
ZRA1990030	7604	BLEED TRANSFER PRESSURE T	引气压力调节传感	AR	
ZCV64-20	8122399	CHECK VALVE	单向阀	AR	
763A0000-03	11077	SENSOR	传感器	AR	SV
ZCV64-10	8050648	CHECK VALVE	单向活门	AR	
ZRA380-00	ASA32704	BLEED TRANSFER PRESSURE T	引气压力调节传感	AR	
ZCV64-10	8050688	CHECK VALVE	单向活门	AR	
322000M02	2342	TRANSDUCER UNIT	传感器组件	AR	SV
342300M01	5395	TRANSDUCER UNIT	传感器组件	AR	
342300M01	5315	TRANSDUCER UNIT	传感器组件	AR	
BC2065C	2177	SELCAL CODE SELECTION PAN	选择呼叫代码面板	AR	
2LA005127-01	953	OVERWING LIGHT FWD	大翼应急灯	AR	
2LA005414-01	1034	OVERWING EMERG. LIGHT	大翼应急灯	AR	
342300M01	5477	TRANSDUCER UNIT	传感器组件	AR	
ZCV64-10	8050686	CHECK VALVE	单向活门	AR	
2LA005413-01	986	OVERWING EMERG. LIGHT	大翼应急灯	AR	
767A0000-04	02584	SENSOR	传感器	AR	
FE171-000	FR1092	CABLE TENSION REGULATOR	钢索张力调节器	AR	
HTE420044	FR047BB	PRESSURE HOLDING VALVE	稳压阀	AR	
9811820	FRTR041BF	CHECK VALVE	燃油再循环单向活	AR	
L95F100-603	31394	FUEL TK OVERPRESSURE PROT	过压保护器	AR	

L95F100-603	31867	FUEL TK OVERPRESSURE PROT	过压保护器	AR	
QA05877	RH23451	VALVE RESTRICT.BLEED	引气管路限流器	AR	
796815-02-03	0543	REFUEL PRESELECTOR	油量预选器	AR	
HTE900087-001	FR061BB	FUELTRANSFERVERVALVE	燃油传输活门	AR	
9811820	FRTR038B	CHECK VALVE	燃油再循环单向活	AR	
HTE420044	FR050BB	PRESSURE HOLDING VALVE	稳压阀	AR	
HTE900087-001	FR058BB	FUELTRANSFERVERVALVE	燃油传输活门	AR	
767A0000-04	02538	SENSOR	传感器	AR	
4357626	0F37529	WIPER ARM LH	雨刷臂	AR	
4357619	0F59670	WIPER ARM RH	雨刷臂	AR	
FRH220033V	52105706	CHECK VALVE APU	引气单向阀	AR	
HTE200002-1	M406GB129	ACTUATOR	作动器	AR	SV
HTE200002-1	M442GB299	ACTUATOR	作动器	AR	SV
HTE370001	M0450VNR	HP GROUND CONNECTORHP	地面接头	AR	
HTE200002-1	M548GB119	ACTUATOR	作动器	AR	SV
HTE900118-001	FR054BB	LOW PRESSURE FUEL VALVE	低压燃油活门	AR	SV
1298A0000-01	04599	TRIM-AIR CHECK VALVES	配平空气单向活门	AR	SV
HTE200002-1	M518GB299	ACTUATOR	作动器	AR	SV
HTE900118-001	FR055BB	LOW PRESSURE FUEL VALVE	低压燃油活门	AR	SV
38E93-6	7306	WING ANTI-ICE CONTROL VAL	大翼防冰控制活门	AR	SV
L83A13-617	20562	LEAK-MONITOR	渗漏监控器	AR	
1298A0000-01	05674	VALVE,CHECK TRIM AIR	配平空气单向活门	AR	SV
A08000	504	LP FUEL SOV APU	燃油低压活门作动	AR	
HTE190001-2	M364GB299	CROSSTEED VALVE ACTUATOR	交输活门作动器	AR	SV
2697A0000-01	2697A00L	PRESSURE SENSORS IMPR	进气压力传感器	AR	
HTE190001-2	M605GB070	ACTUATOR	作动器	AR	SV
HTE200002-1	M510GB299	ACTUATOR	作动器	AR	SV
HTE190001-2	M248GB129	CROSSTEED VALVE ACTUATOR	交输活门作动器	AR	SV
9104A0006-01	00351	PRESSURE SENSORS IMPR	进气压力传感器	AR	
9700-C1A-F23AN	P07080994	PORTABLE OXYGEN CYLINDER	便携式氧气设备	AR	SV
9700-C1A-F23AN	P07051972	PORTABLE OXYGEN CYLINDER	便携式氧气设备	AR	SV
9700-C1A-F23AN	P15052229	PORTABLE OXYGEN CYLINDER	便携式氧气设备	AR	SV
9700-C1A-F23AN	P07040766	PORTABLE OXYGEN CYLINDER	便携式氧气设备	AR	SV
9700-C1A-F23AN	656427	PORTABLE OXYGEN CYLINDER	便携式氧气设备	AR	SV
9700-C1A-F23AN	P12110590	PORTABLE OXYGEN CYLINDER	便携式氧气设备	AR	SV
FE240-004	5585	DOOR DAMPER CYLINDER	客舱门紧急阻尼气	AR	SV
20790-03AC	0551776	OUTFLOW VALVE	外流活门	AR	
7250-44A	5624	BABY BASSINET	婴儿摇篮	AR	
7250-44A	5627	BABY BASSINET	婴儿摇篮	AR	
7250-44A	5626	BABY BASSINET	婴儿摇篮	AR	
EMERGENCYMEDICALEQ	2209-01	EMERGENCY MEDICAL EQUIPM	应急医疗箱	AR	
N/A	2209-01	FIRST AID KID	急救包	AR	
N/A	2209-02	FIRST AID KID	急救包	AR	
D2565800100000	2209-01	LIGHT KIT	灯泡箱	AR	SV
505256-401	2209-04	LIFE LIEN	救生绳	AR	
505256-401	2209-02	LIFE LIEN	救生绳	AR	
505256-401	2209-01	LIFE LIEN	救生绳	AR	
505256-401	2209-03	LIFE LIEN	救生绳	AR	
995000	2209-03	MANUAL RELEASE TOOL	手动释放工具	AR	
500903-403-2291	2209-01	EXTENDED LIFE LINE	加长安全带	AR	
502761-413-2269	2209-03	KID LIFE LINE	儿童安全带	AR	

502761-413-2269	2209-01	KID LIFE LINE	儿童安全带	AR	
502761-413-2269	2209-04	KID LIFE LINE	儿童安全带	AR	
502761-413-2269	2209-05	KID LIFE LINE	儿童安全带	AR	
502748-401-2251	2209-03	EXTENDED LIFE LINE	加长安全带	AR	
502748-401-2251	2209-04	EXTENDED LIFE LINE	加长安全带	AR	
502761-413-2269	2209-06	KID LIFE LINE	儿童安全带	AR	
502748-401-2251	2209-01	EXTENDED LIFE LINE	加长安全带	AR	
502748-401-2251	2209-02	EXTENDED LIFE LINE	加长安全带	AR	
502761-413-2269	2209-02	KID LIFE LINE	儿童安全带	AR	
P2-07-0012-001	2209-08	FLASH LIGHT	手电	AR	
85-16-11494-05	2209-03	HAND MIKE	麦克风	AR	
P2-07-0012-001	2209-02	FLASH LIGHT	手电	AR	
P2-07-0012-001	2209-03	FLASH LIGHT	手电	AR	
85-16-11494-05	2209-02	HAND MIKE	麦克风	AR	
P2-07-0012-001	2209-07	FLASH LIGHT	手电	AR	
85-16-11494-05	2209-01	HAND MIKE	麦克风	AR	
P2-07-0012-001	2209-04	FLASH LIGHT	手电	AR	
P2-07-0012-001	2209-06	FLASH LIGHT	手电	AR	
P2-07-0012-001	2209-05	FLASH LIGHT	手电	AR	
P2-07-0012-001	2209-01	FLASH LIGHT	手电	AR	
995000	2209-01	MANUAL RELEASE TOOL	手动释放工具	AR	
995000	2209-02	MANUAL RELEASE TOOL	手动释放工具	AR	
995000	2209-04	MANUAL RELEASE TOOL	手动释放工具	AR	
2010-6-011-2251	2209-01	EXTENDED LIFE LINE	加长安全带	AR	
2010-2-011-2251	2209-01	EXTENDED LIFE LINE	加长安全带	AR	
63914-101	L2057927	DEMO LIFE VEST	演示救生衣	AR	
63914-101	D13958	DEMO LIFE VEST	演示救生衣	AR	
P0723E105P	83058	DEMO ADULT/CHILD LIFE VES	儿童演示救生衣	AR	
289-1001	2209-01	DEMO MASK-OXYGEN	演示氧气面罩	AR	
174097-11	2209-01	DEMO MASK-OXYGEN	演示氧气面罩	AR	
289-601-248	2209-01	DEMO MASK-OXYGEN	演示氧气面罩	AR	
801B4600-02	V2136	TORQUE SHAFT	扭力轴	AR	
833A0500-01	V1055	TORQUE SHAFT	扭力轴	AR	
801B0600-01	V2098	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23283	STEADY BEARING ASSY	支撑轴承	AR	
833A2200-01	V1058	TORQUE SHAFT	扭矩轴	AR	
833A0600-01	V2102	TORQUE SHAFT	扭力轴	AR	
833A0600-01	V2101	TORQUE SHAFT	扭力轴	AR	
801B0700-01	V2104	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23281	STEADY BEARING ASSY	支撑轴承	AR	
801B0700-01	V2105	TORQUE SHAFT	扭力轴	AR	
801C1700-02	V23271	STEADY BEARING ASSY	支撑轴承	AR	
833A0700-01	V2104	TORQUE SHAFT	扭力轴	AR	
833A0700-01	V2103	TORQUE SHAFT	扭力轴	AR	
753D0000-01	81211-69	EXCHANGER-HEAT, PRIMARY	初级热交换器	AR	SV
753C0000-02	0753CO0ES	EXCHANGER-HEAT, PRIMARY	初级热交换器	AR	SV
72067000	2198	OVEN	烤箱	AR	
72067000	1404	OVEN	烤箱	AR	
72067000	0902	OVEN	烤箱	AR	
72073000	18273	OVEN	烤箱	AR	
72067000	3818	OVEN	烤箱	AR	

SPSA320-3-3-2	7075	LH SLIDING SIDE WINDOW	左侧滑动窗户	AR	
SPSA320-4-3-2	5302	RH SLIDING SIDE WINDOW	右侧滑动窗户	AR	
SPSA320-6-2-2	5614	RH FIXED SIDE WINDOW	右侧固定窗户	AR	
SPSA320-5-2-2	5015	LH FIXED SIDE WINDOW	左侧固定窗户	AR	
STA320-1-8-2	55203	LH WINDSHIELD PANEL	左风挡玻璃	AR	SV
622-5136-201	1FG5F	WEATHER RADAR ANTENNA ASS	气象雷达天线组件	AR	
VD3900-03	99011443	RECIRCULATION FAN	客舱再循环风扇	AR	SV
VD3900-03	99011439	RECIRCULATION FAN	客舱再循环风扇	AR	SV
622-5137-601	6923	WEATHER RADAR ANTENNA ASS	气象雷达天线组件	AR	SV
DN01TYF3YS00054	15	CABIN ATTENDANT SEAT	客舱乘务员座椅	AR	
16800-01-00	16T3107	3RD OCCUPANT SEAT	第三观察员座椅	AR	
FA00B3F3YS01054	23	CABIN ATTENDANT SEAT	客舱乘务员座椅	AR	
RL27FYF3YS00054	18	CABIN ATTENDANT SEAT	客舱乘务员座椅	AR	
2510154-01-00	931	4RD OCCUPANT SEAT	第四观察员座椅	AR	
WA25BYF3YS01054	22	CABIN ATTENDANT SEAT	客舱乘务员座椅	AR	
WA93BYF3YS01054	22	CABIN ATTENDANT SEAT	客舱乘务员座椅	AR	
63600-101	N/A	LIFE VEST	救生衣	AR	
63600-501	N/A	LIFE VEST	救生衣	AR	
63600-137	N/A	LIFE VEST	救生衣	AR	
P0640-101	N/A	LIFE VEST	救生衣	AR	
72CF8944-00	743	FLEXIBLE CONTROL ASSY	柔性控制组件	AR	
72CF8945-00	1060	FLEXIBLE CONTROL ASSY	柔性控制组件	AR	
72CF8945-00	1057	FLEXIBLE CONTROL ASSY	柔性控制组件	AR	
72CF8944-00	725	FLEXIBLE CONTROL ASSY	柔性控制组件	AR	
21VU	2209-01	21VU PANEL21VU	面板	AR	
058-001-00	5517	ROTARY SWITCH	旋转电门	AR	
35VU	2209-01	35VU PANEL35VU	面板	AR	
206PN01	1542	VOLTMETERS	电压指示器	AR	
206PN01	1543	VOLTMETERS	电压指示器	AR	
25VU	2209-01	25VU PANEL25VU	面板	AR	
9027-20010	9940512	LANDING ELEVATION SELECTO	着陆高度选择器	AR	SV
22VU	2209-01	22VU PANEL22VU	面板	AR	
058-001-00	5523	ROTARY SWITCH	旋转电门	AR	
7530334	20568	SELECTOR TEMPERATURE	温度选择器	AR	
30VU	2209-01	30VU PANEL30VU	面板	AR	
058-003-00	8321	ROTARY SWITCH	旋转电门	AR	
058-003-00	8323	ROTARY SWITCH	旋转电门	AR	
777A0000-01	04850	TEMP-SELECTOR	温度选择器	AR	
777A0000-01	04932	TEMP-SELECTOR	温度选择器	AR	
777A0000-01	04791	TEMP-SELECTOR	温度选择器	AR	
40VU	2209-01	40VU PANEL40VU	面板	AR	
500VU	2209-01	500VU F/O LIG/LS CTL PNL	控制面板	AR	
1555A0000-01	00177	HP-MANIFOLD	高压总管	AR	
A25313002	H2716	SELECTOR VALVE	选择活门	AR	
BHC1060-04	3515	PRIORITY VALVE	优先活门	AR	SV
301VU	2209-01	301VU CAPTAIN LIG/LS CTL	控制面板	AR	
50VU	2209-01	50VU PANEL50VU	面板	AR	
058-001-00	5521	ROTARY SWITCH	旋转电门	AR	
48VU	2209-01	48VU PANEL48VU	面板	AR	
402VU	2209-01	402VU PANEL402VU	面板	AR	
212096-3-3	S3218014	HF SATCOM AUDIO SELECT	选择面板	AR	

FKK8-35KL	2209-01	FIREPROOF GLOVE	防火手套	AR	
8VU	2209-01	8VU PANEL8VU	面板	AR	
058003-00	8271	ROTARY SWITCH	旋转电门	AR	
058003-00	8326	ROTARY SWITCH	旋转电门	AR	
058003-00	8324	ROTARY SWITCH	旋转电门	AR	
058003-00	8276	ROTARY SWITCH	旋转电门	AR	
111VU	2209-01	111VU PANEL111VU	面板	AR	
Z2D0003000100100	1909	RHEOSTAT	变阻器	AR	
DLSA100	159	DATA LOADING SELECTOR	数据装载选择器	AR	
108VU	2209-01	108VU EXTERAL POWER PANEL	外部电源面板	AR	
23VU	2209-01	23VU PANEL23VU	面板	AR	
110VU	2209-01	110VU PANEL110VU	面板	AR	
058-002-03	1124	ROTARY SWITCH	旋转电门	AR	
27-457	1660	RUDDER TRIM CTL SWITCH	方向舵配平控制开	AR	
24VU	2209-01	24VU FLT CONTROL PANEL	飞行控制面板	AR	
115VU	2209-01	115VU PANEL115VU	面板	AR	
058-001-00	5522	ROTARY SWITCH	旋转电门	AR	
54VU	2209-01	54VU PANEL54VU	面板	AR	
Z2D0003000100000	4818	RHEOSTAT	变阻器	AR	
A25312-1	H2346	THROTTLE VALVE	节流阀	AR	
112VU	2209-01	112VU PANEL112VU	面板	AR	
Z2D0003000100000	4809	RHEOSTAT	变阻器	AR	
403VU	2209-01	403VU PANEL403VU	面板	AR	
54VU	2209-02	54VU PANEL54VU	面板	AR	
Z2D0003000100000	4824	RHEOSTAT	变阻器	AR	
27VU	2209-01	27VU COCKPIT DOORVIDBO C	驾驶舱门监控控制	AR	
FH285	2209-01	WAVE GUIDE ASSY	波导组件	AR	
C20105000	14905	TACHOMETER	转速表	AR	
C20105000	09755	TACHOMETER	转速表	AR	
C20105000	09785	TACHOMETER	转速表	AR	
C20105000-2	51958	TACHOMETER	转速表	AR	SV
119VU	2209-01	119VU COCKPIT DOOR CTL PN	驾驶舱门控制面板	AR	
D57750022001	AP1100	SPOILER	扰流板	AR	
D5775002000100Z	AP1103	SPOILER	扰流板	AR	
D5775001600100Z	AP1162	SPOILER	扰流板	AR	
D57750022000	AP1100	SPOILER	扰流板	AR	
D5775002100100Z	AP1103	SPOILER	扰流板	AR	
D5775001800100Z	AP1156	SPOILER	扰流板	AR	
D5775001600000Z	AP1154	SPOILER	扰流板	AR	
D5775002000000Z	AP1101	SPOILER	扰流板	AR	
D5775001800000Z	AP1160	SPOILER	扰流板	AR	
D5775002100000Z	AP1101	SPOILER	扰流板	AR	
238-0451-523	2209-01	CENTER BODY	中心体	AR	
754C0000-01	81212-526	EXCHANGER-HEAT, MAIN	主热交换器	AR	SV
754D0000-01	81212-672	EXCHANGER-HEAT, MAIN	主热交换器	AR	SV
114160005	HAI-0426	RAT JACK EJECTIONRAT	弹射器	AR	
89794077	C10020167	CREW OXYGEN CYLINDER	机组氧气瓶	AR	
472412-1	1344M	APU FIREEXTINGUISHER BOT	灭火器	AR	
A805300-12	71103080	FIREEXTINGUISHER BOTTLE I	灭火器爆炸帽	AR	
472088-1-B	10416C	ENGINE FIRE EXTINGUISHER	发动机灭火器	AR	
446158	31604021	ENGINE FIREEXTINGUISHER I	发动机灭火器爆炸	AR	

472088-1-B	10415C	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	
446158	31604024	ENGINE FIREEXTINGUISHER I	发动机灭火瓶爆炸	AR	
472088-1-B	40421EL	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	
446158	31604008	ENGINE FIREEXTINGUISHER I	发动机灭火瓶爆炸	AR	
472088-1-B	57697EL	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	
446158	31604055	ENGINE FIREEXTINGUISHER I	发动机灭火瓶爆炸	AR	
FLYAWAYKIT	2209-01	FLYAWAY KIT	飞行工具包	AR	
642-4001-501	2605001	EXHAUST NOZZLE-RH ENGINE	发动机排气尾锥	AR	SV
72067000	2348	OVEN	烤箱	AR	
Z030H0005110	34603	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
35-0D5-1003	0D5002529	COCKPIT LOUD SPEAKER	扬声器	AR	SV
3530000-1	FRTR33224	TANK FUEL-LEVEL SENSORS	机翼油箱燃油位传	AR	
0212KTU-08	991358	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
S4-3300520-01	2301	HYD ACTUATOR	液压作动筒	AR	SV
642-2300-11	P3343	AFT ENG MOUNT	发动机后吊点	AR	
BA03804	7228	APU GENERATORAPU	APU发电机	AR	
1211313-010	APMNW960	VSV ACTUATOR	VSV作动筒	AR	
1211313-010	APMNW971	VSV ACTUATOR	VSV作动筒	AR	
3291184-2	GRTG0353	VALVE-AIR TR	0	AR	
8TC19AAR1	GDBG700D	SENSOR-TEMP	传感器	AR	
24F5202	YT097263	TANK ASSY-OI	滑油箱	AR	
329695-6	WCP3129J	VALVE-TURBIN	0	AR	
3505582-28	YG440417	STARTER-AIR	起动机	AR	
396800-12	YA017585	MOTOR-GEAR H	扭矩马达	AR	
45731-1391	YB007979	IDG OIL COLLERIDG	滑油冷却器	AR	
85465-2	HTLR279A	ROTOR-GEN 93	静子发电机	AR	
87006-9	HTL10125	STATOR, ALTE	静子发电机	AR	
8910-332	18701221	VALVE-FUEL R	燃油回油活门	AR	
C25175000-1	EM362293	VALVE-LPTACC	0	AR	
VG22-01	YY033499	SENSOR-POSIT	VBV位置传感器	AR	
1B6550	1645	CHIP DETECTO	磁堵	AR	
320-549-004-0	YJ190875	SENSOR-N2 SP	传感器	AR	
337-075-105-0	8974	LUBRICA. UNIT	润滑组件	AR	
45332-8039	27432	HEAT EXCH-OI	0	AR	
8061-532	WYGA0335	UNIT-HYDROME	0	AR	
9-217-44	ELW46554	TRANSMITTER-	燃油流量传感器	AR	
FA00914D	YY015632	FILTER-FUEL	燃油油滤	AR	
QA07638ISS1	RY5-5324	TRANSMITTER-	0	AR	
740119H	AAAE00429	GENERATOR-ID	IDG	AR	
QA06305	RG7-1870	FILTER, ASSY	0	AR	
TC201-00	26309	SENSOR-TEMP	传感器	AR	
121762-3	YG537219	SHAFT ASSY F	VBV软轴	AR	
121762-4	DV489953	SHAFT ASSY F	VBV软轴	AR	
121762-4	DV489950	SHAFT ASSY F	VBV软轴	AR	
121762-4	DV489948	SHAFT ASSY F	VBV软轴	AR	
121762-4	DV489944	SHAFT ASSY F	VBV软轴	AR	
121762-4	DV489943	SHAFT ASSY F	VBV软轴	AR	
121762-4	DV489942	SHAFT ASSY F	VBV软轴	AR	
121762-4	DV489935	SHAFT ASSY F	VBV软轴	AR	
121762-4	DV489928	SHAFT ASSY F	VBV软轴	AR	
121762-4	DV489927	SHAFT ASSY F	VBV软轴	AR	

121762-4	DV489925	SHAFT ASSY F	VBV软轴	AR	
121762-4	DV489924	SHAFT ASSY F	VBV软轴	AR	
3282970-4	YG090309	STOP MECHANI	止动机构	AR	
1374M12P10	LM5477	IGNITER SPAR	0	AR	
1374M12P10	LM5475	IGNITER SPAR	0	AR	
6840023E16	PHCMB079	NOZZLE FUEL	燃油喷嘴	AR	
6840023E16	PHCMB081	NOZZLE FUEL	燃油喷嘴	AR	
6840023E16	PHCJD398	NOZZLE FUEL	燃油喷嘴	AR	
6840023E16	PHCFN645	NOZZLE FUEL	燃油喷嘴	AR	
6840023E18	PCY9036F	NOZZLE FUEL	燃油喷嘴	AR	
6840023E18	PCY9045F	NOZZLE FUEL	燃油喷嘴	AR	
6840023E18	PCY9035F	NOZZLE FUEL	燃油喷嘴	AR	
6840023E18	PCY9044F	NOZZLE FUEL	燃油喷嘴	AR	
6840023E18	PCY9037F	NOZZLE FUEL	燃油喷嘴	AR	
6840023E18	PCY9034F	NOZZLE FUEL	燃油喷嘴	AR	
6840023E18	PCY9041F	NOZZLE FUEL	燃油喷嘴	AR	
6840023E18	PCY9046F	NOZZLE FUEL	燃油喷嘴	AR	
6840023E18	PCY9033F	NOZZLE FUEL	燃油喷嘴	AR	
6840023E18	PCY9043F	NOZZLE FUEL	燃油喷嘴	AR	
6840023E18	PCY9042F	NOZZLE FUEL	燃油喷嘴	AR	
6840023E18	PCY9047F	NOZZLE FUEL	燃油喷嘴	AR	
6840023E18	PCY9039F	NOZZLE FUEL	燃油喷嘴	AR	
6840023E18	PCY9032F	NOZZLE FUEL	燃油喷嘴	AR	
6840023E18	PCY9040F	NOZZLE FUEL	燃油喷嘴	AR	
6840023E18	PCY9038F	NOZZLE FUEL	燃油喷嘴	AR	
2293B020000	12152	CHECK, VALVE,	单向活门	AR	
238D0611-507	K-22084	DUCT ASSY	空气管路	AR	
50-1-3100-00	5140	SWITCH, LP WA	滑油低压警告电门	AR	
642-5612-501		TUBE ASSY	支架组件	AR	
642-5926-502		TUBE ASSY	管路	AR	
642-5926-504		TUBE ASSY	管路	AR	
6774E010000	1304	VALVE BLEED	活门	AR	
AE709459-3		HOSE ASSY	管路组件	AR	
10-631045-2	UNNEJ184	EXCITER IGNI	点火激励器	AR	
10-631045-2	UNNEJ185	EXCITER IGNI	点火激励器	AR	
301-799-401-0	YU061003	VISUAL INDIC	0	AR	
320-290-101-0		HARNESS-WIRI	导线	AR	
320-290-301-0		HARNESS-WIRI	导线	AR	
320-296-801-0		HARNESS-WIRI	导线	AR	
320-298-101-0		HARNESS DPM	导线	AR	
320-364-203-0		HARNESS-WIRI	导线	AR	
320-364-401-0		HARNESS-WIRI	导线	AR	
320-372-602-0		HARNESS-WIRI	导线	AR	
320-392-702-0		HARNESS-WIRI	导线	AR	
320-401-101-0		HARNESS-WIRI	导线	SV	
320-401-401-0		HARNESS-WIRI	导线	AR	
325-014-802-0		HARNESS-WIRI	导线	AR	
325-014-901-0		HARNESS-WIRI	导线	AR	
390-611-301-0	YJ367160	CONNECTOR-ID	识别塞	AR	
9043110-16	B2922	LEAD ASSY-IG	点火电缆	AR	
9043110-16	UNN2523N	LEAD ASSY-IG	点火电缆	AR	

CA211-00	YC375304	HARNESS-WIRI	导线	AR	
RP198-02	YC138330	SENSOR-TEMP	传感器	AR	
RP216-00	YC055426	SENSOR T25	传感器	AR	
TC255-04	YC000328	HARNESS-WIRI	导线	AR	
TC315-00	YC008667	HARNESS-WIRI	导线	AR	
TC315-00	YC008671	HARNESS-WIRI	导线	AR	
TC315-01	YC425385	HARNESS-WIRI	导线	AR	
642-5520-503		TUBE ASSY, P	0	AR	
4205401	420540130	HYDRAULIC PUMP	液压泵	AR	
740123		ADAPTER, KIT,QAD,	0	AR	
327155-3	4104B	VALVE-ANTI-ICE	防冰活门	AR	
9909874-107		DUCT ASSY-UPR FLEX	0	AR	
9909875-103		DUCT ASSY-LWR FLEX	0	AR	
642-5926-503		TUBE ASSY	管路	AR	
642-5926-501		TUBE ASSY	管路	AR	
642-9848-501		TUBE ASSY	管路	AR	
AE708821-2		HOSE ASSY	管路组件	AR	
AE708821-1		HOSE ASSY	管路组件	AR	
AE709461-1		HOSE ASSY	管路组件	AR	
642-5510-501		DUCT ASSY-LWR HP	空气管路	AR	
AE710155-1		HOSE ASSY	管路组件	AR	
AE705925-31		HOSE ASSY	管路组件	AR	
14495-505		DUCT ASSY	空气管路	AR	
MS25083-2BB3		JUMPER ASSY	跳线	AR	
642-9897-501		BRACKET ASSY	支架组件	AR	
642-9829-502		BRACKET ASSY	支架组件	AR	
642-9928-501		BRACKET ASSY	支架组件	AR	
642-9893-501		BRACKET ASSY	支架组件	AR	
642-5754-507		TUBE ASSY	管路	AR	
108280-211		HOSE, ASSY	管路组件	AR	
238-0801-545		TUBE ASSY-MANIFOLD	管路	AR	
238-0801-541		TUBE ASSY	管路	AR	
238-0801-512		TUBE ASSY-FUEL	管路	AR	
642-5754-501		TUBE ASSY	管路	AR	
642-5754-505		TUBE ASSY OIL	管路	AR	
238-0801-547		TUBE ASSY	管路	AR	
238-0801-539		TUBE ASSY-EPU	管路	AR	
238-0801-513		TUBE ASSY-OIL	管路	AR	
238-0801-543		TUBE ASSY-HYDRAULIC	管路	AR	
AE706058-65		HOSE	管路	AR	
238-0801-549		TUBE ASSY-FUEL	管路	AR	
642-5801-511		TUBE ASSY-JUNCTION	支架组件	AR	
642-5801-521		TUBE ASSY-HYDRAULIC	支架组件	AR	
642-5658-503		TUBE ASSY	管路	AR	
642-5801-515		TUBE ASSY	支架组件	AR	
642-5801-517		TUBE ASSY TO DRAIN	支架组件	AR	
238-0801-557		TUBE ASSY-HEAT	管路	AR	
112441-507		HOSE, ASSY	管路组件	AR	
642-5801-509		TUBE ASSY-JUNCTION	管路	AR	
74-110-10	AAR2766	TRANSMITTER-OIL QTY	滑油量传感器	AR	
9909873-103		DUCT ASSY	空气管路	AR	

238-0801-551		TUBE ASSY-FWD SUMP	管路	AR	
238-0801-561		TUBE ASSY-SCUPPER	管路	AR	
642-9838-505		BRACKET ASSY	支架组件	AR	
238-0660-501		BRACKET ASSY	支架组件	AR	
642-9871-503		BRACKET ASSY	支架组件	AR	
642-9837-501		BRACKET ASSY	支架组件	AR	
238-0607-503		BRACKET	支架	AR	
MS21902J6		ELBOW	0	AR	
642-9855-502		BRACKET ASSY	支架组件	AR	
642-9834-501		BRACKET ASSY	支架组件	AR	
642-9852-501		BRACKET ASSY	支架组件	AR	
642-9846-501		BRACKET ASSY	支架组件	AR	
642-9835-501		BRACKET ASSY	支架组件	AR	
642-5656-501		BRACKET ASSY	支架组件	AR	
642-5613-501		BRACKET ASSY	支架组件	AR	
642-9868-501		BRACKET ASSY	支架组件	AR	
238-0608-503		BRACKET	支架	AR	
642-9866-503		BRACKET ASSY	支架组件	AR	
642-9855-503		BRACKET ASSY	支架组件	AR	
238-0825-503		BRACKET ASSY	支架组件	AR	
TA10950004-11		CLAMP-FLIP LOCK	0	AR	
TA10950004-05		CLAMP-FLIP LOCK	0	AR	
TA05F18-01		BRACKET	0	AR	
TA10950004-04		CLAMP-FLIP LOCK	0	AR	
TA18900032		LINE BLOCK	0	AR	
45D31	1440	SWITCH DIFFERENTIAL	燃油电门	AR	
TA10950004-16		CLAMP-FLIP LOCK	0	AR	
TA10950004-15		CLAMP-FLIP LOCK	0	AR	
TA10950004-08		CLAMP-FLIP LOCK	0	AR	
642-9830-501		BRACKET ASSY	支架组件	AR	
642-9930-501		BRACKET ASSY	支架组件	AR	
238-0950-75		BRACKET	支架	AR	
642-9867-505		BRACKET ASSY	支架组件	AR	
642-9920-501		BRACKET ASSY	支架组件	AR	
642-9916-501		BRACKET	支架	AR	
642-9856-501		BRACKET ASSY	支架组件	AR	
642-9861-501		BRACKET ASSY	支架组件	AR	
642-9915-501		BRACKET	支架	AR	
642-3031-503		BRACKET ASSY	支架组件	AR	
238-0856-151		BRACKET ASSY	支架组件	AR	
238-0856-3		BRACKET ASSY	支架组件	AR	
TA18900032		LINE BLOCK	0	AR	
TA18900042		LINE BLOCK	0	AR	
TA18900028		LINE BLOCK	0	AR	
TA18900040		LINE BLOCK	0	AR	
TA18900027		LINE BLOCK	卡子	AR	
TA18900022		LINE BLOCK	卡子	AR	
TA18900025		LINE BLOCK	卡子	AR	
TA18900037		LINE BLOCK	0	AR	
TA18900021		LINE BLOCK	0	AR	
TA18900036		LINE BLOCK	0	AR	

TA18900023		LINE BLOCK	卡子	AR	
TA18900023		LINE BLOCK	卡子	AR	
TA18900022		LINE BLOCK	卡子	AR	
TA18900045		LINE BLOCK	0	AR	
TA18900032		LINE BLOCK	卡子	AR	
TA18900031		LINE BLOCK	卡子	AR	
TA18900029		CLAMP	卡子	AR	
TA18900030		LINE BLOCK	0	AR	
TA18900046		LINE BLOCK	卡子	AR	
TA18900029		CLAMP	卡子	AR	
642-9836-501		BRACKET ASSY	支架组件	AR	
642-9889-501		BRACKET ASSY	支架组件	AR	
642-5927-502		BRACKET ASSY	支架组件	AR	
642-5754-503		TUBE ASSY	管路	AR	
642-9944-501		BRACKET ASSY	支架组件	AR	
642-9889-501		BRACKET ASSY	支架组件	AR	
110551-503		HOSE ASSY	管路组件	AR	
642-9929-501		BRACKET ASSY	支架组件	AR	
642-9869-501		BRACKET ASSY	支架组件	AR	
642-9877-503		BRACKET ASSY	支架组件	AR	
642-9892-501		BRACKET	支架	AR	
642-5652-501		CHANNEL ASSY	支架	AR	
TA11C91		CLAMP	0	AR	
238-0950-237		BRACKET ASSY	支架组件	AR	
642-9951-503		BRACKET ASSY	支架组件	AR	
642-9927-501		BRACKET ASSY	支架组件	AR	
642-5672-501		BRACKET	支架	AR	
238-0950-351		BRACKET	支架	AR	
238-0950-15		BRACKET	支架	AR	
642-9857-505		BRACKET	支架	AR	
642-9858-502		BRACKET ASSY	支架组件	AR	
642-9878-501		BRACKET ASSY	支架组件	AR	
642-9849-503		BRACKET ASSY	支架组件	AR	
642-5826-501		BRACKET ASSY-UPPER	支架组件	AR	
642-9841-501		BRACKET ASSY	支架组件	AR	
238-0910-5		BRACKET	支架	AR	
642-9855-501		BRACKET ASSY	支架组件	AR	
642-9876-503		BRACKET ASSY	支架组件	AR	
642-9850-501		BRACKET ASSY	支架组件	AR	
642-9896-501		BRACKET ASSY	支架组件	AR	
238-0950-73		BRACKET	支架	AR	
238-0856-139		BRACKET ASSY	支架组件	AR	
238-0951-505		BRACKET	0	AR	
642-9894-501		BRACKET ASSY	支架组件	AR	
238-0950-69		BRACKET	支架	AR	
238-0708-507		BRACKET ASSY	支架组件	AR	
642-9930-501		BRACKET ASSY	支架组件	AR	
642-9930-501		BRACKET ASSY	支架组件	AR	
642-9926-501		BRACKET ASSY	支架组件	AR	
642-9833-501		BRACKET ASSY	支架组件	AR	
642-5752-501		BRACKET ASSY	支架组件	AR	

642-5703-501		BRACKET	支架	AR	
642-5856-501		BRACKET ASSY	支架组件	AR	
238-0856-147		BRACKET ASSY	支架组件	AR	
642-9917-501		BRACKET	支架	AR	
642-9827-501		BRACKET ASSY	支架组件	AR	
642-9913-501		BRACKET ASSY	支架组件	AR	
642-9857-503		BRACKET ASSY	支架组件	AR	
238-0910-19		BRACKET ASSY	支架组件	AR	
642-9826-501		BRACKET ASSY	支架组件	AR	
MS21908J6		ELBOW	接头	AR	
AP265J04		TEE	接头	AR	
102-00090	1350	SENSOR OIL TEM	温度传感器	AR	
642-9945-501		BRACKET ASSY	支架组件	AR	
642-9923-501		BRACKET ASSY	支架组件	AR	
642-9887-501		BRACKET ASSY	支架组件	AR	
642-9899-503		BRACKET, ASSY	支架组件	AR	
642-9930-501		BRACKET ASSY	支架组件	AR	
642-5663-501		BRACKET ASSY	支架组件	AR	
642-9825-501		BRACKET ASSY	支架组件	AR	
642-9831-501		BRACKET ASSY	支架组件	AR	
642-9831-503		BRACKET ASSY	支架组件	AR	
642-5705-501		BRACKET	支架	AR	
238-0950-77		BRACKET	支架	AR	
642-9924-501		BRACKET ASSY	支架组件	AR	
642-5671-501		BRACKET	支架	AR	
642-9847-501		BRACKET ASSY	支架组件	AR	
642-9851-503		BRACKET	支架	AR	
642-9845-501		BRACKET ASSY	支架组件	AR	
642-9918-501		BRACKET ASSY	支架组件	AR	
642-5827-501		BRACKET ASSY	支架组件	AR	
642-9921-501		BRACKET ASSY	支架组件	AR	
238-0655-503		BRACKET ASSY	支架组件	AR	
642-5702-501		BRACKET	支架	AR	
642-9863-501		BRACKET ASSY	支架组件	AR	
642-5651-501		BRACKET ASSY	支架组件	AR	
642-5657-501		CHANNEL ASSY	0	AR	
642-5753-501		BRACKET ASSY	支架组件	AR	
238-0910-35		BRACKET ASSY	支架组件	AR	
238-0856-121		BRACKET ASSY	支架组件	AR	
238-0856-131		BRACKET ASSY	支架组件	AR	
238-0856-127		BRACKET ASSY	支架组件	AR	
238-0856-143		BRACKET ASSY	支架组件	AR	
238-0856-135		BRACKET ASSY	支架组件	AR	
642-9828-503		BRACKET ASSY	支架组件	AR	
642-9831-501		BRACKET ASSY	支架组件	AR	
642-9857-503		BRACKET ASSY	支架组件	AR	
642-9843-501		BRACKET ASSY	支架组件	AR	
238-0706-503		BRACKET	支架	AR	
642-9912-501		BRACKET ASSY	支架组件	AR	
642-9922-501		BRACKET ASSY	支架组件	AR	
642-9919-501		BRACKET ASSY	支架组件	AR	

642-9831-505		BRACKET ASSY	支架组件	AR	
238-0704-505		BRACKET	支架	AR	
321-450-900-0		FITTING ASSY	支架	AR	
321-450-603-0		FLANGE ASSY	转接环	AR	
321-450-701-6		SPLICE-LWR LH	0	AR	
321-456-602-0		FLANGE ASSY INNER (RH)	转接环	AR	
321-450-801-0		SPLICE ASSY-(RH)	0	AR	
238-0811-501	L8/390	DRAIN SYSTEM RESERVO	余油盒	AR	
238-0802-503	61400	DRAIN SYSTEM	余油盒	AR	
321-458-500-0		FLANGE-OUTER NO. 10	0	AR	
321-458-400-0		FLANGE-OUTER NO. 9	0	AR	
321-458-600-0		FLANGE-OUTER NO. 8	0	AR	
321-458-300-0		FLANGE-OUTER NO. 7	0	AR	
321-458-700-0		FLANGE-OUTER NO. 6	0	AR	
321-458-200-0		FLANGE-OUTER NO. 5	0	AR	
321-458-800-0		FLANGE-OUTER NO. 4	0	AR	
321-458-100-0		FLANGE-OUTER NO. 3	0	AR	
ALL458-900-0		FLANGE-OUTER NO. 2	0	AR	
ALL458-000-0		FLANGE-OUTER NO. 1	0	AR	
238-0701-525		TUBE ASSY	管路	AR	
642-5612-503		TUBE ASSY	支架组件	AR	
642-5801-507		TUBE ASSY-FUEL	管路	AR	
238-0701-523		TUBE ASSY FUEL	管路	AR	
238-0701-527		TUBE ASSY	管路	AR	
238-0701-529		TUBE ASSY	管路	AR	
108280-199		HOSE ASSY	管路组件	AR	
642-5515-507		TUBE ASSY	支架组件	AR	
238-0612-503		TUBE ASSY	管路	AR	
108280-53		HOSE ASSY	管路组件	AR	
321-451-500-0		STOP FITTING	支架	AR	
321-451-550-0		STOP FITTING	支架	AR	
321-453-601-0		STRUT ASSY	支架	AR	
321-451-452-0		STRUT-LOWER (RH)	转接环	AR	
321-451-402-0		STRUT-LOWER (LH)	转接环	AR	
642-5511-503		DUCT ASSY-TEE HP	空气管路	AR	
238-0502-503		ELBOW ASSY	空气管路	AR	
238-0602-503		DUCT ASSY-UPR	空气管路	AR	
642-5503-501		TEE ASSY-MID STAGE	空气管路	AR	
642-5508-503		PNEUMATIC DUCT	空气管路	AR	
642-2300-11	P3343	MOUNT AFTER ENGINE	0	AR	
41SG381-1	W002251	TRANSMITTER OIL	压力传感器	SV	
642-5855-501	779380-01	RAIL ASSY FIRE DETCT	0	AR	
45D32	8974	SWITCH LOW OIL	传感器	AR	
238-0851-509	779380-01	RAIL ASSY FIRE DET	火警线	AR	
642W9818-503		HARNESS ASSY VIB SEN	0	AR	
642W9956-501		HARNESS ASSY-FIRE	导线	AR	
642W9957-501		HARNESS ASSY	导线	AR	
642W9955-501		HARNESS ASSY-FIRE	导线	AR	
642W9958-501		HARNESS ASSY-ECS VA	导线	AR	
642W9819-503		HARNESS ASSY-FIRE	0	AR	
642W9820-503		HARNESS ASSY-FIRE	0	AR	

642W9821-501		HARNESS ASSY-THRUST	0	AR	
642W9812-505		HARNESS ASSY	0	AR	
642W9813-505		HARNESS ASSY	0	AR	
642W9814-503		HARNESS ASSY-IDG	导线	AR	
642W9811-507		HARNESS ASSY-ECU	ECU导组件	AR	
642W9810-505		HARNESS ASSY-ECU	ECU导组件	AR	
642W9817-501		HARNESS ASSY IDG PWR	导线	AR	
642W9815-503		HARNESS ASSY LH	0	AR	
AE81266P		COUPLING	0	AR	
238-0610-511		SHIELD-FIRE	防火板	AR	
AE707418-1		HOSE ASSY	管路组件	AR	
AE707422-2		HOSE ASSY	管路组件	AR	
AE707419-3		HOSE ASSY	管路组件	AR	
642-5830-503		BRACKET	支架	AR	
238-0504-507		BRACKET	支架	AR	
AMBK4-4039		LINK ASSY	连杆	AR	
AMBK4-4014		LINK ASSEMBLY	连杆	AR	
642-5665-501		BRACKET ASSY	支架组件	AR	
642-9971-501		BRACKET ASSY	支架组件	AR	
AE96787N		ADAPTER-HYDR. PUMP	0	AR	
P40810		LINK ASSY 3. 860 IN.	0	AR	
238-0505-503		BRACKET	支架	AR	
642-5521-501		BRACKET ASSY	支架组件	AR	
642-9936-501		BRACKET ASSY	支架组件	AR	
642-5653-501		BRACKET ASSY	支架组件	AR	
238-0801-535		TUBE ASSY	管路	AR	
238-0950-63		BRACKET	支架	AR	
642-9870-503		BRACKET ASSY	支架组件	AR	
642-9829-503		BRACKET ASSY	支架组件	AR	
642-9950-503		BRACKET ASSY	支架组件	AR	
642-9925-501		BRACKET ASSY	支架组件	AR	
642-9898-503		BRACKET ASSY	支架组件	AR	
238-0557-501		BRACKET ASSY	支架组件	AR	
AMBK4-4016		LINK ASSY	连杆	AR	
642-5677-501		CHANNEL ASSY	支架	AR	
642-9879-501		BRACKET ASSY	支架组件	AR	
642-9829-501		BRACKET ASSY	支架组件	AR	
22M1027-109		BOOTIE-HP	连接管	AR	
642-5653-501		BRACKET ASSY	支架组件	AR	
AMBK4-4019		LINK ASSY	连杆	AR	
238-0554-501		BRACKET	支架	AR	
642-5676-501		BRACKET ASSY	支架组件	AR	
642-9844-501		BRACKET ASSY	支架组件	AR	
642-9890-501		BRACKET ASSY	支架组件	AR	
642-5715-507		CHANNEL ASSY	支架	AR	
238-0654-503		BRACKET ASSY	支架组件	AR	
642-5673-501		BRACKET	支架	AR	
238-0914-503		BRACKET	支架	AR	
642-9934-501		BRACKET ASSY	支架组件	AR	
R0425A111	TAK6A146	RAFT-LIFE	救生筏	AR	
D30664-709	M17463	SLIDE	滑梯	AR	SV

60560592-101	A6509	RESERVOIR ASSY	翼上滑梯气瓶	AR	
64236-5	Q09745006	SAI SER AIRSPEED INDICAT	备用空速显示器	AR	
740121A	0161	GND POWER CONTROL UNIT	地面电源控制组件	AR	
642-2000-15	P3250	FWD ENGINE MOUNT	左前发吊点	AR	SV
642-2300-1	P2367	AFT ENGINE MOUNT	左后发吊点	AR	
642-2000-15	5580P/P	FWD ENGINE MOUNT	右前发吊点	AR	SV
642-2300-1	P1135	AFT ENGINE MOUNT	右后发吊点	AR	
EVT3454HC	164905423	FAN	风扇	AR	SV
9024-15704-03	12115682	SAFETY-VALVE	安全阀	AR	
9024-15704-03	14115393	SAFETY-VALVE	安全阀	AR	
755C0000-01	81210-566	REHEATER	再加热器	AR	SV
755C0000-01	81210-535	REHEATER	再加热器	AR	SV
963B0000-01	01715	VALVE, TRIM AIR	配平空气活门	AR	
963A0000-02	02606	VALVE, TRIM AIR	配平空气活门	AR	SV
963A0000-02	002788	VALVE, TRIM AIR	配平空气活门	AR	SV
758A0000-02	01784	BYPASS VALVE	旁通活门	AR	SV
758A0000-02	01980	BYPASS VALVE	旁通活门	AR	SV
12432-2	9714478	VALVE-ISOLATION	绝缘活门	AR	
4063-18221	0817332	VALVE-ISOLATION	绝缘活门	AR	SV
V2T127D	1822	AIR BUTTERFLY VALVE	空气蝶形活门	AR	SV
CT191B	887	AIR CHECK VALVE	空气单向活门	AR	
12664	9715135	VALVE, CHECK	再循环单向活门	AR	
12664	9714975	VALVE, CHECK	再循环单向活门	AR	
12664	9715133	VALVE, CHECK	再循环单向活门	AR	
1298A0000-01	05037	VALVE, CHECK TRIM AIR	空气配平单向活门	AR	SV
1298A0000-01	01390	VALVE, CHECK TRIM AIR	空气配平单向活门	AR	SV
763A0000-03	09898	SENSOR, TEMP	温度传感器	AR	SV
763A0000-03	10779	SENSOR, TEMP	温度传感器	AR	SV
763A0000-03	13871	SENSOR, TEMP	温度传感器	AR	SV
763A0000-03	28266	SENSOR, TEMP	温度传感器	AR	SV
763A0000-03	28331	SENSOR, TEMP	温度传感器	AR	SV
763A0000-03	30936	SENSOR, TEMP	温度传感器	AR	SV
600612-00-510	20742	SENSOR, DUCT. TEMP.	温度传感器	AR	
600612-00-510	20793	SENSOR, DUCT. TEMP.	温度传感器	AR	
764B0000-01	04511	TEMP SENSOR	温度传感器	AR	SV
764B0000-01	04526	TEMP SENSOR	温度传感器	AR	SV
764A0000-03	06400	TEMP SENSOR	温度传感器	AR	
764A0000-03	06167	TEMP SENSOR	温度传感器	AR	
764A0000-03	06153	TEMP SENSOR	温度传感器	AR	
766A0000-01	02248	SENSOR, TEMP. PNEUM	空气温度传感器	AR	
766A0000-01	02246	SENSOR, TEMP. PNEUM	空气温度传感器	AR	
767A0000-04	02197	SENSOR, TEMP. PNEUM	空气温度传感器	AR	
736A0000-02	03330	SENSOR, MIX. TEMP	温度混合传感器	AR	
736A0000-02	03320	SENSOR, MIX. TEMP	温度混合传感器	AR	
767A0000-04	02964	SENSOR, TEMP. PNEUM	空气温度传感器	AR	
9104A0003-01	JL030562	PRESSUER SENSOR	压力传感器	AR	SV
9104A0003-01	JL042804	PRESSUER SENSOR	压力传感器	AR	SV
768A0000-03	225166	PRESSUER SENSOR	压力传感器	AR	
HTE690047	47060342	SWITCH PRESS. HOT AIR	热空气压力电门	AR	
768A0000-03	225172	SENSOR, TEMP	温度传感器	AR	
1209-100	2821	SWITCH PRESSURE	压力电门	AR	SV

1209-100	8843	SWITCH PRESSURE	压力电门	AR	SV
1209-100	9290	SWITCH PRESSURE	压力电门	AR	SV
6610-20560-01	4681	ACTURATOR ROTARY	作动筒	AR	SV
1091A0000-01	13101	INJECTOR-WATER	水引射器	AR	
1091A0000-01	13102	INJECTOR-WATER	水引射器	AR	
87232323V00	VL2064006	SENSOR, TEMP. DUCT	温度传感器	AR	
746A0000-06	746-1149	VALVE, PRESS REGUL	压力调节活门	AR	SV
763A0000-03	26643	SENSOR	传感器	AR	SV
763A0000-03	09947	SENSOR	传感器	AR	SV
VD3810	10054257	MIXED FLOW FAN	排风扇	AR	SV
VD3920	16128611	FAN EXTRACTION	排风扇	AR	SV
769A0000-02	01722	VALVE CHECK	止回阀	AR	
769A0000-02	01882	VALVE CHECK	止回阀	AR	
VD3900-03	98021236	FAN, RECIRCULATION	再循环风扇	AR	SV
VD3900-03	10044882	FAN, RECIRCULATION	再循环风扇	AR	SV
747A0000-03	01863	WATER EXTRACTOR	水分离器	AR	
747A0000-03	01874	WATER EXTRACTOR	水分离器	AR	
VFT210B00	04434	AIR INLET VALVE	空气进口活门	AR	SV
761B0000-01	04775	ACTUATOR, INLET	进气口作动器	AR	
761B0000-01	04753	ACTUATOR, INLET	进气口作动器	AR	
762A0000-04	02879	ACTUATOR, OUTLET	出气口作动器	AR	SV
762A0000-04	02179	ACTUATOR, OUTLET	出气口作动器	AR	SV
751F0000-01	00183	FLOW CONTROL VALVE	流量控制活门	AR	
751F0000-01	01667	FLOW CONTROL VALVE	流量控制活门	AR	
41-2-1100-02	966	ACTUATOR, EMER. RAM AIR	应急冲压空气作动	AR	SV
753C0000-02	05999	HEAT EXCHANGER PRIMARY	热交换器	AR	SV
754C0000-01	05306	HEAT EXCHANGER MAIN	热交换器	AR	SV
753A0000-03	01662	HEAT EXCHANGER PRIMARY	热交换器	AR	
754A0000-03	01850	HEAT EXCHANGER MAIN	热交换器	AR	
4236534	78642	RUNWAY TURNOFF LIGHT	跑道转弯灯	AR	
8000281Y00	102258	RUNWAY TURNOFF LIGHT	跑道转弯灯	AR	
2LA005303-05	385130	TAIL STROBE LIGHT	尾翼频闪灯	AR	SV
1X2005012-00	2503	LOADING AREA LIGHT	装货区域灯	AR	
1X2005012-00	2520	LOADING AREA LIGHT	装货区域灯	AR	
2LA403702-01	2207155	LIGHT-NAVIGATION, REAR DI	方向导航灯	AR	
4236564	80519	TAXI LIGHT	滑行灯	AR	
2LA455010-00	538	STROBE LIGHT	频闪灯	AR	SV
190QA01	3455	CURRENT TRANSFORMER	电流转换器	AR	
190QA01	3453	CURRENT TRANSFORMER	电流转换器	AR	
8ES005309-00	376765	PSU-POWER SUPPLY UNIT	供电组件	AR	
8ES005309-00	2647	PSU-POWER SUPPLY UNIT	供电组件	AR	
600615-00-503	20579	CONTROLLER, CARGO VENT	货舱通风控制器	AR	SV
8ES455012-00	334	POWER SUPPLY UNIT	供电组件	AR	SV
8ES005304-00	1526	POWER SUPPLY UNIT	供电组件	AR	SV
72303102-7	11442	WING TIP NAVIGATION LIGHT	翼尖导航灯		
ZCV64-10	70902431	CHECK VALVE	单向活门	AR	
ZCV64-10	7080741	CHECK VALVE	单向活门	AR	
ZCV64-12	70818168	CHECK VALVE	单向活门	AR	
ZCV64-12	70818118	CHECK VALVE	单向活门	AR	
ZCV63-6	71006327	CHECK VALVE	单向活门	AR	
ZCV63-6	71006220	CHECK VALVE	单向活门	AR	

ZCV63-6	71216264	CHECK VALVE	单向活门	AR	
ZCV63-6	71216247	CHECK VALVE	单向活门	AR	
ZCV63-6	70917234	CHECK VALVE	单向活门	AR	
ZCV63-6	70811220	CHECK VALVE	单向活门	AR	
ZCV63-4	70925694	CHECK VALVE	单向活门	AR	
ZCV63-4	79729264	CHECK VALVE	单向活门	AR	
ZCV63-4	80106487	CHECK VALVE	单向活门	AR	
ZCV63-4	8012477	CHECK VALVE	单向活门	AR	
ZCV63-4	80106549	CHECK VALVE	单向活门	AR	
ZCV64-20	9090865	CHECK VALVE	单向活门	AR	
70200	3478	VALVE, 2/2WAY	双通路活门	AR	
70200	3602	VALVE, 2/2WAY	双通路活门	AR	
70200	19665	VALVE, 2/2WAY	双通路活门	AR	
C51LM0020	2617	VALVE-RESERVOIR FILL	储压活门	AR	
QA05593	RG1-2231	FILTER HYD. HP	高压液压油滤	AR	
QA05597	RG1-2262	FILTER HYD. HP	高压液压油滤	AR	
C82LL0010	2904	DRAIN VALVE	排水活门	AR	SV
568-1-27202-05R	5350	FUEL PUMP TYPE	燃油泵	AR	SV
L95F100-603	30977	PROTECTOR	保护器	AR	
8ES403703-02	1340304	TRANSFORMER	变压器	AR	
SB209L1A1-1483	19465	HYDR. ACCUMULATOR	液压储压器	AR	SV
18330904-2	42313D	GAUGE PRESSURE	压力表	AR	SV
HTE510016	C123539	ACCUMULATOR GAS CHECK VAL	储压器进气活门	AR	SV
114160005	HAI-DRG-C	RAT JACK EJECTION	RAT弹射器	AR	
20790-03AC	1251689	VALVE-OUTFLOW	外流活门	AR	
680203037A	0260	RAM AIR TURBINE	冲压涡轮	AR	SV
933260	F9818983	PUMP-HYDR	液压泵	AR	
114161003	CWDD-DH14	MODULE-JACK CONTROL	RAT作动筒控制组件	AR	
S4-3500711	0869	MANIFOLD GROUND SERVICE	地面服务总管	AR	
974540	G0430263	MOTOR PUMP	电动泵	AR	
974540	G0941182	MOTOR PUMP	电动泵	AR	
SB209L1A1-1483	19686	HYDR. ACCUMULATOR	液压储压器	AR	SV
18330904-2	42870D	GAUGE PRESSURE	压力表	AR	SV
HTE510016	C062322	ACCUMULATOR GAS CHECK VAL	储压器进气活门	AR	SV
769105A	CWDD-DH44	MODULE RAT GND CHECK	冲压涡轮地面检查	AR	
6-1404-0000-4	970295	HYDR HAND PUMP	手动液压泵	AR	SV
6-1404-0000-4	970197	HYDR HAND PUMP	手动液压泵	AR	SV
C19DS0014	936	RESERVOIR YELLOW	黄系统邮箱	AR	
18301905-1	43362D	PRESSURE GAUGE	压力表	AR	
HTE510016	FRTR443	PRESSURE SWITCH	压力电门	AR	SV
70400	2731	VALVE RELIEF AIR	释压阀	AR	
C19DS0024	924	RESERVOIR GREEN	绿系统邮箱	AR	
18301905-1	42938D	PRESSURE GAUGE	压力表	AR	
HTE690025-1	Q520901	PRESS SWITCH AIR	压力电门	AR	
70400	3122	VALVE RELIEF AIR	释压阀	AR	
C19BQ0014	955	RESERVOIR BLUE	蓝系统邮箱	AR	
18301905-1	42930D	PRESSURE GAUGE	压力表	AR	
HTE690035-1	Q3211101	PRESS SWITCH AIR	压力电门	AR	
70400	4310	VALVE RELIEF AIR	释压阀	AR	
ZCV63-6	71216123	CHECK VALVE	单向阀	AR	
ZCV63-8	8020244	CHECK VALVE	单向阀	AR	

ZCV64-10	71208139	CHECK VALVE	单向阀	AR	
450-2-3100-00	47460	SWITCH-PRESSURE	压力电门	AR	SV
2407-89-03	240789-12	DME ANTENNA	测距机天线	AR	
2407-89-03	240789-24	DME ANTENNA	测距机天线	AR	
9599-607-12352	13958	RODIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
9599-607-12352	13959	RODIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
9599-607-12352	15270	RODIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
9599-607-12352	53836	RODIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
2439-89-03	243989-91	ATC ANTENNA	应答机天线	AR	
2439-89-03	243989-58	ATC ANTENNA	应答机天线	AR	
TM113-1	16245	TRANSDUCER AND SWITCH TEM	温度开关及传感器	AR	
2LA005127-01	856	OVERWING EMERG LIGHT	翼上应急灯	AR	
2LA005128-01	856	OVERWING EMERG LIGHT	翼上应急灯	AR	
2LA005413-01	868	OVERWING EMERG LIGHT	翼上应急灯	AR	
2LA005414-01	864	OVERWING EMERG LIGHT	翼上应急灯	AR	
3107-89	310789-56	ANTENNA-MARKER	指点信标天线	AR	
ZCV63-4	7082984	CHECK VALVE	单向活门	AR	
ZCV63-4	70925674	CHECK VALVE	单向活门	AR	
ZCV63-4	70925664	CHECK VALVE	单向活门	AR	
S4-3500711	0867	GROUND SERVICE MANIFO	地面服务总管	AR	
568-1-27202-05R	5755	LEAK-MONITOR	渗漏检测器	AR	SV
568-1-27202-05R	5414	LEAK-MONITOR	渗漏检测器	AR	SV
568-1-27202-05R	5757	LEAK-MONITOR	渗漏检测器	AR	SV
568-1-27202-05R	14357	LEAK-MONITOR	渗漏检测器	AR	SV
QA05561	RG11797	FILTER HYD LP	低压过滤器	AR	
QA05561	RG1-1786	FILTER HYD LP	低压过滤器	AR	
TM113-1	2037	TRANSD SWITCH TEMP	温度传感器电门	AR	
QA05604	RG1-1881	FILTER HYD LP	低压过滤器	AR	
TM113-1	2077	TRANSD SWITCH TEMP	温度传感器电门	AR	
S4-3500712	0163	GROUND SERVICE MANIFO	地面服务总管	AR	
S4-3400900-01	01810	MANUAL SELECTOR VALVE	人工控制活门	AR	SV
ZCV64-20	80123240	CHECK VALVE	单向活门	AR	
1559A9900-01	00166	HP-MANIFOLD GREEN	绿系统高压总管	AR	
QA06304	RG10-1802	FILTER	油滤	AR	
CZ9284E	HEK40713	PRESSURE TRANSDUCER	压力传感器	AR	SV
50-2-3100-00	10935	PRESSURE TRANSDUCER	压力传感器	AR	SV
50-2-3100-00	10940	PRESSURE TRANSDUCER	压力传感器	AR	SV
114151004	CWDD-DH87	VALVE-RELIEF	释压活门	AR	
71190400010NCOA	508280024	VALVE SAMPLING	取样活门	AR	SV
ZCV64-16	90104141	CHECK VALVE	单向活门	AR	
31077-111	7127	INBD. SPOILER SERVOCONTROI	内侧扰流板伺服控	AR	
31077-111	7130	INBD. SPOILER SERVOCONTROI	内侧扰流板伺服控	AR	
31077-111	7126	INBD. SPOILER SERVOCONTROI	内侧扰流板伺服控	AR	
31077-111	7125	INBD. SPOILER SERVOCONTROI	内侧扰流板伺服控	AR	
31077-211	46539	INBD. SPOILER SERVOCONTROI	内侧扰流板伺服控	AR	
34100005-1	77707D1	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1613RK	CARTRIDGE	灭火瓶爆炸帽	AR	
34100005-1	79397D1	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1612RK	CARTRIDGE	灭火瓶爆炸帽	AR	
34100005-1	77378D1	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1614RK	CARTRIDGE	灭火瓶爆炸帽	AR	

34100005-1	53975D1	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1615RK	CARTRIDGE	灭火瓶爆炸帽	AR	
C12CB0010	973	PUMP-FUEL	燃油泵	AR	
SB209L1A1-1482	20172	ACCUMULATOR-HYD	液压油储压器	AR	
18330904-2	42421D	HP GAUGE	高压压力表	AR	SV
HTE510016	C062344	ACCUMULATOR GAS CHECK VAL	储压器进气活门	AR	SV
B27000	905	ACTUATOR-ELECTRIC	电子作动器	AR	
38E93-6	9889	VALVE-ANTI-ICING	防冰活门	AR	SV
L83A13-617	20337	LEAK-MONITOR	渗漏监测器	AR	
S4-3300520-01	1554	ACTUATOR	作动器	AR	SV
S4-3300520-01	1555	ACTUATOR	作动器	AR	SV
31075-840	4374	ELEVATOR SERVOCONTROL	伺服作动器	AR	SV
31075-840	16709	SERVOCONTROL	伺服作动器	AR	SV
31075-840	21225	SERVOCONTROL	伺服作动器	AR	SV
31075-840	4030	SERVOCONTROL	伺服作动器	AR	SV
4-60000H882-00	10406	ANTENNA-MARKER	排放桅杆	AR	SV
L95F100-603	30976	FUEL TK OVERPRESSURE	燃油过压保护	AR	
796-815-01-02	0757	PRESELECTOR	预选器	AR	
1407KID02-03	981071	FUEL QTY INDICATOR	燃油量指示器	AR	
PG1152AC03	98015991	AIR DATA MODULE	大气数据组件	AR	
PG1152AC03	98015993	AIR DATA MODULE	大气数据组件	AR	
PG1152AC03	98015995	AIR DATA MODULE	大气数据组件	AR	
PG1152AC03	98015998	AIR DATA MODULE	大气数据组件	AR	
PG1152AC03	98016019	AIR DATA MODULE	大气数据组件	AR	
PG1152AC03	98016020	AIR DATA MODULE	大气数据组件	AR	
PG1152AC03	98016024	AIR DATA MODULE	大气数据组件	AR	
PG1152AC03	98016026	AIR DATA MODULE	大气数据组件	AR	
0861ED	0861ED-44	ANGLE OF ATTACK SENSOR	迎角仪	AR	SV
3105-89	1176	GLIDE ANTENNA	滑行天线	AR	
3106-89	1176	LOCALIZER ANTENNA	定位天线	AR	
31077-211	27658	INBD SPOILER SERVOCONTROL	内侧扰流板伺服控	AR	
31077-111	7133	INBD SPOILER SERVOCONTROL	内侧扰流板伺服控	AR	
31077-111	7123	INBD SPOILER SERVOCONTROL	内侧扰流板伺服控	AR	
31077-111	7129	INBD SPOILER SERVOCONTROL	内侧扰流板伺服控	AR	
31077-111	7132	INBD SPOILER SERVOCONTROL	内侧扰流板伺服控	AR	
520913	F9818714	CONST SPEED MOD GENERATOR	恒速发电机	AR	
748A0000-08	01944	VALVE ANTI ICING	防冰活门	AR	
PPA1102-00	5478	SMOKE DETECTOR	烟雾探测器	AR	SV
PPA1102-00	10532	SMOKE DETECTOR	烟雾探测器	AR	SV
PPA1102-00	13458	SMOKE DETECTOR	烟雾探测器	AR	SV
PPA1102-00	13461	SMOKE DETECTOR	烟雾探测器	AR	SV
PPA1102-00	13467	SMOKE DETECTOR	烟雾探测器	AR	SV
PPA1102-00	15799	SMOKE DETECTOR	烟雾探测器	AR	SV
14404-011B	97080304	CONT VAC SYS	真空控制组件	AR	
3888394-221205	04129	ECB-ELECTRONIC CONTROL BO	电子控制盒	AR	SV
PPA1102-00	1136	SMOKE DETECTOR	烟雾探测器	AR	SV
PPA1102-00	1143	SMOKE DETECTOR	烟雾探测器	AR	SV
PPA1102-00	15805	SMOKE DETECTOR	烟雾探测器	AR	SV
822-0297-020	1166	VOR RECEIVER	VOR收发机	AR	SV
822-0323-020	3710	VHF COMM. TRANSCEIVER	VHF收发机	AR	SV
241-246-022-004	0285	ENGINE VIBRATION MONITOR	发动机振动监控组	AR	

3957985114	Q05720014	ENGINE INTERFACE UNIT	发动机接口组件	AR	
822-0297-020	146989	VOR RECEIVER	VOR收发机	AR	SV
115370-1016	1611	FCDC	飞行控制数据计算	AR	SV
115370-1016	1608	FCDC	飞行控制数据计算	AR	SV
B397BAM0624	Q00140013	FAC	飞行增稳计算机	AR	SV
C13043AA06	C1304304	FMGC	飞行指引计算机	AR	
822-0299-020	123763	ADF RECEIVER	ADF收发机	AR	SV
822-0299-020	199730	ADF RECEIVER	ADF收发机	AR	SV
9022-15702-11	4417	PRESSURE-CONTROLIER	压力控制器	AR	
9022-15702-11	9931726	PRESSURE-CONTROLIER	压力控制器	AR	
785-002-8	3046	BLEED MONITORING COMTUTE	引气/放气监控计算	AR	
785-002-8	785002ING	BLEED MONITORING COMTUTE	引气/放气监控计算	AR	
30042-0000-0501	1728	FUEL LEVEL SENSING CONTR	油位传感控制组件	AR	
30042-0000-0501	4860	FUEL LEVEL SENSING CONTR	油位传感控制组件	AR	
740120C	3553	GCU GENERATOR CONTROL UN	发电机控制组件	AR	SV
740120C	4674	GCU GENERATOR CONTROL UN	发电机控制组件	AR	SV
822-0330-020	113009	HF/COMM TRANSCEIVER	高频收发机	AR	
822-0330-020	132343	HF/COMM TRANSCEIVER	高频收发机	AR	
9615325070	5006	DISPLAY MANAGEMENT COMPUT	显示管理计算机	AR	
9615325070	998256007	DISPLAY MANAGEMENT COMPUT	显示管理计算机	AR	
3945128218	ELACVB016	ELEVATOR AILERON COMPUTE	升降舵副翼计算机	AR	
3945128218	ELACVB016	ELEVATOR AILERON COMPUTE	升降舵副翼计算机	AR	
822-1152-122	73VY	GLOBAL LANDING UNIT	全球着陆系统组件	AR	
822-1152-122	1874FK	GLOBAL LANDING UNIT	全球着陆系统组件	AR	
622-5136-201	1924	DRIVE-WEATHER RADAR	气象雷达	AR	
622-5137-601	6020	WEATHER RADAR ANTENNA	气象雷达天线	AR	SV
682007004	78397	RAT CONTROL PANEL	冲压涡轮控制板	AR	
796-809-6A	2714	FUEL CADENSICON SENSOR	燃油密度传感器	AR	SV
796-809-6A	4369	FUEL CADENSICON SENSOR	燃油密度传感器	AR	SV
L83A13-614	24015	VALVE-DRAIN WATER	排水活门	AR	
L83A13-614	23714	VALVE-DRAIN WATER	排水活门	AR	
L83A13-614	23715	VALVE-DRAIN WATER	排水活门	AR	
L83A13-614	24016	VALVE-DRAIN WATER	排水活门	AR	
FRH280002	6030115	AIR RELEASE VALVE	放气活门	AR	SV
FRH280002	11030567	AIR RELEASE VALVE	放气活门	AR	SV
L95F50-603	22471	PROTECTOR-OVERPRESSURE	过压保护器	AR	SV
L95F50-603	22455	PROTECTOR-OVERPRESSURE	过压保护器	AR	SV
L95F50-603	22656	PROTECTOR-OVERPRESSURE	过压保护器	AR	SV
9508175	FRTR047AV	FLOAT VENT VALVE	通气浮子活门	AR	
9508175	FRTR046AV	FLOAT VENT VALVE	通气浮子活门	AR	
9508175	FRTR045AV	FLOAT VENT VALVE	通气浮子活门	AR	
9508175	FRTR048AV	FLOAT VENT VALVE	通气浮子活门	AR	
630CC01Y1	5845	100A SINGLE POLE CONTACT	接触器	AR	
630CC01Y1	5844	100A SINGLE POLE CONTACT	接触器	AR	
630CC01Y1	5858	100A SINGLE POLE CONTACT	接触器	AR	
630CC01Y1	5782	100A SINGLE POLE CONTACT	接触器	AR	
630CC01Y1	5783	100A SINGLE POLE CONTACT	接触器	AR	
986F12-1	D01243	CHECK VALVE, PRESS. SER	单向阀	AR	
3540000-1	FRTR3333A	TEMPERATURE SENSOR	温度传感器	AR	
3540000-1	FRTR3334A	TEMPERATURE SENSOR	温度传感器	AR	
3540000-1	FRTR3332A	TEMPERATURE SENSOR	温度传感器	AR	

3540000-1	FRTR3335A	TEMPERATURE SENSOR	温度传感器	AR	
9811839	FRTR805A	CHECK VALVE	单向活门	AR	
9811839	FRTR806A	CHECK VALVE	单向活门	AR	
9811839	FRTR804A	CHECK VALVE	单向活门	AR	
9811839	FRTR807A	CHECK VALVE	单向活门	AR	
9811839	FRTR809A	CHECK VALVE	单向活门	AR	
HTE900095	FRTR022A	TRANSFER VALVE DRIVE SHAFT	转换活门驱动器	AR	
HTE900095	FRTR021A	TRANSFER VALVE DRIVE SHAFT	转换活门驱动器	AR	
HTE370001	M0145VNR0	HP GROUND CONNECTOR	高压地面接头	AR	
HTE310021-1	FRTR006A	AIR INLET VALVE	空气进气活门	AR	
HTE310021-1	FRTR007A	AIR INLET VALVE	空气进气活门	AR	
HTE420044	FRTR012A	PRESSURE HOLDING VALVE	压力保持活门	AR	
HTE420044	FRTR011A	PRESSURE HOLDING VALVE	压力保持活门	AR	
HTE900087-001	FR124BA	FUEL TRANSFER VALVE	燃油传输活门	AR	
HTE900087-001	FRTR036A	FUEL TRANSFER VALVE	燃油传输活门	AR	
HTE900087-001	FRTR039A	FUEL TRANSFER VALVE	燃油传输活门	AR	
HTE900087-001	M199VB688	FUEL TRANSFER VALVE	燃油传输活门	AR	
568-1-27203-002	5117	FUEL PUMP CANISTER	燃油泵护罩	AR	
568-1-27244-002	5082	FUEL PUMP CANISTER	燃油泵护罩	AR	
568-1-27244-002	5061	FUEL PUMP CANISTER	燃油泵护罩	AR	
568-1-27203-002	5120	FUEL PUMP CANISTER	燃油泵护罩	AR	
HTE900096	FRTR021A	TRANSFER VALVE DRIVE SHAFT	转子活门驱动轴	AR	
HTE900096	FRTR020A	TRANSFER VALVE DRIVE SHAFT	转子活门驱动轴	AR	
3901395	834AX	JET PUMP ASSY	引射泵	AR	
3901395	792AX	JET PUMP ASSY	引射泵	AR	
HTE900133	FRTR081A	FUEL DEFUEL/TRANSFER VALVE	抽油传输活门	AR	
HTE900135	FRTR081A	FUEL CROSS FEED VALVE	燃油传输活门	AR	
3508802-36	FRTR013A	MAGNETIC FUEL LEVEL INDICATOR	磁性燃油油位指示	AR	
3508802-36	FRTR012A	MAGNETIC FUEL LEVEL INDICATOR	磁性燃油油位指示	AR	
748A0000-08	01943	ANTI-ICE VALVE	防冰活门	AR	
Y005-2	4393	TRANSFORMER RECTIFIER	变压整流器	AR	
Y005-3	9165	TRANSFORMER RECTIFIER	变压整流器	AR	
114122014	DH-4022-C	DOOR ACTUATOR, MLG	主起落架舱门作动	AR	
114122015	CH1124232	DOOR ACTUATOR, MLG	主起落架舱门作动	AR	
B372BAM0515	6813	SPOILER ELEVATOR COMPUTER	升降舵/扰流板计算机	AR	SV
B372BAM0515	Q00136017	SPOILER ELEVATOR COMPUTER	升降舵/扰流板计算机	AR	SV
350E053021818	0E0013060	FLIGHT WARNING COMPUTER	飞行警告计算机	AR	SV
350E053021818	0E0013073	FLIGHT WARNING COMPUTER	飞行警告计算机	AR	SV
622-5132-622	8452	WEATHER RADAR TRANSCEIVER	气象雷达收发机	AR	
622-5132-622	1611X8	WEATHER RADAR TRANSCEIVER	气象雷达收发机	AR	
350E5500202	0E5008706	SDAC-SYSTEM DATA ACQUISITION	系统数据采集集中	AR	
35-0E5-151331	1884	SDAC-SYSTEM DATA ACQUISITION	系统数据采集集中	AR	
822-0329-020	1270	DME INTERROGATOR	DME应答机	AR	
822-0323-020	1604	VHF/COMM. TRANSCEIVER	甚高频收发机	AR	SV
822-0323-020	3779	VHF/COMM. TRANSCEIVER	甚高频收发机	AR	SV
759C0000-02	01782	CONTROLLER-PACK	空调组件控制器	AR	SV
759C0000-02	01833	CONTROLLER-PACK	空调组件控制器	AR	SV
B397BAM0624	5990	FAC	飞行增稳计算机	AR	SV
C13043AA06	C13043032	FMGC	飞行指引计算机	AR	
49-117-10	1810	SLAT/FLAP CONTROL COMPUTER	襟副翼控制计算机	AR	
49-117-10	2035	SLAT/FLAP CONTROL COMPUTER	襟副翼控制计算机	AR	

965-1676-003	EMK5-2943	GPWC-GROUND PROXIMITY WA	近地警告计算机	AR	SV
RD-AX1301-2D	100065	MAIN MULTIPLEXER	主多路复用器	AR	
746923E	3965	ELECTRICAL GENERATION IN	发电接口装置	AR	
746923E	1899	ELECTRICAL GENERATION IN	发电接口装置	AR	
RAI2800M0706	Q00160007	SMOKE DETCTOR CONTROL UN	燕舞探测控制组件	AR	SV
Z010H0015119	02999	CIDS DIRECTOR	CIDS检测器	AR	
Z010H0005118	02681	CIDS DIRECTOR	CIDS检测器	AR	
740120C	7586	GROUND POWER CONTROL UN	地面电源控制组件	AR	SV
775D0000-01	02684	CONTROLLER-ZONE	区域控制组件	AR	
1058-34	1219	TYRE PRESS. INDICATING UN	胎压指示组件	AR	
RD-AX7095-01	105009	ANNOUNCE TAPE REPRO	放音机	AR	
SIC5059-11-0207	1725	FQI COMPUTER	燃油量指示计算机	AR	
3957985114	2158	ENGINE INTERFACE UNIT	发动机接口组件	AR	
AMU2790CB06	1168	AUDIO MANAGEMENT UNIT	音频管理组件	AR	
RD-AX7271	C765275	RPDR ANNOUNCE MUSIC	放音机	AR	
910030-5086	2052	DIGITAL INTERFACE UNIT	数据接口组件	AR	
2243800-364	RA06134	OPTICAL DISC RECORDER	光盘记录器	AR	SV
B401ACM0507	442	CFDIU	中央故障显示接口	AR	
965-0758-001	CMUMK2-03	MU-ACARS	通讯隔离组件	AR	SV
9615325070	4930	DISPLAY MANAGEMENT COMPUT	显示管理计算机	AR	
B372BAM0515	Q00136017	SPOILER ELEVATOR COMPUTE	扰流板升降舵计算	AR	SV
87292325V07	VL2062006	AVNCS EQPT VENT COMPUTER	电子设备计算机	AR	
E21327007	4452	BSCU-BRAKING AND STEERING	刹车控制组件	AR	
600611-00-601	20447	CONTROLLER-HEAT	货舱加热控制器	AR	
Y192	H04918	TR-TRANSFORMER RECTIFIER	变压整流器	AR	SV
503CA02F1-02Y1	2353	DOUBLE THREE POLE CONTACT	双三级接触器	AR	
503CA02F1-02Y1	2352	DOUBLE THREE POLE CONTACT	双三级接触器	AR	
3025	1793	STATIC CONVERTER	静态变流器	AR	
ZCV63-8	80202106	CHECK VALVE	单向活门	AR	
ZCV63-8	80202107	CHECK VALVE	单向活门	AR	
ZCV63-4	7082987	CHECK VALVE	单向活门	AR	
ZCV64-12	7082089	CHECK VALVE	单向活门	AR	
ZCV63-6	70917223	CHECK VALVE	单向活门	AR	
ZCV63-6	70917278	CHECK VALVE	单向活门	AR	
ZCV63-6	71006221	CHECK VALVE	单向活门	AR	
ZCV63-6	71006365	CHECK VALVE	单向活门	AR	
ZCV63-6	71215432	CHECK VALVE	单向活门	AR	
ZCV63-6	71215476	CHECK VALVE	单向活门	AR	
ZCV63-6	71215478	CHECK VALVE	单向活门	AR	
ZCV63-6	71215481	CHECK VALVE	单向活门	AR	
ZCV63-6	71215484	CHECK VALVE	单向活门	AR	
ZCV63-6	71215485	CHECK VALVE	单向活门	AR	
ZCV63-6	71215486	CHECK VALVE	单向活门	AR	
ZCV63-6	71215487	CHECK VALVE	单向活门	AR	
D201094-D	018361	STATIC PROB	静压探测器	AR	
D201094-D	019027	STATIC PROB	静压探测器	AR	
D201094-D	019053	STATIC PROB	静压探测器	AR	
D201094-D	019060	STATIC PROB	静压探测器	AR	
D201094-D	019067	STATIC PROB	静压探测器	AR	
D201094-D	019368	STATIC PROB	静压探测器	AR	
HTE190001-2	FRTR239A	TWIN MOTOR ACTUATOR	双电机作动器	AR	SV

HTE190001-2	M133GB398	TWIN MOTOR ACTUATOR	双电机作动器	AR	SV
HTE190001-2	M256GB298	TWIN MOTOR ACTUATOR	双电机作动器	AR	SV
HTE200002-1	38082170	ACTUATOR	作动器	AR	SV
HTE200002-1	44126286	ACTUATOR	作动器	AR	SV
HTE200002-1	M149GB298	ACTUATOR	作动器	AR	SV
HTE200002-1	M150GB298	ACTUATOR	作动器	AR	SV
HTE200002-1	M221GB119	ACTUATOR	作动器	AR	SV
J172ABM	9167	ACCELEROMETER	加速度计	AR	
J172ABM	9209	ACCELEROMETER	加速度计	AR	
J172ABM	9210	ACCELEROMETER	加速度计	AR	
J172ABM	9211	ACCELEROMETER	加速度计	AR	
3214-54-10	1055	EMERGENCY POWER SUPPLY UN	应急电源供电组件	AR	
3214-54-10	1059	EMERGENCY POWER SUPPLY UN	应急电源供电组件	AR	
3214-54-10	1056	EMERGENCY POWER SUPPLY UN	应急电源供电组件	AR	
3214-54-10	3479	EMERGENCY POWER SUPPLY UN	应急电源供电组件	AR	
792-6140-001	12470	ANTENNA COUPLER	天线耦合器	AR	
792-6140-001	12473	ANTENNA COUPLER	天线耦合器	AR	
2598D	4402	LIGHT TRANSFORMER	照明变压器	AR	
2598D	4422	LIGHT TRANSFORMER	照明变压器	AR	
5906733	8067	CURRENT TRANSFORMER	电流互感器	AR	
5906733	8068	CURRENT TRANSFORMER	电流互感器	AR	
5906734	11013	AC CURRENT TRANSFORMER	交流电互感器	AR	
5906734	11014	AC CURRENT TRANSFORMER	交流电互感器	AR	
5906734	11046	AC CURRENT TRANSFORMER	交流电互感器	AR	
5906734	11047	AC CURRENT TRANSFORMER	交流电互感器	AR	
5906734	11048	AC CURRENT TRANSFORMER	交流电互感器	AR	
14330-144	2418	FLUSH CONTROL UNIT	冲洗控制组件	AR	
14330-144	975	FLUSH CONTROL UNIT	冲洗控制组件	AR	
14330-144	2445	FLUSH CONTROL UNIT	冲洗控制组件	AR	
DK120-90	AT135228	CVR ULB BATTERY	电池	AR	SV
ELP-362D	73499	DFDR ULB BATTERY	电池	AR	
9028A0004-01	07461	POSITION PICK-OFF	位置采集传感器	AR	
9028A0004-01	07526	POSITION PICK-OFF	位置采集传感器	AR	
9028A0004-01	07527	POSITION PICK-OFF	位置采集传感器	AR	
9028A0004-01	07528	POSITION PICK-OFF	位置采集传感器	AR	
1X2005097-00	2331360	LOGO LIGHT	标志灯	AR	SV
1X2005097-00	4245042	LOGO LIGHT	标志灯	AR	SV
521100	G0630081	GENERATOR CONTROL UNIT	发电机控制组件	AR	
796-809-6A	2361	FUEL CADENSICON	电容式密度计传感	AR	SV
Z212H0001110	02375	WATER HEATING CONTROL UN	水加热控制组件	AR	
93A150-20	01088	CONTROL UNIT	控制组件	AR	
S1821502-02	2611712-0	FIXED ELT	定位发射机	AR	SV
35-0L5-1005-08	0L5002670	BATTERY CHARGE LIMITER	电瓶充电限制器	AR	SV
35-0L5-1005-08	2045	BATTERY CHARGE LIMITER	电瓶充电限制器	AR	SV
4188-00	002407	STATIC INVERTER	静变流器	AR	
DVE90-06	1948	VALVE SOLENOID FOR OXYGEN	氧气电磁阀	AR	
773A0000-01	05642	SENSOR TEMPERATURE	温度传感器	AR	
773A0000-01	06066	SENSOR TEMPERATURE	温度传感器	AR	
773A0000-01	54653	SENSOR TEMPERATURE	温度传感器	AR	
CZ9DM6A	HAK36100	PRESSURE TRANSDUCER	压力传感器	AR	
CZ9DM6A	HAK5374	PRESSURE TRANSDUCER	压力传感器	AR	

CMK80-01	2092	PRESSURE SWITCH	压力电门	AR	
986F12-1	1810	PRESSURE SERVICE CHECK VALVE	压力服务单向活门	AR	
972C10-1	J31231	VALVE SHUTTLE	选择活门	AR	
9811839	FRTR808A	CHECK VALVE	单向活门	AR	
TA01Z6005	2714	TRANSFORMER	变压整流器	AR	
BA24320A-1	54073	FIRE EXTINGUISHER	厕所灭火瓶	AR	SV
BA24320A-1	54078	FIRE EXTINGUISHER	厕所灭火瓶	AR	SV
BA24320A-1	54081	FIRE EXTINGUISHER	厕所灭火瓶	AR	SV
30-1883-5	1699	LH WING ENGINE SCAN LIGHT	发动机观察灯	AR	
30-1883-6	1705	RH WING ENGINE SCAN LIGHT	发动机观察灯	AR	
8ES455012-00	554	POWER SUPPLY UNIT	电源供应组件	AR	SV
6740E010000	00217	OVERPRESSURE VALVE	过压活门	AR	
6740E010000	01613	OVERPRESSURE VALVE	过压活门	AR	
6730B01	01734	FAN AIR VALVE	风扇空气活门	AR	SV
6730F010000	6730-1024	FAN AIR VALVE	风扇空气活门	AR	
C49AA0221	843	FUEL PUMP CANISTER	燃油泵护罩	AR	
568-1-27244-002	5058	FUEL PUMP CANISTER	燃油泵护罩	AR	
89794050	C19111568	CREW OXYGEN CYLINDER	机组氧气瓶	AR	
980-6020-001	1642	FLIGHT VOICE RECORDER	飞行语音记录仪	AR	SV
980-4700-003	2240	FLIGHT DATA RECORDER	飞行数据记录仪	AR	SV
1158000-15	FRTR-320A	REFUELING VALVE ELEMENT	加油活门组件	AR	
20700-300	910	VALVE FUEL	燃油活门	AR	
1158000-21	FRTR136-A	REFUELING VALVE ELEMENT	加油活门组件	AR	SV
1158000-21	FRTR412A	REFUELING VALVE ELEMENT	加油活门组件	AR	SV
1158000-21	FRTR049A	REFUELING VALVE ELEMENT	加油活门组件	AR	SV
HTE900118-001	FRTR067A	LOW PRESSURE FUEL VALVE	低压燃油活门	AR	SV
9815715	FRTR116A	RELIEF VALVE	施压活门	AR	
0727540	C122380	COUPLING REFUEL	加油耦合器	AR	
CG7G0	4640	SMOKE DETECTOR	烟雾探测器	AR	
C2459000-1	H1211	FOOT MOTOR	进步马达	AR	
A25312-1	H1924	THROTTLE VALVE	节流活门	AR	
101809-04	0151143	ALTITUDE SWITCH	双高度电门	AR	
C20215000	920	BRAKE PEDAL TRANSMITTER	刹车脚踏传感器	AR	SV
D05000	1885	VALVE-FILL AND DRAIN	排放活门	AR	SV
A25315-1	U296	PARKING BRAKE VALVE	停留刹车活门	AR	
94830-10	309	APU VIBRATION ISOLATOR	APU减震器	AR	SV
24E507009G03	UJW03437	WATER HEATER	水加热器	AR	SV
24E507009G03	UJW03457	WATER HEATER	水加热器	AR	SV
24E507009G03	UJW03463	WATER HEATER	水加热器	AR	SV
D2907017500200	1658	MANIFOLD PTU	PTU总管	AR	
ZCV64-12	7082085	CHECK VALVE	单向活门	AR	
BHC1060-04	2839	PRIORITY VALVE	优先活门	AR	SV
1396B0000-01	00619	2-2 WAY VALVE	双通活门	AR	SV
ZCV67-1	04-051774	CHECK VALVE	单向活门	AR	
749198-2	H0388	HYDRAULIC RESERVOIR	液力油箱	AR	
C24592000-1	H1210	FOOT MOTOR	进步马达	AR	
342300M01	4104	TRANSDUCER UNIT	传感器组件	AR	
342300M01	AL36672	TRANSDUCER UNIT	传感器组件	AR	
322000M02	1770	TRANSDUCER UNIT	传感器组件	AR	SV
322000M02	1787	TRANSDUCER UNIT	传感器组件	AR	SV
521A0200-01	03298	ADAPTER PPU	适配器组件	AR	

521A0200-01	03299	ADAPTER PPU	适配器组件	AR	
790A0000-02	U2576	BEVEL GEARBOX	斜齿轮箱	AR	
790A0000-02	U2614	BEVEL GEARBOX	斜齿轮箱	AR	
790A0000-02	U2615	BEVEL GEARBOX	斜齿轮箱	AR	
ZCV63-6	80126600	CHECK VALVE	单向活门	AR	
788A0000-02	U1786	RIGHT ANGLE GEARBOX	角齿轮箱	AR	
788A0000-02	U1787	RIGHT ANGLE GEARBOX	角齿轮箱	AR	
828A0000-02	U3528	BEVEL GEARBOX	斜齿轮箱	AR	
828A0000-02	U3529	BEVEL GEARBOX	斜齿轮箱	AR	
828A0000-02	U3530	BEVEL GEARBOX	斜齿轮箱	AR	
828A0000-02	U3531	BEVEL GEARBOX	斜齿轮箱	AR	
789A0000-02	U1726	LINE GEARBOX	线齿轮箱	AR	
789A0000-02	U1727	LINE GEARBOX	线齿轮箱	AR	
831A0000-05	03598	WING TIP BRAKER	翼尖刹车	AR	
831A0000-05	03599	WING TIP BRAKER	翼尖刹车	AR	
831A0000-05	03600	WING TIP BRAKER	翼尖刹车	AR	
831A0000-05	03601	WING TIP BRAKER	翼尖刹车	AR	
114087006	CWDD-DH-8	DOOR BY-PASS VALVE, MLG	主起落架舱门旁通	AR	
114087006	CWDD-DH-4	DOOR BY-PASS VALVE, MLG	主起落架舱门旁通	AR	
114083003	CWDD-DH-5	VENT VALVE, MLG	主起落架排水活门	AR	
114083003	CWDD-DH-2	VENT VALVE, MLG	主起落架排水活门	AR	
342B050000	04263	TEMPERATURE CONTROL THERM	风扇空气阀恒温控	AR	SV
342B050000	14121	TEMPERATURE CONTROL THERM	风扇空气阀恒温控	AR	SV
341E030000	01871	SOLENOID THERMOSTAT	压力调节活门控制	AR	SV
341E030000	17685	SOLENOID THERMOSTAT	压力调节活门控制	AR	SV
1663214301	B2530	PROBES HEAT COMPUTER	探头加温计算机	AR	
1663214301	B2789	PROBES HEAT COMPUTER	探头加温计算机	AR	SV
7304-01-02	7295	FIRE DETECTION UNIT	火警探测器组件	AR	
7304-01-02	7555	FIRE DETECTION UNIT	火警探测器组件	AR	
1663214301	B3029	PROBES HEAT COMPUTER	探头加温计算机	AR	
5XA005032-01	1049	CONTROLLER-LIGHTING	灯光控制器	AR	
5XA005033-00	1965	CONTROLLER-LIGHTING	灯光控制器	AR	
5XA005033-00	1966	CONTROLLER-LIGHTING	灯光控制器	AR	
BC2065C	1940	SELCAL CODE SELECTION PAN	选择呼叫代码面板	AR	
416-00318-003	416003180	WINDOW HEAT COMPUTER	风挡加温计算机	AR	
6664287-0	1914	WINDOW HEAT COMPUTER	风挡加温计算机	AR	
640CC01Y1	7175	200A SINGLE POLE CONTACT	接触器	AR	
640CC01Y1	7177	200A SINGLE POLE CONTACT	接触器	AR	
822-1330-001	2N67N	ACTIVE GPS ANTENNA	全球定位卫星天线	AR	
822-1330-001	2WRLJ	ACTIVE GPS ANTENNA	全球定位卫星天线	AR	
330400M01	1456	THROTTLE CONTROL UNIT	油门控制组件	AR	
330400M01	1619	THROTTLE CONTROL UNIT	油门控制组件	AR	
530AL01CN	2420	PWR SUPPLY DECOUPLING UN	供电去耦组件	AR	
530AL01CN	2423	PWR SUPPLY DECOUPLING UN	供电去耦组件	AR	
2409-89-00	240989-22	VHF ANTENNA	甚高频天线	AR	
2409-89-00	240989-22	VHF ANTENNA	甚高频天线	AR	
2439-89-03	243989-91	ATC/DME. ANTENNA	应答机天线	AR	
6137-3	1045	RUDDER TRIM ACTUATOR	方向舵配平作动器	AR	
3530000-1	FRTR26897	SENSOR-FUEL LEVEL	燃油油面传感器	AR	
HT900118-001	FRTR063AV	LOW PRESSURE FUEL VALVE	低压燃油活门	AR	
3108-89	926	VOR ANTENNA	甚高频全向信标天	AR	

622-5134-064	2148	WEATHER RADAR RT DUAL MOI	气象雷达收发机安	AR	
ZCV212	81125116	DOUBLE CHECK VALVE	双向止回阀	AR	
ZCV63-8	7091157	CHECK VALVE	单向活门	AR	
830A0000-04	13834	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	13833	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	13835	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	13836	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	13837	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	13838	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	13839	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	13840	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	13841	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	13842	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	13843	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	13844	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	13845	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	13846	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	13847	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	13848	ACTUATOR B-SLAT	缝翼作动器	AR	
829B0000-01	03576	ACTUATOR A-SLAT	缝翼作动器	AR	
829B0000-01	03577	ACTUATOR A-SLAT	缝翼作动器	AR	
829B0000-01	03578	ACTUATOR A-SLAT	缝翼作动器	AR	
829B0000-01	03579	ACTUATOR A-SLAT	缝翼作动器	AR	
31073-110	3563	AILERON SERVOCONTROL	副翼伺服控制器	AR	SV
31073-110	10239	AILERON SERVOCONTROL	副翼伺服控制器	AR	SV
31073-110	11396	AILERON SERVOCONTROL	副翼伺服控制器	AR	SV
31073-110	14781	AILERON SERVOCONTROL	副翼伺服控制器	AR	SV
D2907017100000	2358-1	MANIFOLD	液力总管	AR	
QA06304	RG1-2353	FILTER	油滤	AR	
C792845	HEK17341	PRESSURE TRANSDUCER	压力传感器	AR	
50-2-3100-00	8961	PRESSURE SWITCH	压力电门	AR	SV
50-2-3100-00	8962	PRESSURE SWITCH	压力电门	AR	SV
S4-3401610-01	01127	WAY VALVE TYPE 2	2型双向活门	AR	
6982500000	422720026	VALVE SAMPLING	选择活门	AR	
D290-70173-000-00	286	HP MANIFOLD	高压总管	AR	
QA06304	RG1-2319	FILTER	油滤	AR	
CZ9284E	HEK16430	PRESSURE TRANSDUCER	压力传输组件	AR	SV
450-2-3100-00	48374	PRESSURE SWITCH	压力电门	AR	SV
50-2-3100-00	8967	PRESSURE SWITCH	压力电门	AR	SV
ZCV64-10	71208152	CHECK VALVE	单向活门	AR	
BHC1060-04	2764	PRIORITY VALVE	优先活门	AR	SV
6982500000	422720031	VALVE SAMPLING	取样活门	AR	
827A0000-02	U898	GEARBOX	齿轮箱	AR	
Z030H0005110	29002	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29003	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29004	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29005	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29006	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29007	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29008	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29009	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	

Z030H0005110	29010	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29011	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29012	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29013	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29014	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29015	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29016	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29017	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29018	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29019	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29021	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29022	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29023	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29024	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29025	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29026	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	29027	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z030H0005110	030H00073	DEU DECODER ENCODER UNIT	解码/编码组件A	AR	
Z040H0005110	05973	DEU, DECODER ENCODER UNIT	B型解码/编码组件	AR	
Z040H0005110	06798	DEU, DECODER ENCODER UNIT	B型解码/编码组件	AR	
Z040H0005110	06816	DEU, DECODER ENCODER UNIT	B型解码/编码组件	AR	
Z040H0005110	06817	DEU, DECODER ENCODER UNIT	B型解码/编码组件	AR	
9599-607-14942	9519	RADIO ALTIMETER TRANSCEIVER	无线电高度收发机	AR	SV
9599-607-14942	9522	RADIO ALTIMETER TRANSCEIVER	无线电高度收发机	AR	SV
11-851154-5	01472	EXCHANGER - RECOOLER	预冷散热器	AR	
3732A010000	811712-53	EXCHANGER - RECOOLER	预冷散热器	AR	
B42CA2002	3713	VALVE NONRETURN	单向活门	AR	
B42CA2002	15718	VALVE NONRETURN	单向活门	AR	
B42CA2002	31282	VALVE NONRETURN	单向活门	AR	
9811820	FRTR440A	CHECK VALVE	单向活门	AR	
9811820	FRTR441A	CHECK VALVE	单向活门	AR	
342300M01	4140	TRANSDUCER UNIT	互感器组件	AR	
342300M01	4151	TRANSDUCER UNIT	互感器组件	AR	
E03A00	2950	FIRE SHUT OFF VALVE	火警关断活门	AR	
E03A00	3006	FIRE SHUT OFF VALVE	火警关断活门	AR	
MF10-05-11	84662	CREW OXYGEN MASK	机组氧气面罩	AR	SV
MF10-05-11	104532	CREW OXYGEN MASK	机组氧气面罩	AR	SV
MF10-05-11	106696	CREW OXYGEN MASK	机组氧气面罩	AR	SV
MF10-05-11	SE01466	CREW OXYGEN MASK	机组氧气面罩	AR	SV
2LA455010-00	1129970	LIGHT - ANTICOLLISION	防撞灯	AR	SV
VFT300B00	042602438	VALVE-SKIN AIR	蒙皮进气活门	AR	SV
4550-01-482	3657	FIRE DETECTION UNIT	超温火警探测器	AR	
4550-01-482	3667	FIRE DETECTION UNIT	超温火警探测器	AR	
3601-91	7249	FIRE DETECTOR	火警探测器	AR	
3601-91	7392	FIRE DETECTOR	火警探测器	AR	
3601-91	9653	FIRE DETECTOR	火警探测器	AR	
310ZN01Y01	3399	UNBALANCE DETECTOR	不平衡探测器	AR	
310ZN01Y01	3400	UNBALANCE DETECTOR	不平衡探测器	AR	
15800-348A	96106588	RINSE VALVE	冲洗活门	AR	
15800-348A	97088357	RINSE VALVE	冲洗活门	AR	
15800-358	5438	RINSE VALVE	冲洗活门	AR	SV

3508802-38	FRTR010A	FUEL QTY INDICATOR	燃油油量指示器	AR	
Z220H0002110	220H00006	CONTROL UNIT	排放杆控制组件	AR	
201122008	CWDD-DH-2	MLG DOOR UPLOCK	主起落架门上位锁	AR	
201117018	CWDD-DH-4	MLG UPLOCK	主起落架上位锁	AR	
201117017	CWDD-DH-5	MLG UPLOCK	主起落架上位锁	AR	
201122008	CWDD-DH-8	MLG DOOR UPLOCK	主起落架门上位锁	AR	
C24840010-2	H1179	MANIFOLD BRAKE	刹车总管	AR	
C24839010-2	H1188	MANIFOLD BRAKE	刹车总管	AR	
C24730001-6	H1745	NLG UPLOCK	前起落架上位锁	AR	
C24730100	H1738	NLG DOOR UPLOCK	前起落架舱门上位	AR	
C24837101-4	H1829	MANIFOLD BRAKE	刹车总管组件	AR	
C24837101-4	H2049	MANIFOLD BRAKE	刹车总管组件	AR	
SC4700-5	4871	YAW DAMPER SERVOACTUATOR	偏航阻尼器伺服制	AR	SV
SC4700-5	10395	YAW DAMPER SERVOACTUATOR	偏航阻尼器伺服制	AR	SV
810A0000-05	02876	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	SV
810A0000-05	08586	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	SV
810A0000-05	12788	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	SV
114086001	CWDD-DH27	SELECTOR VALVE MANIFOLD	液压关断活门	AR	
A25461-104	H0777	AUTOMATIC SELECTOR	自动转换开关	AR	
114170009	CWDD-DH87	SELECTOR VALVE MANIFOLD	液压总管选择活门	AR	
S4-3300520-01	1448	ACTUATOR-HYDRAULIC	液压作动筒	AR	SV
S4-3300520-01	1447	ACTUATOR-HYDRAULIC	液压作动筒	AR	SV
38E93-6	17129	WING ANTI ICE CONTROL VAL	机翼防冰控制活门	AR	SV
A25434006-3000	H3360	VALVE - DUAL DISTRIBUTION	备用刹车分配双活	AR	
1905A0000-01	01427	VALVE - SAFETY	安全活门	AR	
762080-1	H0529	VALVE - SAFETY	安全活门	AR	SV
762080-1	H0586	VALVE - SAFETY	安全活门	AR	SV
87232324V00	954	SKIN TEMPERATURE SENSOR	蒙皮温度传感器	AR	
Z220H0002110	220H00007	DRAIN MAST CONTROL UNIT	排水杆控制活门	AR	
640CC01Y1	7186	200A SINGLE POLE CONTACT	200A单级接触器	AR	
640CC04A2Y00	31966	200A SINGLE POLE CONTACT	200A单级接触器	AR	
D05500	2151	FILL AND DRAIN VALVE	加水排放活门	AR	
D05000	2112	OVERFLOW VALVE	溢流活门	AR	SV
0212KTU-16	982809	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
0212KTU-16	982808	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
0212KTU-14	975389	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
0212KTU-14	975385	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
0212KTU-14	975392	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
0212KTU-14	975388	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
0212KTU-03	981931	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
0212KTU-03	981932	FUEL QUANTITY TANK UNIT	机翼油箱燃油量探	AR	
3530000-1	FRTR24771	SENSOR-FUEL LEVEL	燃油油面传感器	AR	
3530000-1	FRTR24773	SENSOR-FUEL LEVEL	燃油油面传感器	AR	
3530000-1	FRTR24775	SENSOR-FUEL LEVEL	燃油油面传感器	AR	
3530000-1	FRTR26883	SENSOR-FUEL LEVEL	燃油油面传感器	AR	
3530000-1	FRTR26892	SENSOR-FUEL LEVEL	燃油油面传感器	AR	
3530000-1	FRTR26893	SENSOR-FUEL LEVEL	燃油油面传感器	AR	
3530000-1	FRTR26894	SENSOR-FUEL LEVEL	燃油油面传感器	AR	
3530000-1	FRTR26895	SENSOR-FUEL LEVEL	燃油油面传感器	AR	
3530000-1	FRTR26896	SENSOR-FUEL LEVEL	燃油油面传感器	AR	
568-1-27244-002	5079	FUEL PUMP CANISTER	燃油泵	AR	

472412-1	0870M	FIRE EXTINGUISHER	灭火瓶	AR	
A805300-12	41302078	CARTRIDGE	爆炸帽	AR	
QA05877	RG1-2676	VALVE RESTRICT BLEED	限流活门	AR	
238-0451-513	4396001	EXHAUST CENTRE BODY, ENG	发动机中心体	AR	
238-0451-513	2092001	EXHAUST CENTRE BODY, ENG	发动机中心体	AR	
642-4001-501	8317001	EXHAUST NOZZLE, ENG	发动机尾喷口	AR	SV
642-4001-501	2641001	EXHAUST NOZZLE, ENG	发动机尾喷口	AR	SV
642-3801-519	3220001	TRRUST REVERSER, ENG	反推	AR	
642-3802-517	2157001	TRRUST REVERSER, ENG	反推	AR	
642-3801-515	2338001	TRRUST REVERSER, ENG	反推	AR	
642-3802-517	2339001	TRRUST REVERSER, ENG	反推	AR	
642M3002-505	5592001	FAN COWL, ENG	风扇整流罩	AR	
642M3001-503	5591001	FAN COWL, ENG	风扇整流罩	AR	
642M3001-505	5501001	FAN COWL, ENG	风扇整流罩	AR	
642M3002-503	5502001	FAN COWL, ENG	风扇整流罩	AR	
3530000-1	FRTR26881	SENSOR-FUEL LEVEL	燃油油位传感器	AR	
3530000-1	FRTR26882	SENSOR-FUEL LEVEL	燃油油位传感器	AR	
3530000-1	FRTR26884	SENSOR-FUEL LEVEL	燃油油位传感器	AR	
3530000-1	FRTR26885	SENSOR-FUEL LEVEL	燃油油位传感器	AR	
3530000-1	FRTR26886	SENSOR-FUEL LEVEL	燃油油位传感器	AR	
3530000-1	FRTR26887	SENSOR-FUEL LEVEL	燃油油位传感器	AR	
3530000-1	FRTR26888	SENSOR-FUEL LEVEL	燃油油位传感器	AR	
3530000-1	FRTR26889	SENSOR-FUEL LEVEL	燃油油位传感器	AR	
3530000-1	FRTR26890	SENSOR-FUEL LEVEL	燃油油位传感器	AR	
3530000-1	FRTR26891	SENSOR-FUEL LEVEL	燃油油位传感器	AR	
3530000-1	FRTR26898	SENSOR-FUEL LEVEL	燃油油位传感器	AR	
3530000-1	FRTR26899	SENSOR-FUEL LEVEL	燃油油位传感器	AR	
3530000-1	FRTR26900	SENSOR-FUEL LEVEL	燃油油位传感器	AR	
3530000-1	FRTR26901	SENSOR-FUEL LEVEL	燃油油位传感器	AR	
3530000-1	FRTR26902	SENSOR-FUEL LEVEL	燃油油位传感器	AR	
ZCV64-10	71208162	CHECK VALVE	单向活门	AR	
0212KTU-01	982112	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-01	982107	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-06	981862	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-06	981861	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-09	981987	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-09	981823	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-09	981988	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-09	981822	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-11	981757	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-13	981807	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-17	981852	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-08	981866	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-11	981756	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-13	976484	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-10	981924	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-17	981853	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-10	981925	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-07	981875	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-07	981876	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-05	981783	WING TANK PROBE, FQI	油箱油量探测器	AR	

0212KTU-08	981867	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-04	981981	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-05	981782	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-04	981980	WING TANK PROBE, FQI	油箱油量探测器	AR	
0212KTU-15	FP007168	WING TANK PROBE, FQI	油箱油量探测器	AR	
EF101170A	AS7G06	AIR INLET CHECK VALVE	进气道单向活门	AR	
S4-3402180	01175	ELECTRIC SELECTOR VALVE	电子选择活门	AR	
114087006	CWDD-DH-1	DOOR BY-PASS VALVE, MLG	旁通活门	AR	
4-60000H882-00	368300000	DRAINMAST	排水管	AR	SV
ZRA38000	ASA32982	PRESSURE TRANSDUCER	压力传感器	AR	
ZRA1990030	12885	PRESSURE TRANSDUCER	压力传感器	AR	
786A0000-12	01815	POWER CONTROL UNIT	动力控制组件	AR	
9028A0004-01	07167	POSITION PICK-OFF UNIT	位置采集传感器	AR	
9028A0004-01	07168	POSITION PICK-OFF UNIT	位置采集传感器	AR	
787A0000-07	03675	VALVE BLOCK	封闭活门	AR	
787A0000-07	03681	VALVE BLOCK	封闭活门	AR	
786A0000-12	01817	POWER CONTROL UNIT	动力控制组件	AR	
9028A0004-01	07165	POSITION PICK-OFF UNIT	位置采集传感器	AR	
9028A0004-01	07166	POSITION PICK-OFF UNIT	位置采集传感器	AR	
787A0000-07	03682	VALVE BLOCK	封闭活门	AR	
787A0000-07	03683	VALVE BLOCK	封闭活门	AR	
642-2300-9	P1609	AFT ENG MOUNT	发动机后吊点	AR	
642-2300-9	P1620	AFT ENG MOUNT	发动机后吊点	AR	
642-2000-15	P2222	AWD ENG MOUNT	发动机前吊点	AR	SV
642-2000-15	P2207	AWD ENG MOUNT	发动机前吊点	AR	SV
2407-89-3299	2439-89-3	ATC/DME. ANTENNA	自动测距天线	AR	
321-400-707-0	4181	COWL OPEN ACTUATOR	整流罩作动筒	AR	SV
321-400-707-0	4446	COWL OPEN ACTUATOR	整流罩作动筒	AR	SV
321-400-707-0	4451	COWL OPEN ACTUATOR	整流罩作动筒	AR	SV
321-400-707-0	6177	COWL OPEN ACTUATOR	整流罩作动筒	AR	SV
D2727025000400	NA01	ROD SPRING	杆弹簧	AR	
D577-50004-000-00Z	AP867	SPOILER 4# LH	左4号扰流板	AR	
22715-000-02	Y01664	CYLINDER-ACTUATING, NLG 1	前起落架舱门作动	AR	
C20105000	09071	TACHOMETER	转速表	AR	
C20105000	09287	TACHOMETER	转速表	AR	
C20105000-2	58960	TACHOMETER	转速表	AR	SV
C20105000-2	71890	TACHOMETER	转速表	AR	SV
HTE69000-1	FRTR122AV	FUEL PUMP PRESSURE SWITCH	燃油泵压力电门	AR	SV
HTE69000-1	FRTR123AV	FUEL PUMP PRESSURE SWITCH	燃油泵压力电门	AR	SV
HTE69000-1	FRTR124AV	FUEL PUMP PRESSURE SWITCH	燃油泵压力电门	AR	SV
HTE69000-1	FRTR125AV	FUEL PUMP PRESSURE SWITCH	燃油泵压力电门	AR	SV
HTE69000-1	FRTR870AV	FUEL PUMP PRESSURE SWITCH	燃油泵压力电门	AR	SV
HTE69000-1	FRTR1289AV	FUEL PUMP PRESSURE SWITCH	燃油泵压力电门	AR	SV
ZRA38000	ASA23153	PRESSURE TRANSDUCER	压力传感器	AR	
ZRA38000	ASA29590	PRESSURE TRANSDUCER	压力传感器	AR	
786-052	2526	FUEL VENT PROTECTOR	燃油进气保护	AR	
786-052	2538	FUEL VENT PROTECTOR	燃油进气保护	AR	
D5757030501500	02174	STRUT ASSY	互联支柱组件	AR	
D5757030501500G	02190	STRUT ASSY	互联支柱组件	AR	
183A13-615	21761	VALVE DRAIN WATER	放水活门	AR	
183A13-615	21762	VALVE DRAIN WATER	放水活门	AR	

D2727000700600	411140692	ROD SPRING	连杆弹簧	AR	
84256-35453-2	04156	ROD	连杆	AR	
D00030137000	01307	ROD	连杆	AR	
D9255003200200	AF5872	PANEL ASSY REFUEL	加油面板	AR	
1555A9900-01	01454	MANIFOLD HP PTU (GREEN)	绿系统高压PTU总管	AR	
ZCV64-10	30911310	CHECK VALVE	单向活门	AR	
BHC1060-04	7095	PRIORITY VALVE	优先活门	AR	SV
A25313002-1	H4500	SELECTOR VALVE	选择活门	AR	
QA05797-01	RB2-6777	FILTER HYD	液压油滤	AR	
FE171-000	FR4603	CABLE TENSION REGULATOR	钢索拉力调节器	AR	
S4-3400950-06	02159	VALVE 3-2 WAY	活门	AR	
1141510004	CWDD-DH-4	VALVE RELIEF	释压活门	AR	
ZCV66-1	8040266	CHECK VALVE	单向活门	AR	
114151004	CWDD-DH57	RELIEF VALVE	释压活门	AR	
ZCV67-1	06-080359	CHECK VALVE	单向活门	AR	
ZCV64-16	70521219	CHECK VALVE	单向活门	AR	
BA03604	6916	GENERATOR, APU	APU发电机	AR	
3022016-000	G1730575	RELIEF VALVE	释压活门	AR	
ZCV63-8	7091182	CHECK VALVE	单向活门	AR	
A25316-101	NA02	DUAL SHUTTLE VALVE	双向选择活门	AR	
CFM56-5B	575228	ENGINE	发动机	AR	
CFM56-5B	779385	ENGINE	发动机	AR	
D23589520-12	B1973	NOSE LANDING GEAR	前起落架	AR	
201375009	DLG-0363	MAIN LANDING GEAR	主起落架	AR	
201582002	M-DG-0237	MAIN LANDING GEAR	右主起落架	AR	
642-2300-9	P2893	AFT ENGINE MOUNT	发动机后吊点	AR	
642-2300-9	P2904	AFT ENGINE MOUNT	发动机后吊点	AR	
115370-1016	1746	FCDC	飞行控制数据采集	AR	SV
87292325V07	VL2062005	AVNCS EQPT VENT CMPTR	电子设备通风计算	AR	
RD-AX1301-2D	100038	MAIN MULTIPLEXER	主调制器	AR	
7517800-10005	98071084	ATC TRANSPONDER	空中交通管制应答机	AR	SV
710100-2	4V09D	TRIDIUM COMMUNICATION SY	铱星通信系统	AR	
822-0299-020	116014	ADF RECEIVER	ADF接收机	AR	SV
3957985114	1916	ENGINE INTERFACE UNIT	发动机接口组件	AR	
241-246-022-004	0287	ENG VIB MONITORING UNIT	发动机喘振检测组	AR	
Z010H0005118	02682	CIDS DIRECTOR	客舱内话数据系统	AR	
822-0323-020	5478	VHF/COMM. TRANSCIEVER	甚高频收发机	AR	SV
822-0297-020	143056	VOR RECEIVER	VOR 接收机	AR	SV
965-0758-001	CMUMK2-03	ACARS MANAGEMENT UNIT	通信寻址报告系统	AR	SV
822-0329-020	4CD7G	DME INTERROGATOR	测距机询问器	AR	
49-170-11	03528	SL/FL. CONTROL COMPUT.	襟副翼控制计算机	SV	SV
822-0330-020	107669	HF/COMM. TRANSCIEVER	高频收发机	AR	
7517900-10020	99062297	TCAS II COMPUTER	TCAS II 计算机	AR	
B372BAM0515	Q0013601	SPOILER ELEVATOR COMPUTE	扰流板升降舵计算	SV	SV
3945128218	ELACVB015	ELEVATOR AILERON COMPUTE	升降舵副翼计算机	AR	
822-0297-020	178485	VOR RECEIVER	VOR 接收机	AR	SV
822-0323-020	1895	VHF/COMM. TRANSCIEVER	甚高频收发机	AR	SV
910030-5086	1907	DIU	数字接口组件	AR	
965-1676-003	EMK5-1802	GPWC, GROUND PROXIMITY W	近地警告计算机	AR	SV
AMU2790CB06	1427	AUDIO MANAGEMENT UNIT	音频管理组件	AR	
822-0299-020	150082	ADF RECEIVER	ADF接收机	AR	SV

RD-AX7271	300458	REPRODUCER-PRERECORDED AN	通告音乐磁带播放	AR	
RD-AX7095-01	101037	REPRODUCER	播放器	AR	
B397BAM0624	Q00140014	FLIGHT AUGMENTATION COMPU	飞行增稳计算机	SV	SV
9615325070	3526	DISPLAY MANAGEMENT COMPUT	显示管理计算机	AR	
C13043AA06	6373	FLIGHT MANAGEMENT GUID CO	飞行管理指引计算	AR	
822-0323-020	6986	VHF/COMM. TRANSCEIVER	甚高频收发机	AR	SV
350E053021818	0E0007841	FLIGHT WARNING COMPUTER	飞行警告计算机	AR	SV
350E5500204	0E5013335	SDAC	系统数据采集器	AR	
HG2030AE43	56011087	ADIRU	大气数据惯导组件	AR	
HG2030AE43	56024797	ADIRU	大气数据惯导组件	AR	
3957985114	Q05720011	ENGINE INTERFACE UNIT	发动机接口组件	AR	
9615325070	998256007	DISPLAY MANAGEMENT COMPUT	显示管理计算机	AR	
9615325070	998256007	DISPLAY MANAGEMENT COMPUT	显示管理计算机	AR	
350E053021818	0E0012425	FLIGHT WARNING COMPUTER	飞行警告计算机	AR	SV
49-170-11	49-170BAC	SL/FL. CONTROL COMPUT.	襟副翼控制计算机	AR	SV
2243800-364	RA05893	OPTICAL DISC RECORDER	数字存取记录器	AR	SV
822-0330-020	115421	HF/COMM. TRANSCEIVER	高频收发机	AR	
Z010H0005119	03895	CIDS DIRECTOR	客舱内话数据系统	AR	
7517800-10005	96010226	ATC TRANSPONDER	空中交通管制应答机		SV
822-0329-020	112292	DME INTERROGATOR	测距机询问器	AR	
B397BAM0624	Q00140023	FLIGHT AUGMENTATION COMPU	飞行增稳计算机	AR	SV
C13043AA06	5811	FLIGHT MANAGEMENT GUID CO	飞行管理指引计算	AR	
B372BAM0515	Q00136015	SPOILER ELEVATOR COMPUTE	扰流板升降舵计算	AR	SV
350E5500202	0E5010111	SDAC	系统数据采集器	AR	
115370-1016	1869	FLT CTL DATA CONCENTRATOR	飞行控制数据采集	AR	SV
B401ACM0507	1017	CFDIU	中央故障显示接口	AR	
3945128218	ELACVB017	ELEVATOR AILERON COMPUTE	升降舵副翼计算机	AR	
763A0000-03	22245	SENSOR, TEMP.	温度传感器	AR	SV
763A0000-03	27680	SENSOR, TEMP.	温度传感器	AR	SV
763A0000-03	25925	SENSOR, TEMP.	温度传感器	AR	SV
758A0000-02	02421	BYPASS VALVE	旁通活门	AR	SV
767A0000-04	02218	SENSOR-TEMPERATURE	温度传感器	AR	
767A0000-04	02235	SENSOR-TEMPERATURE	温度传感器	AR	
766A0000-01	02297	SENSOR TEMP. PNEUM	传感器	AR	
766A0000-01	02295	SENSOR TEMP. PNEUM	传感器	AR	
758A0000-02	02006	BYPASS VALVE	旁通活门	AR	SV
764B0000-01	04576	TEMPERATURE SENSOR	传感器	AR	SV
764B0000-01	04610	TEMPERATURE SENSOR	传感器	AR	SV
761A0000-04	02114	ACTUATOR, RAM A. INLET	作动器	AR	SV
763A0000-03	10217	SENSOR, TEMP.	温度传感器	AR	SV
763A0000-03	30010	SENSOR, TEMP.	温度传感器	AR	SV
763A0000-03	18993	SENSOR, TEMP.	温度传感器	AR	SV
763A0000-03	10104	SENSOR, TEMP.	温度传感器	AR	SV
763A0000-03	10148	SENSOR, TEMP.	温度传感器	AR	SV
PPA1102-00	122056	SMOKE DETECTOR	烟雾探测器	AR	SV
PPA1102-00	5241	SMOKE DETECTOR	烟雾探测器	AR	SV
PPA1102-00	3523	SMOKE DETECTOR	烟雾探测器	AR	SV
PPA1102-00	13393	SMOKE DETECTOR	烟雾探测器	AR	SV
PPA1102-00	4231	SMOKE DETECTOR	烟雾探测器	AR	SV
PAI2800-01	3336	SMOKE DETECTOR	烟雾探测器	AR	
600612-00-510	20809	SENSOR, DUCT. TEMP.	温度传感器	AR	

736A0000-02	03758	SENSOR, MIX. TEMP.	传感器	AR	
736A0000-02	03786	SENSOR, MIX. TEMP.	传感器	AR	
764A0000-03	06315	SENSOR, TEMP.	温度传感器	AR	
764A0000-03	06390	SENSOR, TEMP.	温度传感器	AR	
764A0000-03	06791	SENSOR, TEMP.	温度传感器	AR	
HTE690047	26091526	SWITCH PRESS. HOT AIR	压力电门	AR	
6610-15945	2304	ACTUATOR, ROTARY	作动器	AR	
4063-18221	0570661	VALVE, ISOLATION	通气隔离活门	AR	SV
12432-2	9814557	VALVE, ISOLATION	通气隔离活门	AR	
J172ABM	9223	ACCELEROMETER	加速计	AR	
J172ABM	9225	ACCELEROMETER	加速计	AR	
J172ABM	9224	ACCELEROMETER	加速计	AR	
J172ABM	9222	ACCELEROMETER	加速计	AR	
1320A0000-02	1320-2862	VALVE, TRIM AIR	活门	AR	
1320A0000-02	1320A00L	VALVE, TRIM AIR	活门	AR	
963A0000-02	03112	VALVE, TRIM AIR	活门	AR	SV
600612-00-510	11103732	SENSOR, DUCT. TEMP.	传感器	AR	
VD3900-03	98031253	FAN, RECIRCULATION	再循环风扇	SV	SV
VD3900-03	08013831	FAN, RECIRCULATION	再循环风扇	AR	SV
VD3920	12086234	FAN, EXTRACTION	风扇	AR	SV
VD3810	12024794	FAN, EXTRACTION	风扇	AR	SV
SIC5059-11-0207	1149	COMPUTER - FCMS	FCMS计算机	AR	
733901-1-1	733901INC	BLEED MONITORING COMPUTE	监控计算机	AR	
600611-00-601	21012	CONTROLLER	控制器	AR	
35-0D5-1003	1413	COCKPIT LOUDSPEAKER AMPL	扬声器	AR	SV
35-0D5-1003	2082	COCKPIT LOUDSPEAKER AMPL	扬声器	AR	SV
B372BAM0515	Q00136008	SPOILER ELEVATOR COMPUTE	扰流板升降舵计算	AR	SV
785-002-8	785002INC	BLEED MONITORING COMPUTE	监控计算机	AR	
775D0000-01	02676	CONTROLLER, ZONE TEMP.	区域温度控制器	AR	
9022-15702-11	9931796	CONTROLLER, PRESS.	客舱压力控制器	AR	
9022-15702-11	9831740	CONTROLLER, PRESS.	客舱压力控制器	AR	
759D0000-02	2181	CONTROLLER, PACK TEMP.	空调温度控制器	AR	
822-1152-122	180PVT	RECEIVER-MMR	多模式接收机	AR	
822-1152-122	72KR	RECEIVER-MMR	多模式接收机	AR	
746923E	1938	ELEC GENERATION INTFC UNI	发电机接口组件	AR	
746923E	4191	ELEC GENERATION INTFC UNI	发电机接口组件	AR	
740121B	1079	GROUND POWER CONTROL UNI	地面电源控制组件	AR	
30042-0000-0501	1817	CONTROL UNIT-LEVEL SENSIN	燃油油位传感控制	AR	
1058-34	1564	TYRE PRESS. INDICATING UNI	轮胎压力指示系统	AR	
30042-0000-0501	1896	CONTROL UNIT-LEVEL SENSIN	燃油油位传感控制	AR	
740120C	6006	GENERATOR CONTROL UNIT	电源控制组件	AR	SV
RAI2800M0706	5694	SMOKE DET. CONTR. UNIT	烟雾探测控制组件	AR	SV
759C0000-02	01784	CONTROLLER, PACK TEMP.	空调温度控制器	AR	SV
899-0850-004	6052	RADIO MANAGEMENT PANEL	无线电管理面板	AR	SV
ACP2788AB04	5781	AUDIO CONTROL PANEL	音频控制面板	AR	SV
64161-234-1	1465	METRIC ALTIMETER	高度表	AR	
C19266DA01	C19266006	MCDU	多功能控制显示组	SV	
622-5132-622	9490	WEATHER RADAR TRANSCEIVE	收发机	AR	
622-5132-622	17YXHM	WEATHER RADAR TRANSCEIVE	收发机	AR	
746A0000-06	0746A00L	VALVE, TRIM AIR PRESS.	压力调节活门	AR	SV
751F0000-01	02114	VALVE, FLOW CONTROL	流量控制阀	AR	

751A0000-07	01986	VALVE, FLOW CONTROL	流量控制阀	AR	
899-0850-004	1222	RADIO MANAGEMENT PANEL	无线电管理面板	AR	SV
ACP2788AB04	3657	AUDIO CONTROL PANEL	音频控制面板	AR	SV
899-0850-004	5859	RADIO MANAGEMENT PANEL	无线电管理面板	AR	SV
2LA005541-10	784	FLOODLIGHT UNIT-CAPTAIN	泛光灯	AR	
762A0000-04	02727	ACTUATOR, RAM A. OUTLET	作动器	SV	SV
761B0000-01	05230	ACTUATOR, RAM A. INLET	作动器	AR	
768A0000-03	228039	SENSOR, PRESSURE	压力传感器	AR	
1091A0000-01	13104	INJECTOR, WATER	喷水器	AR	
1091A0000-01	13103	INJECTOR, WATER	喷水器	AR	
HTE370001	M0247VNR0	HP GROUND CONNECTOR	高压地面接头	AR	
747A0000-03	01916	WATER EXTRACTOR	水分离器	AR	
747A0000-03	01911	WATER EXTRACTOR	水分离器	AR	
756A0000-06	841210-60	CONDENSER	冷凝器	SV	SV
756A0000-06	0756A00ES	CONDENSER	冷凝器	AR	SV
755C0000-01	81210-502	REHEATER	再加热器	SV	SV
755C0000-01	81210-558	REHEATER	再加热器	AR	SV
1263A0000-03	08907	ACM	空气循环机	AR	SV
1263A0000-03	00641	ACM	空气循环机	AR	SV
740120C	6075	GENERATOR CONTROL UNIT	电源控制 组件	AR	SV
740120C	6043	GENERATOR CONTROL UNIT	电源控制 组件	AR	SV
1298A0000-01	1298-1800	VALVE, CHECK TRIM AIR	单向活门	AR	SV
972C10-1	E27788	VALVE-SHUTTLE	关断活门	AR	
S4-3400900-01	0903	MANUEL SELECTOR VALVE	手动选择活门	AR	SV
5906733	8091	6 HOLE CURRENT TRANSFORMER	互感器	AR	
762A0000-04	02566	ACTUATOR, RAM A. OUTLET	作动器	AR	SV
ZCV63-4	8012431	CHECK VALVE	单向活门	AR	
ZCV63-4	8012410	CHECK VALVE	单向活门	AR	
VT442-2	04337	WATER QUANTITY INDICATOR	水量指示器	AR	
Z212H0001110	02504	CONTROL UNIT	控制组件	AR	
4-60000H882-00	368300001	DRAINMAST CPL.	放水桅杆	AR	SV
2LA005543-10	1101184	CAPTAIN FLOOD LIGHT UNIT	泛光灯组件	AR	
14404-011B	98040432	CONTROLLER, VACUUMSYST	控制器	AR	
FRH230003C	04176028	PRESSURE REDUCING VALVE	释压阀	AR	
D05000	1962	VALVE-FILL AND DRAIN	排水阀	AR	SV
D05000	2431	VALVE-FILL AND DRAIN	排水阀	AR	SV
D05000	1840	VALVE-FILL AND DRAIN	排水阀	AR	SV
64050-866-1	4308	AIR SPEED INDIACTOR	空速表	AR	SV
5906733	8092	6 HOLE CURRENT TRANSFORMER	互感器	AR	
4-60000H882-00	368300001	DRAINMAST CPL.	排水桅杆	AR	SV
20790-03AC	12116362	VALVE, OUTFLOW	外流活门	AR	
Z220H0002110	220H00013	CONTROL UNIT	控制组件	AR	
1X2005012-00	2116	LIGHT-CARGO LOADING AREA	装载区域灯	AR	
1X2005012-00	2495	LIGHT-CARGO LOADING AREA	装载区域灯	AR	
210TS07Y01	1322	LANDING GEAR CONTROL LEVER	起落架控住手柄	AR	SV
CG1151AC03	1003	ADIRS-CDU	显示组件	AR	
622-5130-021	16545P	WEATHER RADAR DUAL CTL UNIT	气象雷达控制面板	AR	
321200M02	1276	SPD. BRK. CTL. TRANSDUCER UNIT	速度刹车控制传感	AR	SV
ACP2788AB04	2788-851	AUDIO CONTROL PANEL	音频控制面板	AR	SV
1298A0000-01	05002	VALVE, CHECK TRIM AIR	单向活门	AR	SV
H321BHM1	Q03364017	STANDBY HORIZON	备用水平仪	AR	SV

35-0L0-1003-06	0L0008779	ECAM CONTROL PANEL	控制面板	AR	
330TS08Y	538	FIRE PANEL ENGINE APU	发动机APU火警面板	AR	
2610-13-1	398	CLOCK	时钟	AR	
206PN01	1083	DC. VOLTMETER	电压指示器	AR	
206PN01	1082	DC. VOLTMETER	电压指示器	AR	
2LA005542-20	1100	Light-Main Instrument	主仪表灯	AR	
MF10-05-11	84618	F. F. QUICK DONNING MASK	机组氧气面罩	AR	SV
MF10-05-11	107340	F. F. QUICK DONNING MASK	机组氧气面罩	AR	SV
MF10-05-11	SE02682	F. F. QUICK DONNING MASK	机组氧气面罩	AR	SV
MF10-05-11	106646	F. F. QUICK DONNING MASK	机组氧气面罩	AR	SV
Z220H0002110	00340	CONTROL UNIT	控制组件	AR	
768A0000-03	223284	SENSOR, PRESSURE	压力活门	AR	
BA21758	12325	FIRE EXTINGUISHER	厕所灭火器	AR	
BA24320A1	38440	FIRE EXTINGUISHER	厕所灭火器	AR	
BA24320A1	48936	FIRE EXTINGUISHER	厕所灭火器	AR	
8410B2-4-90	8410B2-25	CAMERA	摄像头	AR	SV
8410B1-101-105	8410B1-39	CAMERA	摄像头	AR	
8410B2-4-90	8410B2-79	CAMERA	摄像头	AR	SV
754C0000-01	3176	HEAT EXCHANGER	热交换器	SV	SV
754C0000-01	81212-600	HEAT EXCHANGER	热交换器	AR	SV
753C0000-02	5674	HEAT EXCHANGER	热交换器	SV	SV
753C0000-02	81211-611	HEAT EXCHANGER	热交换器	AR	SV
24E507009G03	UJW10179	HEATER-WATER	水加热器	SV	SV
24E507009G03	UJW03539	HEATER, WATER	水加热器	AR	SV
24E507009G03	UJW03516	HEATER, WATER	水加热器	AR	SV
PPA1202-00	15026	SMOKE DETECTOR	烟雾探测器	AR	
PPA1202-00	9451	SMOKE DETECTOR	烟雾探测器	AR	
PPA1202-00	9321	SMOKE DETECTOR	烟雾探测器	AR	
RD-AV3001-33	100237	VIDEO SYSTEM CONTROL UNIT	音频系统控制组件	AR	
3214-54-10	3237	EMERG. POWER SUPPLY	应急电源供给组件	AR	
9024-15704-03	14115462	SAFETY-VALVE	安全活门	AR	
9024-15704-03	14115516	SAFETY-VALVE	安全活门	AR	
74-20	B36192	FIRE EXTINGUISHER	灭火器	AR	SV
74-20	12629	FIRE EXTINGUISHER	灭火器	AR	SV
3552AAADAACXCD	P12120993	PORTABLE OXYGEN CYL.	便携氧气瓶	AR	
72071000	0361	OVEN	烤箱	AR	
72071000	27161	OVEN	烤箱	AR	
72071000	0332	OVEN	烤箱	AR	
72071000	0324	OVEN	烤箱	AR	
Z130H0096110	01025	FAP	前乘务员面板	AR	
2LA005303-05	1559380	TAIL STROBE LIGHT	尾部频闪灯	AR	SV
Z120H0040110	01019	AAP	后乘务员面板	AR	
1X2005097-00	2649441	LOGO LIGHT	航徽灯	AR	SV
913004	1516	CABIN CONTROL UNIT	客舱控制组件	AR	
3108-89	939	VOR. ANTENNA	VOR 天线	AR	
1X2005097-00	4245086	LOGO LIGHT	航徽灯	AR	SV
12664	9814714	CHECK VALVE	单向活门	AR	
12664	9814767	CHECK VALVE	单向活门	AR	
773A0000-01	06358	SENSOR, TEMP.	温度传感器	AR	
773A0000-01	06009	SENSOR, TEMP.	温度传感器	AR	
2LA403702-02	2581635	RWD FACING NAVIGATION LIGHT	导航灯	AR	

D272-70250-004-00	7365104	ROD SPRING	弹簧杆	AR	
D2727000700600	151208442	ROD SPRING	弹簧杆	AR	
SC4700-5	14543	YAW DAMPER SERVOACTUATOR	偏航阻尼伺服作动	AR	SV
SC4700-5	2965	YAW DAMPER SERVOACTUATOR	偏航阻尼伺服作动	AR	SV
322000M02	1747	TRANSDUCER UNIT	传感器	AR	SV
DV8456701-5	2284	TRAVEL LIMITATION UNIT	行程限制组件	AR	SV
31075-840	3575	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
31075-840	18316	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
31075-840	18071	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
2LA005469-00	5068	WARNING LIGHT PANEL	警告灯面板	AR	
2LA005469-00	5339	WARNING LIGHT PANEL	警告灯面板	AR	
2LA005469-00	5559	WARNING LIGHT PANEL	警告灯面板	AR	
2LA005469-00	5566	WARNING LIGHT PANEL	警告灯面板	AR	
2LA005469-00	5580	WARNING LIGHT PANEL	警告灯面板	AR	
2LA005469-00	1416842	WARNING LIGHT PANEL	警告灯面板	AR	
2LA007307-00	2053	CABIN OVERPRESSURE INDICA	警告灯面板	AR	SV
2LA007307-00	2063	CABIN OVERPRESSURE INDICA	警告灯面板	AR	SV
2LA007307-00	2078	CABIN OVERPRESSURE INDICA	警告灯面板	AR	SV
2LA007307-00	2133642	CABIN OVERPRESSURE INDICA	警告灯面板	AR	SV
3214-54-10	1169	EMERG. POWER SUPPLY	应急电源供给组件	AR	
3214-54-10	1137	EMERG. POWER SUPPLY	应急电源供给组件	AR	
3214-54-10	1391	EMERG. POWER SUPPLY	应急电源供给组件	AR	
792-6140-001	12064	ANTENNA COUPLER	耦合器天线	AR	
792-6140-001	7K4K	ANTENNA COUPLER	耦合器天线	AR	
Z111H0033151	05950	AIP	乘务员指示面板	AR	
Z111H0033151	111H00013	AIP	乘务员指示面板	AR	
Z111H0033151	06645	AIP	乘务员指示面板	AR	
64141-580-1	4813	STANDBY ALTIMETER	备用高度表	AR	SV
Z020H0001112	01011	PROGRAM A. TEST PANEL	测试面板	AR	
Z050H6045070	050H60009	CABIN ASSIGNM. MODULE	客舱内话分布模块	AR	
3025	1837	Static Converter	静态转换器	AR	
8ES455012-00	198	POWER SUPPLY	电源供给组件	AR	SV
8ES455012-00	1001357	POWER SUPPLY	电源供给组件	AR	SV
4063-16082-3	0015653	CROSS BLEED VALVE	活门	SV	SV
FE240-004	889	DOOR DAMPER CYLINDER	登机门阻尼器	AR	SV
FE240-004	885	DOOR DAMPER CYLINDER	登机门阻尼器	AR	SV
R0425A111	TAG6A070	LIFE RAFT, 6 PERS.	救生筏	AR	
800-160-201	0805053	VIDEO TAPE REPRODUCER	放映机	AR	
800-160-201	0805057	VIDEO TAPE REPRODUCER	放映机	AR	
01N65920	21277435	LOCATOR TRANSMITTER	定位发射器	AR	SV
FE240-004	927	DOOR DAMPER CYLINDER	登机门阻尼器	AR	SV
FE240-004	FR8849	DOOR DAMPER CYLINDER	登机门阻尼器	AR	SV
830A0000-04	14047	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	14043	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	14054	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	14050	ACTUATOR B-SLAT	缝翼作动器	AR	
S1821502-02	LX1100047	FIXED ELT	固定应急定位发射	AR	SV
8ES403703-02	742	RWD FACING NAV LIGHT XFMR	变压器	AR	
322000M02	1863	TRANSDUCER UNIT	传感器	AR	SV
12664	9814740	CHECK VALVE	单向活门	AR	
30-1883-5	1713	LH WING/ENGINE SCAN LIGHT	发动机观察灯	AR	

769A0000-02	01907	CHECK VALVE	单向活门	AR	
6137-3	1073	RUDDER TRIM ACTUATOR	方向舵配平作动器	AR	
30-1883-6	1717	RH WING/ENGINE SCAN LIGHT	发动机观察灯	AR	
986F12-1	1815	CHECK VALVE	单向活门	AR	
9104A0003-01	181321	SENSOR, PRESSURE	压力活门	AR	SV
980-6020-001	0985	COCKPIT VOICE RECORDER	驾驶舱语音记录器	AR	SV
980-4700-003	SSFDR-179	FLIGHT DATA RECORDER	飞行数据记录器	AR	SV
72071000	28011	OVEN	烤箱	AR	
72071000	0772	OVEN	烤箱	AR	
94830-09	121	VIBRAT. ISOLAT. FWD L	APU前左吊点避震器	AR	SV
94830-10	327	VIBRAT. ISOLAT. FWD R	APU后左吊点避震器	AR	SV
94830-11	332	VIBRAT. ISOLAT. AFT	APU后吊点避震器	AR	
791A0000-06	U1930	ACTUATOR-FLAP, NO. 4	襟翼作动器	AR	
DK120-90	AT143072	CVR ULB	水下定位信标	AR	SV
9028A0004-01	07701	POS. PICK OFF UNIT	位置传感器	AR	
9028A0004-01	07702	POS. PICK OFF UNIT	位置传感器	AR	
830A0000-04	14052	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	14053	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	14046	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	14044	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	14049	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	14042	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	14048	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	14045	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	14041	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	14051	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	13993	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	14055	ACTUATOR B-SLAT	缝翼作动器	AR	
829B0000-01	03631	ACTUATOR A-SLAT	缝翼作动器	AR	
829B0000-01	03628	ACTUATOR A-SLAT	缝翼作动器	AR	
829B0000-01	03629	ACTUATOR A-SLAT	缝翼作动器	AR	
829B0000-01	03630	ACTUATOR A-SLAT	缝翼作动器	AR	
310ZN01Y01	3444	UNBALANCE DETECTOR	相位失衡探测器	AR	
310ZN01Y01	3443	UNBALANCE DETECTOR	相位失衡探测器	AR	
41-2-1100-02	1013	ACTUATOR, EMER. RAM AIR	作动筒	AR	SV
PG1152AC03	98026079	ADM	大气数据模块	AR	
PG1152AC03	98026064	ADM	大气数据模块	AR	
PG1152AC03	98026069	ADM	大气数据模块	AR	
PG1152AC03	98026063	ADM	大气数据模块	AR	
PG1152AC03	98026078	ADM	大气数据模块	AR	
PG1152AC05	98121735	ADM	大气数据模块	AR	
1663214301	B2459	PROBES HEAT COMPUTER	探头加温计算机	AR	SV
1663214301	B2855	PROBES HEAT COMPUTER	探头加温计算机	AR	SV
15800-348A	9812-1110	RINSE VALVE	冲洗活门	AR	
15800-348A	96114374	RINSE VALVE	冲洗活门	AR	
15800-358	15357	RINSE VALVE	冲洗活门	AR	SV
DK120-90	AT135248	CVR ULB	水下定位信标	AR	SV
769A0000-02	01917	CHECK VALVE	单向活门	AR	
35-0L5-1006-08	2049	BATTERY CHARGE LIMITER	电瓶充电限制器	AR	
35-0L5-1005-08	Q09305016	BATTERY CHARGE LIMITER	电瓶充电限制器	AR	SV
106-1-1100-02	646	ACTUATOR-APU	作动器	SV	SV

7304-01-02	7596	FIRE DETECTION UNIT	火警探测组件	AR	
472412-1	2564M	FIRE EXTINGUISHER	灭火瓶	AR	
A805300-12	3-1401043	CARTRIDGE	爆炸帽	AR	
PG1152BC02	04038534	AIR DATA MODULE	大气数据模块	AR	
PG1152BC02	0608E216	AIR DATA MODULE	大气数据模块	AR	
14330-144	2409	FLUSH CONTROL UNIT	冲洗控制组件	AR	
14330-144	790	FLUSH CONTROL UNIT	冲洗控制组件	AR	
14330-144	2184	FLUSH CONTROL UNIT	冲洗控制组件	AR	
TA01Z6005	2741	AUTOTRANSFORMER	变压器	AR	
DVE90-06	1973	LP SOLENOID SUPPLY VALVE	低压电磁阀供给活	AR	
Y005-2	2827	TRANSFORMER RECTIFIER	变压整流器	AR	
Y005-3	3053	TRANSFORMER RECTIFIER	变压整流器	AR	
Y005-2	2828	TRANSFORMER RECTIFIER	变压整流器	AR	
7304-01-02	6766	FIRE DETECTION UNIT	火警探测组件	AR	
7304-01-02	7608	FIRE DETECTION UNIT	火警探测组件	AR	
416-00318-003	416003180	WINDOW HEAT COMPUTER	风挡加温计算机	AR	
6664287-0	2501	WINDOW HEAT COMPUTER	风挡加温计算机	AR	
CGDU2000-00	6768	SMOKE DETECTOR	烟雾探测器	AR	
47215920BB00	472159214	PROBES HEAT COMPUTER	探头加温计算机	AR	SV
521100	F9829267	GENERATOR CONTROL UNIT	发电机控制组件	AR	
63543-150-4	3144	RMI VOR/DME DDRMI	无线电磁指示器	AR	
1B1000-1GS	M8956277	STATIC INVERTER	静变流机	AR	SV
831A0000-05	03651	WING TIP BRAKE	翼尖刹车	AR	
1209-100	25183	PRESSURE SWITCH	压力电门	AR	SV
630CC01Y1	6003	100A SINGLE POLE CONTACTOR	接触器	AR	
630CC01Y1	6013	100A SINGLE POLE CONTACTOR	接触器	AR	
630CC01Y1	6006	100A SINGLE POLE CONTACTOR	接触器	AR	
564CA01Y1	9247	CONTACTOR	接触器	AR	
521A0200-01	03345	ADAPTER PPU-ASSY	适配器	AR	
521A0200-01	03346	ADAPTER PPU-ASSY	适配器	AR	
831A0000-05	03650	WING TIP BRAKE	翼尖刹车	AR	
503CA02F1-02Y1	2377	DOUBLE THREE POLE CONTACTOR	接触器	AR	
986F12-1	1804	CHECK VALVE	单向活门	AR	
VFT300B00	042600721	AIR OUTLET VALVE	空气外流活门	SV	SV
VFT210B00	042702752	AIR INLET VALVE	进气活门	SV	SV
EVT3454HC	1.65E+08	AVIONICS FAN	电子风扇	AR	SV
EVT3454HC	1.65E+08	AVIONICS FAN	电子风扇	AR	SV
V2T152D	L10411318	AIR BUTTERFLY VALVE	蝶形空气活门	SV	SV
89794050	C12110729	CREW OXYGEN CYLINDER	机组氧气瓶	AR	
47145-243	836	THS	安定面配平作动器	AR	
V2T152D	10338	AIR BUTTERFLY VALVE	蝶形空气活门	AR	SV
CMK80-01	2120	PRESSURE SWITCH	压力电门	AR	
2407-89-03	240789-24	ATC/DME. ANTENNA	天线	AR	
2407-89-03	3788	ATC/DME. ANTENNA	天线	AR	
1209-100	2291	PRESSURE SWITCH	压力电门	AR	SV
1209-100	30834	PRESSURE SWITCH	压力电门	AR	SV
190QA01	3515	CURRENT TRANSFORMER	电流感压器	AR	
190QA01	3516	CURRENT TRANSFORMER	电流感压器	AR	
828A0000-02	T3371	BEVEL GEARBOX 63, 5DEG	齿轮箱	AR	
828A0000-02	T3372	BEVEL GEARBOX 63, 5DEG	齿轮箱	AR	
828A0000-02	T3373	BEVEL GEARBOX 63, 5DEG	齿轮箱	AR	

828A0000-02	T3374	BEVEL GEARBOX 63, 5DEG	齿轮箱	AR	
1266-100	34959	PRESSURE SWITCH	压力电门	AR	SV
600615-00-503	20552	CONTROLLER, CARGO VENT	货仓通风控制器	AR	SV
V2T127D	04281	AIR BUTTERFLY VALVE	蝶形空气活门	AR	SV
V2T152D	06825	AIR BUTTERFLY VALVE	蝶形空气活门	AR	SV
CT191B	936	AIR CHECK VALVE	单向活门	AR	
9028A0004-01	07619	POS. PICK OFF UNIT	位置传感器	AR	
8ES005304-00	1485	POWER SUPPLY UNIT	电源供给组件	AR	SV
FRH220034V	15070123	CHECK VALVE APU	单向活门	AR	
87232323V00	VL2064006	DUCT TEMPERATURE SENSOR	管道温度传感器	AR	
101809-04	0202160	ALTITUDE SWITCH	高度电门	AR	
790A0000-02	T2473	BEVEL GEARBOX 19 DEG.	齿轮箱	AR	
827A0000-02	T859	GEARBOX, T-	齿轮箱	AR	
793A0000-07	U1912	ACTUATOR-FLAP	襟翼作动器	AR	
530AL01CN	2483	PWR SUPPLY DECOUPLING UN	电源供给分离组件	AR	
530AL01CN	2483	PWR SUPPLY DECOUPLING UN	电源供给分离组件	AR	
87232324V00	985	SKIN TEMPERATURE SENSOR	蒙皮温度传感器	AR	
3001-01-111	9803-0184	LINEAR ACCELEROMETER	线性加速计	AR	SV
791A0000-06	U1929	ACTUATOR-FLAP	襟翼作动器	AR	
790A0000-02	U2649	BEVEL GEARBOX	齿轮箱	AR	
790A0000-02	U2650	BEVEL GEARBOX	齿轮箱	AR	
9028A0004-01	07611	POS. PICK OFF UNIT	位置传感器	AR	
C20215000	02678	BRAKE PEDAL TRANSMITTER	刹车脚踏传感器	AR	SV
796815-02-03	0538	REFUEL PRESELECTOR	加油预选器	AR	
1407KID02-03	AS2479	REFUEL MULTITANK INDICAT	指示器	AR	
831A0000-05	03653	WING TIP BRAKE	翼尖刹车	AR	
794A0000-06	U1914	ACTUATOR-FLAP	襟翼作动器	AR	
793A0000-07	U1911	ACTUATOR-FLAP	襟翼作动器	AR	
72CF8945-00	764	FLEXIBLE CONTROL	柔性控制组件	AR	
72CF8945-00	778	FLEXIBLE CONTROL	柔性控制组件	AR	
72CF8944-00	740	FLEXIBLE CONTROL	柔性控制组件	AR	
72CF8944-00	766	FLEXIBLE CONTROL	柔性控制组件	AR	
4550-01-482	3683	FIRE/OVHT DETECTOR	火警超温探测器	AR	
4550-01-482	3530	FIRE/OVHT DETECTOR	火警超温探测器	AR	
640CC01Y1	7433	200A SINGLE POLE CONTACT	接触器	AR	
640CC01Y1	7425	200A SINGLE POLE CONTACT	接触器	AR	
2598D	4434	LIGHT TRANSFORMER	照明变压器	AR	
2598D	4405	LIGHT TRANSFORMER	照明变压器	AR	
TA01Z6005	2669	AUTOTRANSFORMER	变压器	AR	
TA01Z6005	2672	AUTOTRANSFORMER	变压器	AR	
BC2065C	1924	SELCAL CODE SELECTION PAN	呼叫代码选择面板	AR	
558CA01Y1	5609	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	5603	260A THREE POLE CONTACTOR	接触器	AR	
655CC01Y1	1949	300A SINGLE POLE CONTACT	接触器	AR	
655CC01Y1	1946	300A SINGLE POLE CONTACT	接触器	AR	
640CC01Y1	7336	200A SINGLE POLE CONTACT	接触器	AR	
640CC01Y1	7332	200A SINGLE POLE CONTACT	接触器	AR	
640CC01Y1	7334	200A SINGLE POLE CONTACT	接触器	AR	
630CC01Y1	5932	100A SINGLE POLE CONTACT	接触器	AR	
558CA01Y1	5600	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	5802	260A THREE POLE CONTACTOR	接触器	AR	

558CA01Y1	5608	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	5605	260A THREE POLE CONTACTOR	接触器	AR	
789A0000-02	U1755	LINE GEARBOX	齿轮箱	AR	
789A0000-02	U1754	LINE GEARBOX	齿轮箱	AR	
640CC01Y1	7331	200A SINGLE POLE CONTACTOR	接触器	AR	
864-001	7892	LIGHTED VISUAL ICING INDICATOR	照明目视结冰指示	AR	
5906734	11156	3 HOLE CURRENT TRANSFORMER	电流传感器	AR	
5906734	11155	3 HOLE CURRENT TRANSFORMER	电流传感器	AR	
4279204	101225	MOTOR CONVERTER	雨刷马达	AR	SV
4279198	27725	MOTOR CONVERTER	雨刷马达	AR	SV
AR4714-7	1242788	STRIKE ASSY-ELECTRICALLY	释放装置	AR	SV
AR4714-11	H-E1371	STRIKE ASSY-ELECTRICALLY	释放装置	AR	SV
AR4714-7	1057107	STRIKE ASSY-ELECTRICALLY	释放装置	AR	SV
794A0000-06	U1915	ACTUATOR-FLAP	襟翼作动器	AR	
777A0000-01	04005	SELECTOR TEMP.	温度选择器	AR	
777A0000-01	04033	SELECTOR TEMP.	温度选择器	AR	
777A0000-01	04007	SELECTOR TEMP.	温度选择器	AR	
9027-20010	9740728	SELECTOR, LDG. FIELD EL	着陆高度选择器	AR	SV
7530334	20495	SELECTOR TEMP.	温度选择器	AR	
058-001-00	4544	ROTARY SWITCH	旋转电门	AR	
195PN01Y01	1012	RUDDER TRIM INDICATOR	方向舵配平指示	AR	SV
27-457	1386	RUDDER TRIM CONTROL SWITCH	方向舵配平控制电	AR	
8420B1-201	8420B1-201	COCKPIT-DOOR SURVEILLANCE	驾驶舱门监视器	AR	
208724-0	1919	EMERGENCY ESCAPE ROPE	应急逃生绳	AR	
208724-0	1923	EMERGENCY ESCAPE ROPE	应急逃生绳	AR	
5906734	11118	3 HOLE CURRENT TRANSFORMER	电流互感器	AR	
5906734	11117	3 HOLE CURRENT TRANSFORMER	电流互感器	AR	
5906734	11154	3 HOLE CURRENT TRANSFORMER	电流互感器	AR	
564CA01Y1	9170	CONTACTOR	接触器	AR	
564CA01Y1	9171	CONTACTOR	接触器	AR	
564CA02FY1	3284	60A THREE POLE CONTACTOR	接触器	AR	
564CA02FY1	3292	60A THREE POLE CONTACTOR	接触器	AR	
31077-111	7277	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	9084	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	7283	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	7275	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-211	43108	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-211	7128	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
792A0000-06	02B212	ACTUATOR-FLAP	襟翼作动器	AR	
792A0000-07	U1916	ACTUATOR-FLAP	襟翼作动器	AR	
25-1-154-01-00	771	4TH. OCCUPANT SEAT	4观座椅	AR	
16800-01-00	14T1723	3RD. OCCUPANT SEAT	3观座椅	AR	
TAAI2-33PE00-01	632	MECHANICAL PILOT SEAT	驾驶员座椅	AR	
TAAI3-03CE00-01	118	MECHANICAL COPILOT SEAT	驾驶员座椅	AR	
31077-211	14236	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-211	52721	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	7281	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	7282	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
796-809-6A	2519	FUEL CADENSICON	燃油电容密度计	AR	SV
796-809-6A	2265	FUEL CADENSICON	燃油电容密度计	AR	SV
630CC01Y1	5935	100A SINGLE POLE CONTACTOR	接触器	AR	

3107-89	1666	MARKER ANTENNA	信标天线	AR	
14403-085	0094	LIQUID LEVEL TRANSMITTER	液位传感器	AR	SV
C24839010-2	H1204	MANIFOLD (ALTN BRK SV) B	总管组件	AR	
622-5134-064	2165	WEATHER RADAR RT DUAL MOI	气象雷达收发机基	AR	
058-001-00	4541	ROTARY SWITCH	旋转电门	AR	
D0003000100000	4092	RHEOSTAT	变阻器	AR	
058-001-00	4540	ROTARY SWITCH	旋转电门	AR	
5XA005033-00	1988	CONTROLLER-LIGHTING	照明控制器	AR	
C12404AB02	C12404006	ATC/TCAS CONTROL UNIT	ATC/TACS控制组件	AR	
5039-200	1572	RAIN REPELLENT GAGE ASSY	防雨液计量组件	AR	
2598D	4725	LIGHT TRANSFORMER	照明控制器	AR	
D0003000100100	1561	RHEOSTAT	变阻器	AR	
C24840010-2	H1132	MANIFOLD (ALTN BRK SV) B	总管组件	AR	
D0003000100000	4093	RHEOSTAT	变阻器	AR	
058-001-00	4545	ROTARY SWITCH	旋转电门	AR	
5XA005033-00	1980	CONTROLLER-LIGHTING	照明控制器	AR	
L95F50-603	22485	FUEL TK OVERPRESSURE PROT	油箱燃油超压保护	AR	SV
L95F50-603	22484	FUEL TK OVERPRESSURE PROT	油箱燃油超压保护	AR	SV
716TS06Y	316	NW. STRG. HANDWHEEL XMTR. UN	前轮转弯手柄	AR	
71TS06Y	320	NW. STRG. HANDWHEEL XMTR. UN	前轮转弯手柄	AR	
330400M01	1653	THROTTLE CONTROL UNIT	推力控制组件	AR	
330400M01	AG10029	THROTTLE CONTROL UNIT	推力控制组件	AR	
2439-89-03	243989-39	ATC/DME. ANTENNA	天线	AR	
2439-89-03	243989-97	ATC/DME. ANTENNA	天线	AR	
2598D	4730	LIGHT TRANSFORMER	变压器	AR	
5XA005032-01	1062	CONTROLLER-LIGHTING	照明控制器	AR	
FRH280002	FR420BD	AIR RELEASE VALVE	释压活门	AR	SV
FRH280002	FR419AW	AIR RELEASE VALVE	释压活门	AR	SV
L83A13-614	24081	VALVE-DRAIN, WATER	排水阀	AR	
L83A13-614	24116	VALVE-DRAIN, WATER	排水阀	AR	
9811839	FRTR861A	CHECK VALVE	单向活门	AR	
9811839	FRTR858A	CHECK VALVE	单向活门	AR	
HTE420044	FRTR025A	PRESSURE HOLDING VALVE	稳压阀	AR	
HTE420044	FRTR026A	PRESSURE HOLDING VALVE	稳压阀	AR	
93-A055-66	51117	AMBIENT MICROPHONE	区域麦克风	AR	
93-A150-20	01106	PREAMPLIFIER MODULE	控制组件	AR	
773A0000-01	03309	SENSOR, TEMP.	温度传感器	AR	
3888394-221205	05421	ELECTRON. CONTROL BOX	电子控制盒	AR	SV
568-1-27202-05R	5849	PUMP	泵	AR	SV
568-1-27202-05R	5855	PUMP	泵	AR	SV
568-1-27202-05R	5860	PUMP	泵	AR	SV
568-1-27202-05R	7491	PUMP	泵	AR	SV
HTE900087-001	FRTR064A	FUEL TRANSFER VALVE	燃油传输活门	AR	
HTE900087-001	FRTR066A	FUEL TRANSFER VALVE	燃油传输活门	AR	
342300M01	4219	TRANSDUCER UNIT	传感器组件	AR	
HTE200002-1	M238GB298	FUEL TRANSFER VALVE ACTUA	燃油传输活门作动	AR	SV
HTE200002-1	M271GB298	FUEL TRANSFER VALVE ACTUA	燃油传输活门作动	AR	SV
HTE200002-1	M272GB298	FUEL TRANSFER VALVE ACTUA	燃油传输活门作动	AR	SV
HTE200002-1	M273GB298	FUEL TRANSFER VALVE ACTUA	燃油传输活门作动	AR	SV
780B0000-01	0780B00L	COMMAND SENSOR UNIT	指令传感器	AR	SV
568-1-27202-05R	5854	PUMP	泵	AR	SV

D9550001901700	FR1854	SIDESTICK	侧杆	AR	
321000M03	5238	SIDE STICK TRANSDUCER UN	侧杆传感器	AR	SV
321000M03	5239	SIDE STICK TRANSDUCER UN	侧杆传感器	AR	SV
64882-206-1	2775	BRAKE PRESSURE INDICATOR	刹车压力指示器	AR	SV
4315542	101432	LANDING LIGHT	着陆灯	SV	SV
4315542	77817	LANDING LIGHT	着陆灯	AR	SV
38E93-6	11641	WING ANTI ICING CONTROL V	大翼防冰控制活门	AR	SV
AR4709-1	N-C1960	COCKPIT SYSTEM CONTROLLEI	驾驶舱系统控制器	AR	
D9550001801700	FR1854	SIDESTICK	侧杆	AR	
321000M03	4830	SIDE STICK TRANSDUCER UN	侧杆传感器	AR	SV
321000M03	5233	SIDE STICK TRANSDUCER UN	侧杆传感器	AR	SV
2LA005308-05	393315	STROBE LIGHT	频闪灯	AR	SV
C24592000-1	H1403	MASTER CYLINDER	控制总泵	AR	
C24592000-1	H1404	MASTER CYLINDER	控制总泵	AR	
568-1-27202-05R	5859	PUMP	泵	AR	SV
38E93-6	16946	WING ANTI ICING CONTROL V	大翼防冰控制活门	AR	SV
568-1-27244-002	5186	FUEL PUMP CANISTER	护罩	AR	
528-70	2835	WING TIP NAVIGATION LIGHT	翼尖导航灯	AR	SV
8ES005309-00	2845	POWER SUPPLY UNIT	电源供给组件	AR	
2LA005308-05	5562	WING STROBE LIGHT	频闪灯	AR	SV
8ES005309-00	2506	POWER SUPPLY UNIT	电源供给组件	AR	
9700-C1A-F23AN	671196	PORTABLE OXYGEN CYL.	便携氧气瓶	AR	SV
9700-C1A-F23AN	ST695	PORTABLE OXYGEN CYL.	便携氧气瓶	AR	SV
796-809-6A	2385	FUEL CADENSICON	电容式密度计	AR	SV
L83A13-614	23805	VALVE-DRAIN, WATER	排放活门	AR	
749198-2	H0438	HYDRAULIC RESERVOIR	储压器	AR	
1158000-21	FRTR447A	REFUEL VALVE	加油活门	AR	SV
568-1-27244-002	5194	FUEL PUMP CANISTER	保护罩	AR	
HTE900118-001	47110246	LOW PRESSURE FUEL VALVE	低压燃油活门	AR	SV
HTE900118-001	FRTR086A	LOW PRESSURE FUEL VALVE	低压燃油活门	AR	SV
HTE190001-2	M309GB398	TWIN MOTOR ACTUATOR	作动器	AR	SV
HTE190001-2	20080120	TWIN MOTOR ACTUATOR	作动器	AR	SV
20700-300	929	VALVE FUEL	燃油活门	AR	
9599-607-12352	47103	RADIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
9599-607-12352	12235	RADIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
9599-607-12352	6127	RADIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
9599-607-12352	13960	RADIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
2403-89	4818	VHF ANTENNA	甚高频天线	AR	SV
2LA455010-00	101	STROBE LIGHT	频闪灯	SV	SV
3901395	FRTR071A	PUMP JET	引射泵	AR	
3901395	FRTR063A	PUMP JET	引射泵	AR	
HTE200002-1	M109GB129	FUEL TRANSFER VALVE ACTUA	作动器	AR	SV
0861ED	0861ED-95	ANGLE OF ATTACK SENSOR	迎角传感器	AR	SV
C16291AB	Q06747050	ANGLE OF ATTACK SENSOR	迎角传感器	AR	SV
A08000	2970	ACTUATOR	作动器	AR	
C12CB0010	924	PUMP	泵	AR	
34100005-1	79773D1	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1588RK	CARTRIDGE	爆炸帽	AR	SV
C16291AB	Q06747050	ANGLE OF ATTACK SENSOR	迎角传感器	AR	SV
34100005-1	38272D1	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1138TJ	CARTRIDGE	爆炸帽	AR	SV

34100005-1	38573D1	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1606RK	CARTRIDGE	爆炸帽	AR	SV
2403-89	4845	VHF ANTENNA	甚高频天线	AR	SV
822-1330-001	2WRLH	ACTIVE GPS ANTENNA	天线	AR	
822-1330-001	4410R	ACTIVE GPS ANTENNA	天线	AR	
34100005-1	79718D1	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1665RK	CARTRIDGE	爆炸帽	AR	SV
2407-89-03	3442	ATC/DME. ANTENNA	天线	AR	
2407-89-03	3434	ATC/DME. ANTENNA	天线	AR	
L83A13-614	23798	VALVE-DRAIN, WATER	排水活门	AR	
L95F50-603	22510	FUEL TK OVERPRESSURE PRO	油箱燃油超压保护	AR	SV
HTE190001-2	FRTR272A	TWIN MOTOR ACTUATOR	作动器	AR	SV
1158000-21	FRTR069A	REFUEL VALVE	加油活门	AR	SV
9811839	FRTR856A	CHECK VALVE	单向活门	AR	
9811839	FRTR860A	CHECK VALVE	单向活门	AR	
9811839	FRTR857A	CHECK VALVE	单向活门	AR	
9811839	FRTR859A	CHECK VALVE	单向活门	AR	
831A0000-05	03652	WING TIP BRAKE	翼尖刹车	AR	
L95F100-603	C96794	FUEL TK OVERPRESSURE PRO	油箱燃油超压保护	AR	
L95F100-603	D56611	FUEL TK OVERPRESSURE PRO	油箱燃油超压保护	AR	
HTE900087-001	FRTR063A	FUEL TRANSFER VALVE	活门	AR	
HTE900135	FRTR095A	BALL VALVE	球形活门	AR	
HTE900133	FRTR094A	BALL VALVE	球形活门	AR	
9815715	FRTR137A	RELIEF VALVE	活门	AR	
0727540	C133040	CAP-COUPLING, REFUEL	加油口盖	AR	
2403-89	4822	VHF ANTENNA	甚高频天线	AR	SV
3106-89	1202	LOCALIZER ANTENNA	航向天线	AR	
786-052	2444	FUEL VENT PROTECTOR	燃油通气保护器	AR	
786-052	2548	FUEL VENT PROTECTOR	燃油通气保护器	AR	
33D01300-5	SN;A0652	WAVE GUIDE	波导电门	AR	
ZCV63-6	80105189	CHECK VALVE	单向活门	AR	
ZCV63-6	80105190	CHECK VALVE	单向活门	AR	
622-5136-201	3431	WEATHER RADAR DUAL ANT MC	气象雷达天线基座	AR	
622-5137-601	6225	WEATHER RADAR ANTENNA	气象雷达天线	AR	SV
762080-1	H0567	SAFETY VALVE L. G. S.	安全活门	AR	SV
762080-1	H0603	SAFETY VALVE L. G. S.	安全活门	AR	SV
D3237010001200	506	MANIFOLD ASSY	总管组件	AR	
A25316-101	H1953	Dual Shuttle Valve	双关断活门	AR	
S4-3500711	0881	GROUND SERVICE MANIFO	地面勤务总管	AR	
520913	G0310146	CONST. SPEED MOTOR/GENERAT	恒速马达发电机	AR	SV
A25315-1	H2384	PARKING BRAKE VALVE	停留刹车活门	AR	
A25461-104	W1343	AUTOMATIC SELECTOR	自动选择器	AR	
114087006	CWDD-DH-3	DOOR BY-PASS VALVE, MLG	旁通活门	AR	
C24703003-1	H3526	PARK BRAKE SELECTOR VALVE	停留刹车选择活门	AR	
A25434006-3000	H2916	EMER. BRK. DUAL DISTR. VALVE	活门	AR	
693335	MX608098	PACKAGE E-PUMP	泵	SV	SV
769106A	CWDD-DH2C	MODULE RAT GND CHECK	RAT地面检查模块	AR	
C19DS0014	976	RESERVOIR YELLOW	液力油箱	AR	
C82LL0010	2939	DRAIN VALVE	排放活门	AR	SV
18301905-1	43888D	PRESSURE GAUGE AIR	气压表	AR	
HTE690035-1	FRTR522A	PRESSURE SWITCH AIR	压力电门	AR	

70400	2764	VALVE RELIEF AIR	活门	AR	
ZCV63-6	71006162	CHECK VALVE	单向活门	AR	
1905A0000-01	02759	SAFETY VALVE L. G. S.	安全活门	AR	
114161003	CWDD-DH74	MODULE-JACK CONTROL	控制模块	AR	
QA07739-02	RZ5-2305	RSVR PRESS UNIT	增压组件	AR	
3105-89	1198	GLIDE ANTENNA	下滑道天线	AR	
QA05561	RG2-2582	FILTER HYD. LP	油滤	AR	
TM113-1	2185	SWITCH	电门	AR	
786A0000-12	01790	POS. PICK OFF UNIT	动力控制组件	AR	
787A0000-07	3626	VALVE BLOCK	活门块	AR	
787A0000-07	3628	VALVE BLOCK	活门块	AR	
3022016-000	G1730549	RELIEF VALVE	释压活门	AR	
ZCV63-8	8020260	CHECK VALVE	单向活门	AR	
ZCV64-12	70820110	CHECK VALVE	单向活门	AR	
6-1404-0000-4	970243	HYDRAULIK HAND PUMP	手摇泵	AR	SV
114170008	CWDDDH102	SELECTOR VALVE MANIFOLD	选择活门总管	AR	
568-1-27244-002	5188	FUEL PUMP CANISTER	燃油泵保护罩	AR	
568-1-27203-002	5129	FUEL PUMP CANISTER	燃油泵保护罩	AR	
568-1-27203-002	5136	FUEL PUMP CANISTER	燃油泵保护罩	AR	
568-1-27244-002	5190	FUEL PUMP CANISTER	燃油泵保护罩	AR	
SB209L1A1-1484	50086	HYDR. ACCUMULATOR	储压器	AR	
18330904-2	112283	PRESSURE GAUGE NIT.	压力表	AR	SV
SB209L1A1-1484	51693	HYDR. ACCUMULATOR	储压器	AR	
18330904-2	42873D	PRESSURE GAUGE NIT.	压力表	AR	SV
70200	3421	VALVE	活门	AR	
S4-3500712	0244	GROUND SERVICE MANIFO	地面勤务总管	AR	
S4-3500711	0883	GROUND SERVICE MANIFO	地面勤务总管	AR	
788A0000-02	T1708	RIGHT ANGLE GEARBOX	齿轮箱	AR	
788A0000-02	T1709	RIGHT ANGLE GEARBOX	齿轮箱	AR	
VT477-2	0530	INDICATOR QTY. RSVR.	容量指示器	AR	
ZCV63-6	80126495	CHECK VALVE	单向活门	AR	
ZCV63-6	80126587	CHECK VALVE	单向活门	AR	
C19BQ0014	971	RESERVOIR BLUE	液力油箱	AR	
18301905-1	43914D	PRESSURE GAUGE AIR	压力表	AR	
70400	2794	VALVE RELIEF AIR	释压活门	AR	
HTE690112	FRTR001A)	PRESSURE SWITCH AIR	压力电门	AR	
HTE690035-1	FRTR530A)	PRESSURE SWITCH AIR	压力电门	AR	
70200	3434	VALVE	活门	AR	
70200	3485	VALVE	活门	AR	
SB209L1A1-1484	50434	HYDR. ACCUMULATOR	储压器	AR	
18330904-2	43186D	PRESSURE GAUGE NIT.	压力表	AR	SV
QA05797	RG1-2240	FILTER, HYD. HP	油滤	AR	
QA05797	RG2-2102	FILTER, HYD. HP	油滤	AR	
450-2-3100-00	65999	SWITCH PRESSURE HYD.	压力电门	AR	SV
S4-3402180	01209	ELECTRIC. SELECTOR VA	选择活门	AR	
QA05604	RF12-1050	FILTER HYD. LP	油滤	AR	
TM113-1	2125	TRANSDUC. /SWITCH-TEMP	温度电门	AR	
QA05593	RG1-2224	FILTER HYD. HP	油滤	AR	
E03A00	2960	FIRE-SHUT-OFF-VALVE	火警关断活门	AR	
E03A00	2961	FIRE-SHUT-OFF-VALVE	火警关断活门	AR	
693335	MX583860	PUMP	泵	AR	SV

6-1404-0000-4	050333	HYDRAULIK HAND PUMP	手摇泵	AR	SV
C51LM0020	2444	VALVE, 4/4WAY-	活门	AR	
114087008	SA0807686	DOOR BY-PASS VALVE, MLG	旁通活门	AR	
ZCV63-8	06-122110	CHECK VALVE	单向活门	AR	
FE171-000	FR881	CABLE TENSION REGULATOR	钢索张力调节器	AR	
201122008	CWDD-DH48	DOOR UPLOCK, MLG	主起落架舱门上位	AR	
201122008	CWDD-DH28	DOOR UPLOCK, MLG	主起落架舱门上位	AR	
201117017	CWDDDH189	UPLOCK, MLG	主起落架上位锁	AR	
201117018	CWDDDH279	UPLOCK, MLG	主起落架上位锁	AR	
682007004	782-97	RAT CONTROL PANEL	RAT控制面板	AR	
ZCV63-6	70917164	CHECK VALVE	单向活门	AR	
ZCV63-4	80218667	CHECK VALVE	单向活门	AR	
ZCV64-10	70902341	CHECK VALVE	单向活门	AR	
C19DS0024	939	RESERVOIR GREEN	液压油箱	AR	
C82LL0010	10679	DRAIN VALVE	排放活门	AR	SV
18301905-1	43365D	PRESSURE GAUGE AIR	压力表	AR	
70400	2728	VALVE RELIEF AIR	释压活门	AR	
HTE690035-1	FRTR483A	PRESSURE SWITCH AIR	压力电门	AR	
ZCV63-6	80126476	CHECK VALVE	单向活门	AR	
ZCV63-6	80105184	CHECK VALVE	单向活门	AR	
ZCV63-6	80105186	CHECK VALVE	单向活门	AR	
ZCV63-6	70811239	CHECK VALVE	单向活门	AR	
ZCV63-4	70920134	CHECK VALVE	单向活门	AR	
ZCV63-4	70925666	CHECK VALVE	单向活门	AR	
ZCV64-12	70820137	CHECK VALVE	单向活门	AR	
ZCV64-13	70820112	CHECK VALVE	单向活门	AR	
ZCV64-20	80123224	CHECK VALVE	单向活门	AR	
HTE69000-1	FRTR1388A	P-SWITCH	P电门	AR	SV
HTE69000-1	FRTR1400A	P-SWITCH	P电门	AR	SV
ZCV63-6	80126521	CHECK VALVE	单向活门	AR	
ZCV63-6	80126518	CHECK VALVE	单向活门	AR	
ZCV63-4	70920131	CHECK VALVE	单向活门	AR	
31073-110	15103	AILERON SERVOCONTROL	副翼伺服控制器	SV	SV
31073-110	24815	AILERON SERVOCONTROL	副翼伺服控制器	AR	SV
31073-110	3869	AILERON SERVOCONTROL	副翼伺服控制器	AR	SV
31073-110	3555	AILERON SERVOCONTROL	副翼伺服控制器	AR	SV
ZCV64-10	71208106	CHECK VALVE	单向活门	AR	
ZCV64-10	71208130	CHECK VALVE	单向活门	AR	
114083003	CWDD-DH37	VENT VALVE, MLG	主架通风活门	AR	
FRH100013A	22351	P-SWITCH	P电门	AR	
114122014	DH-3098-C	DOOR ACTUATOR, MLG	主起舱门作动筒	AR	SV
114122014	SA0707709	DOOR ACTUATOR, MLG	主起舱门作动筒	AR	SV
QA05561	RG2-2587	FILTER HYD. LP	油滤	AR	
TM113-1	2180	TRANSDUC. /SWITCH-TEMP	电门	AR	
114160005	HAI-DRG-C	JACK EJECTION	弹射器	AR	
680203037A	142	RAM AIR TURBINE	冲压空气涡轮	AR	SV
933260	F9818988	PUMP	泵	AR	
342B050000	09322	THERMOSTAT-CONTROL	控制器	SV	SV
342B050000	07480	THERMOSTAT-CONTROL	控制器	AR	SV
2LA005128-01	810	OVERWING LIGHT	翼上灯	AR	
2LA005414-01	867	OVERWING EMERG. LIGHT	翼上应急灯	AR	

341E030000	03164	SOLENOID THERMOSTAT	引气压力调节活门	AR	SV
341E030000	02446	SOLENOID THERMOSTAT	引气压力调节活门	AR	SV
HTE510016	C090193	ACCUMULATOR GAS CHECK VALVE	充气阀	AR	SV
HTE510016	C163164	ACCUMULATOR GAS CHECK VALVE	充气阀	AR	SV
HTE510016	C152077	ACCUMULATOR GAS CHECK VALVE	充气阀	AR	SV
6730F010000	6730-0636	FAN AIR VALVE	活门	AR	
6730C010000	01327	FAN AIR VALVE	活门	AR	
ZCV63-4	708251	CHECK VALVE	单向活门	AR	
ZCV63-6	80126507	CHECK VALVE	单向活门	AR	
ZCV63-8	8020226	CHECK VALVE	单向活门	AR	
ZCV64-10	71208127	CHECK VALVE	单向活门	AR	
A25312-1	H2660	THROTTLE VALVE	活门	AR	
6740F010000	6740-1128	OVERPRESSURE VALVE	过压活门	SV	SV
6740F010000	6740-0499	OVERPRESSURE VALVE	过压活门	AR	SV
3732A010000	811712-53	PRECOOLER EXCHANGER	预冷器	AR	
114086001	CWDD-DH31	CUT-OUT VALVE	关断活门	AR	
D290-70172-000-00	845	PTU-MANIFOLD	总管组件	AR	
BHC1060-04	4093	VALVE PRIORITY	优先活门	AR	SV
ZCV64-10	80209113	CHECK VALVE	单向活门	AR	
A25313002	H2366	SELECTOR VALVE	选择活门	AR	
S4-3400920-03	02706	VALVE, 2/2WAY	活门	AR	
321-400-707-0	4187	COWL OPEN ACT	整流罩打开作动筒	AR	SV
321-400-707-0	4154	COWL OPEN ACT	整流罩打开作动筒	AR	SV
321-400-707-0	LHTA462	COWL OPEN ACT	整流罩打开作动筒	AR	SV
321-400-707-0	15288	COWL OPEN ACT	整流罩打开作动筒	AR	SV
642M3002-503	5518001	FAN COWL	风扇整流罩	AR	
642M3002-505	5520001	FAN COWL	风扇整流罩	AR	
642M3001-505	5517001	FAN COWL	风扇整流罩	AR	
642-1000-501AL	8965001	INLET	进气道	AR	
642-1000-501AK	8372002	INLET	进气道	AR	
9508175	FRTR086AV	FLOAT VENT VALVE	通气隔离活门	AR	
9508175	FRTR087AV	FLOAT VENT VALVE	通气隔离活门	AR	
2LA005413-01	867	OVERWING LIGHT FWD.	翼上灯	AR	
2LA005127-01	870	OVERWING EMERG. LIGHT	翼上应急灯	AR	
1158000-21	FRTR070AV	REFUEL VALVE	加油活门	AR	SV
ZCV64-20	80227421	CHECK VALVE	单向活门	AR	
ZCV63-6	80105185	CHECK VALVE	单向活门	AR	
ZCV63-4	70529477	CHECK VALVE	单向活门	AR	
ZCV63-4	70529387	CHECK VALVE	单向活门	AR	
ZCV212	80123273	DOUBLE CHECK VALVE	双单向活门	AR	
ZCV63-6	80105183	CHECK VALVE	单向活门	AR	
ZCV63-6	80105187	CHECK VALVE	单向活门	AR	
ZCV63-6	80105188	CHECK VALVE	单向活门	AR	
9811820	FRTR026AV	CHECK VALVE	单向活门	AR	
9811820	FRTR027AV	CHECK VALVE	单向活门	AR	
D201094/D	019112	STATIC PROB	静压探头	AR	
D201094/D	019165	STATIC PROB	静压探头	AR	
D201094/D	019103	STATIC PROB	静压探头	AR	
D201094/D	019124	STATIC PROB	静压探头	AR	
3601-91	7482	PYLON FIRE DETECTOR	火警探测器	SV	
3601-91	7487	PYLON FIRE DETECTOR	火警探测器	SV	

UPK-A01	N/A	UNIVERSAL PRECAVTION KIT	卫生防疫包	AR	
505256-401	N/A	LIFE LINE	救生绳	AR	
505256-401	N/A	LIFE LINE	救生绳	AR	
505256-401	N/A	LIFE LINE	救生绳	AR	
505256-401	N/A	LIFE LINE	救生绳	AR	
N/A	N/A	EMERGNCY MEDICAL EQUIPMEN	应急医疗箱	AR	
BHC1060-04	2957	VALVE PRIORITY	优先活门	AR	SV
S4-3400920-03	02334	VALVE	活门	AR	
ZCV64-12	30829109	CHECK VALVE	单向活门	AR	
ZCV67-1	04-081216	CHECK VALVE	单向活门	AR	
1559A9900-02	1559A9LI	MANIFOLD BLOCK ASSY. HP	高压总管	AR	
71190400010NCOA	M80028005	VALVE SAMPLING	取样活门	AR	SV
114151004	DH-1949-0	VALVE, RELIEF H. P.	释压活门	AR	
ZCV64-16	13-0305-1	CHECK VALVE	单向活门	AR	
CZ9284E	HEK23539	PRESSURE TRANSDUCER	压力传感器	AR	SV
450-2-3100-00	31857	SWITCH PRESSURE HYD.	压力电门	AR	SV
450-2-3100-00	31841	SWITCH PRESSURE HYD.	压力电门	AR	SV
QA06304	RZ3-1807	FILER	油滤	AR	
B42CA2002	4077	VALVE NON RETURN	活门	AR	
B42CA2002	4117	VALVE NON RETURN	活门	AR	
D290-70173-000-00	322	HP-MANIFOLD	高压总管	AR	
BHC1060-04	2951	VALVE PRIORITY	优先活门	AR	SV
QA06304	RG1-2339	FILTER	油滤	AR	
S4-3400950-06	02314	VALVE, 3/2WAY-	活门	AR	
114151004	CWDD-DH76	VALVE, RELIEF H. P.	释压活门	AR	
P7119HP	433710058	VALVE SAMPLING	取样活门	AR	
CZ9284E	HEK16412	PRESSURE TRANSDUCER	压力传感器	AR	SV
ZCV64-10	8020969	CHECK VALVE	单向活门	AR	
ZCV66-1	7010847	CHECK VALVE	单向活门	AR	
50-2-3100-00	26001	SWITH PRESSURE	压力电门	AR	SV
450-2-3100-00	63103	SWITH PRESSURE	压力电门	AR	SV
4236534	75606	RUNWAY TURNOFF LIGHT	转弯灯	AR	
4236534	78611	RUNWAY TURNOFF LIGHT	转弯灯	AR	
8000283Y00	101378	TAKE-OFF LIGHT	起飞灯	AR	
1338-1430	3203	NLG. ROTATING MECHANISM	前架旋转机构	AR	
1338-1430	582	NLG. ROTATING MECHANISM	前架旋转机构	AR	
D23119750-1	B585	NLG ELECTRICAL BOX	电子盒	AR	
C24736001-1	H0974	ELECTRO-HYD. STEERING MODU	转弯模块	AR	SV
C20105000	11025	TACHOMETER	轮速传感器	AR	
C20105000	09947	TACHOMETER	轮速传感器	AR	
C20105000-1	7154	TACHOMETER	轮速传感器	AR	
C20105000-2	58120	TACHOMETER	轮速传感器	AR	SV
4236564	82023	TAXI LIGHT	滑行灯	AR	
D23278100	L0885	TOWING ADAPTER ASSY	牵引挂钩	AR	
EVT174-227	11157	TECHNO FAN	风扇	AR	
EVT174-227	11158	TECHNO FAN	风扇	AR	
EVT174-227	11156	TECHNO FAN	风扇	AR	
EVT174-227	NA001	TECHNO FAN	风扇	AR	
D2907017100000	213	HYDRAULIC SYSTEM MANIFOLI	高压总管	AR	
QA06304	RF8-1971	FILTER	油滤	AR	
114151004	CWDD-DH85	VALVE, RELIEF H. P.	释压活门	AR	

S4-3401610-01	01110	VALVE, 3/2WAY-	活门	AR	
P7119HP	43371003	VALVE SAMPLING	取样活门	AR	
ZCV64-16	80209292	CHECK VALVE	单向活门	AR	
CZ9284E	HEK43051	PRESSURE TRANSDUCER	压力传感器	AR	SV
50-2-3100-00	28369	SWITCH PRESSURE HYD.	压力电门	AR	SV
450-2-3100-00	33050	SWITCH PRESSURE HYD.	压力电门	AR	SV
ZCV67-1	70421409	CHECK VALVE	单向活门	AR	
786A0000-12	01787	POWER COTROL UNIT	动力控制组件	AR	
787A0000-07	03589	VALVE BLOCK	活门块	AR	
787A0000-07	03624	VALVE BLOCK	活门块	AR	
642-3802-523	9005001	THRUST REVERSER	反推	AR	
238-0451-523	NA002	EXHAUST CENTRE BODY	尾喷中心体	AR	
238-0451-513	NA001	EXHAUST CENTRE BODY	尾喷中心体	AR	
642-3801-515	2186001	THRUST REVERSER	反推	AR	
9599-607-14942	14942-117	RADIO ALTIMETER TRANSCEIV	无线电高度收发机	AR	SV
9599-607-14942	14942-126	RADIO ALTIMETER TRANSCEIV	无线电高度收发机	AR	SV
2LA455010-00	648	STROBE LIGHT	频闪灯	AR	SV
C-5K	98051302	STANDBY COMPASS	备用罗盘	AR	
C24837101-4	H2840	MANIFOLD	刹车总管	AR	
C24837101-4	H5520	MANIFOLD	刹车总管	AR	
C24730100	H1769	NLG.UPLOCK ASSY	舱门上位锁	AR	
C24730001-6	H1773	NLG.UPLOCK ASSY	舱门上位锁	AR	
114083003	CWDD-DH66	VENT VALVE, MLG	关断活门	AR	
114087008	CH0901592	DOOR BY-PASS VALVE, MLG	旁通活门	AR	
810A0000-05	08159	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	SV
810A0000-05	03721	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	SV
810A0000-04	02662	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	
B42CA2002	4211	VALVE NON RETURN	活门	AR	
615-2630-102	576-10242	ADF ANTENNA	自动定向天线	AR	SV
615-2630-102	2052	ADF ANTENNA	自动定向天线	AR	SV
642-4001-501	3457001	EXHAUST NOZZLE	尾喷	AR	SV
642-4001-501	3841001	EXHAUST NOZZLE	尾喷	AR	SV
642-3802-517	2189001	THRUST REVERSER	反推	AR	
642-3801-515	2188001	THRUST REVERSER	反推	AR	
D23596000-2	B1957	STRUT ASSY	支撑组件	AR	
D23613000	L3991	ACTG CYL	前起收放作动筒	AR	
201590003	13MDC0379	RETRACTION ACTUATOR	主架收放作动筒	AR	
201166014	B864	SIDESTAY ASSY MLG	主架侧支撑组件	AR	
201590002	B1999	RETRACTION ACTUATOR	主架收放作动筒	AR	
201166013	B357	SIDESTAY ASSY MLG	主架侧支撑组件	AR	
201419001-010	MDL/MG006	TORQUE LINK DAMPER	减摆器	AR	
D3214022000000	SHL22206	NUT	螺帽	AR	
D3215303000200	AF12093	PIN	销子	AR	
201419001-010	MDL/MG033	TORQUE LINK DAMPER	减摆器	AR	
D3214022000000	SHL22206	NUT	螺帽	AR	
D3215303000800	AF12095	PIN	销子	AR	
E20000	001135	ACTUATOR	作动筒	AR	
S4-3300520-01	1595	ACTUATOR	作动筒	AR	SV
S4-3300520-01	2615	ACTUATOR	作动筒	AR	SV
22715-000-02	H3043	NLG.DOOR ACTUATING CYLIND	前起舱门作动筒	AR	
ZCV63-8	802169	CHECK VALVE	单向活门	AR	

ESO400	N/A	FIRE AXE	消防斧	AR	
748A0000-08	01742	VALVE ANTI ICING	防冰活门	AR	
748A0000-08	01973	VALVE ANTI ICING	防冰活门	AR	
ZCV63-8	8021611	CHECK VALVE	单向活门	AR	
D2567045301000	NA	FLIGHT KIT 2	飞行包	AR	
HTE310021-1	FRTR024AV	AIR INLET VALVE	进气活门	AR	
HTE310021-1	FRTR023AV	AIR INLET VALVE	进气活门	AR	
ZRA1990030	2784	TRANSDUCER	传感器	AR	
ZRA1990030	3569	TRANSDUCER	传感器	AR	
ZRA380-00	ASA21178	TRANSDUCER	传感器	AR	
ZRA380-00	ASA28123	TRANSDUCER	传感器	AR	
HTE900096	FRTR040AV	TRANSFER VALVE DRIVE SHAFT	转换驱动轴	AR	
N/A	N/A	E/E TRACK	电子设备架	AR	
HTE900096	FRTR032AV	TRANSFER VALVE DRIVE SHAFT	转换驱动轴	AR	
503CA02F1-02Y1	2378	DOUBLE THREE POLE CONTACT	接触器	AR	
QA05877	RF12-1189	VALVE RESTRICT. BLEED	流量限制活门	AR	
C49AA0221	854	CANISTER, PUMP FUEL	燃油泵保护罩	AR	
HTE900095	FRTR037AV	TRANSFER VALVE DRIVE SHAFT	转换驱动轴	AR	
HTE900095	FRTR038AV	TRANSFER VALVE DRIVE SHAFT	转换驱动轴	AR	
94830-04	1269	BRACKET FWD LEFT	左前支架	AR	
94830-05	1228	BRACKET FWD RIGHT	左后支架	AR	
94830-06	1243	BRACKET REAR	后支架	AR	
L83A13-617	20316	LEAK-MONITOR	渗漏检测器	AR	
3508802-36	FRTR031AV	INDICATOR, MAGNETIC LEVEL	浮子	AR	
HTE900087-001	FRTR065AV	FUEL TRANSFER VALVE	燃油传输活门	AR	
9508175	FRTR089AV	FLOAT VENT VALVE	浮子通气活门	AR	
ZCV66-1	61213251	CHECK VALVE	单向活门	AR	
9508175	FRTR088AV	FLOAT VENT VALVE	浮子通气活门	AR	
3508802-36	FRTR030AV	INDICATOR, MAGNETIC LEVEL	浮子	AR	
342300M01	4014	TRANSDUCER UNIT	传感器组件	AR	
342300M01	4015	TRANSDUCER UNIT	传感器组件	AR	
30900000M	0673YE	CARGO FIRE EXTINGUISHER BOT	爆炸帽		SV
30900000M	0685YE	CARGO FIRE EXTINGUISHER BOT	爆炸帽		SV
34600017	23832F1	FIRE EXTINGUISHER	货舱灭火瓶		SV
642M3001-503	5515001	FAN COWL	风扇整流罩	AR	
642M3002-505	5516001	FAN COWL	风扇整流罩	AR	
642M3001-505	5513001	FAN COWL	风扇整流罩	AR	
642M3002-503	5514001	FAN COWL	风扇整流罩	AR	
642-1000-505	12349001	INLET	进气道	AR	
642-1000-505	12348001	INLET	进气道	AR	
642-4001-501	12464001	EXHAUST NOZZLE	尾喷	AR	SV
642-4001-501	7851001	EXHAUST NOZZLE	尾喷	AR	SV
2380451523	7851001	EXHAUST CENTRE BODY	中心体	AR	
2380451523	7020001	EXHAUST CENTRE BODY	中心体	AR	
740120C	7456	GENERATOR CONTROL UNIT	启动机控制组件	AR	SV
740121B	1129	GROUND POWER CONTROL UNIT	地面电源控制组件	AR	
RAI2800M0706	Q00160007	SM/EDET. CONTR. UNIT	烟雾探测控制组件	AR	SV
9022-15702-11	9731774	CONTROLLER, PRESS.	压力控制器	AR	
B372BAM0515	6313	SPOILER ELEVATOR COMPUTER	扰流板升降舵计算	AR	SV
622-5132-622	9116	WEATHER RADAR TRANSCIEVER	气象雷达收发机	AR	
759D0000-02	3265	CONTROLLER-PACK	空调控制器	AR	

759D0000-02	2873	CONTROLLER-PACK	空调控制器	AR	
622-5132-622	7320	WEATHERRADARTRANSCEIVER	气象雷达收发机	AR	
822-1152-122	110557	MMRRECEIVER	多模式接收机	AR	
740120C	4817	GENERATORCONTROLUNIT	发电机控制组件	AR	SV
1058-34	1270	TYREPRESS. INDICATINGUNIT	胎压指示组件	AR	
SIC5059-11-0207	1736	COMPUTER-FQI	燃油量指示计算机	AR	
740120C	3290	GENERATORCONTROLUNIT	发电机控制组件	AR	SV
746923E	2023	ELECGENERATIONINTFCUNIT	发电机接口组件	AR	
746923E	4125	ELECGENERATIONINTFCUNIT	发电机接口组件	AR	
785002-9	785002IN7	BLEEDMONITORINGCOMPUTER	引气监控计算机	AR	SV
775C0000-04	01086	CONTROLLER, ZONETEMP.	区域温度控制器	AR	
80-178-03-88013	253984-67	L. G. CONTROL+INTERFACEUNIT	起落架控制和接口	AR	
822-0330-020	895	HF/COMM. TRANSCEIVER	高频通讯收发器	AR	
600611-00-601	14104042	CONTROLLER-HEAT	加热控制器	AR	
785-002-8	2407	BLEEDMONITORINGCOMPUTER	引气监控计算机	AR	
9022-15702-11	9731876	CONTROLLER, PRESS.	压力控制器	AR	
B397BAM0624	Q00140013	FLIGHTAUGMENTATIONCOMPUTER	飞行增稳计算机	AR	SV
C13043AA06	6442	FLIGHTMANAGEMENTGUIDCOMP	飞行管理指引计算	AR	
30042-0601	1309	CONTROLUNIT-LEVELSENSING	油面高度传感控制	AR	
30042-0601	1543	CONTROLUNIT-LEVELSENSING	油面高度传感控制	AR	
80-178-03-88013	253984-75	L. G. CONTROL+INTERFACEUNIT	起落架控制和接口	AR	
822-1152-122	72RJ	MMRRECEIVER	多模式接收机	AR	
3945128218	ELACVB019	ELEVATORAILERONCOMPUTER	升降舵副翼计算机	AR	
822-0299-020	146979	ADFRECEIVER	自动定向机接收机	AR	SV
822-0299-020	150084	ADFRECEIVER	自动定向机接收机	AR	SV
822-0330-020	897	HF/COMM. TRANSCEIVER	高频通讯收发器	AR	
822-0329-020	1274	DMEINTERROGATOR	测距机	AR	
7517800-10005	98030808	ATCTRANSPONDER	空中交通管制应答	AR	SV
822-0323-020	1373	VHF/COMM. TRANSCEIVER	甚高频通讯收发机	AR	SV
AMU2790CB06	2790-2522	AUDIOMANAGEMENTUNIT	音频管理组件	AR	
115370-1016	1950	FLTCTLDATAACONCENTRATOR	飞行数据控制集中	AR	SV
965-0758-001	CMUMK2-03	ACARSMANAGEMENTUNIT	飞行通信录地址报	AR	SV
822-0323-020	1893	VHF/COMM. TRANSCEIVER	甚高频通讯收发机	AR	SV
822-0323-020	1698	VHF/COMM. TRANSCEIVER	甚高频通讯收发机	AR	SV
822-0297-020	159135	VORRECEIVER	甚高频全信标接收	AR	SV
7517800-10005	98101533	ATCTRANSPONDER	空中交通管制应答	AR	SV
822-0297-020	117178	VORRECEIVER	甚高频全信标接收	AR	SV
822-0329-020	172YK1	DMEINTERROGATOR	测距机	AR	
3945128218	ELACVB017	ELEVATORAILERONCOMPUTER	升降舵副翼计算机	AR	
115370-1016	1933	FLTCTLDATAACONCENTRATOR	飞行数据控制集中	AR	SV
B372BAM0515	Q00136017	SPOILERELEVATORCOMPUTER	扰流板升降舵计算	AR	SV
7517900-10020	97110207	TCASIIICOMPUTER	空中交通警告防撞	AR	
B372BAM0515	6265	SPOILERELEVATORCOMPUTER	扰流板升降舵计算	AR	SV
B397BAM0624	6418	FLIGHTAUGMENTATIONCOMPUTER	飞行增稳计算机	AR	SV
C13043AA06	C13043037	FLIGHTMANAGEMENTGUIDCOMP	飞行管理指引计算	AR	
RD-AV9809-01	200159	DU-DISPLAYUNIT	显示器	AR	
RD-AV9809-01	120028	DU-DISPLAYUNIT	显示器	AR	
RD-AV9809-01	150180	DU-DISPLAYUNIT	显示器	AR	
RD-AV9809-01	200154	DU-DISPLAYUNIT	显示器	AR	
RD-AV9809-01	111020	DU-DISPLAYUNIT	显示器	AR	
RD-AV9809-01	111347	DU-DISPLAYUNIT	显示器	AR	

RD-AV9809-01	111627	DU-DISPLAYUNIT	显示器	AR	
RD-AV9809-01	120092	DU-DISPLAYUNIT	显示器	AR	
RD-AV9810-01	110715	DU-DISPLAYUNIT	显示器	AR	
RD-AV9810-01	111369	DU-DISPLAYUNIT	显示器	AR	
RD-AV9810-01	150194	DU-DISPLAYUNIT	显示器	AR	
RD-AV9810-01	110783	DU-DISPLAYUNIT	显示器	AR	
RD-AV9810-01	110651	DU-DISPLAYUNIT	显示器	AR	
RD-AV9810-01	111510	DU-DISPLAYUNIT	显示器	AR	
RD-AV9810-01	111364	DU-DISPLAYUNIT	显示器	AR	
RD-AV9810-01	120165	DU-DISPLAYUNIT	显示器	AR	
800-160-201	711046	VIDEOTAPEREPRODUCER	播放机	AR	
800-160-201	805046	VIDEOTAPEREPRODUCER	播放机	AR	
FE240-004	1035	DOORDAMPERCYLINDER	舱门阻尼器	AR	SV
FE240-004	1045	DOORDAMPERCYLINDER	舱门阻尼器	AR	SV
FE240-004	1081	DOORDAMPERCYLINDER	舱门阻尼器	AR	SV
FE240-004	1083	DOORDAMPERCYLINDER	舱门阻尼器	AR	SV
31075-840	5913	ELEVATORSERVOCONTROL	升降舵伺服控制器	AR	SV
31075-840	5789	ELEVATORSERVOCONTROL	升降舵伺服控制器	AR	SV
31075-840	10407	ELEVATORSERVOCONTROL	升降舵伺服控制器	AR	SV
31075-840	3652	ELEVATORSERVOCONTROL	升降舵伺服控制器	AR	SV
AR4714-7	H-A9628	STRIKEASSY-ELECTRICALLYOP	电子锁	AR	SV
AR4714-11	1167801	STRIKEASSY-ELECTRICALLYOP	电子锁	AR	SV
AR4714-7	H-E8695	STRIKEASSY-ELECTRICALLYOP	电子锁	AR	SV
764A0000-03	06625	SENSOR, TEMP.	温度传感器	AR	
764A0000-03	06851	SENSOR, TEMP.	温度传感器	AR	
764A0000-03	07101	SENSOR, TEMP.	温度传感器	AR	
4-60000H882-00	TH-02582	DRAINMAST	排水桅杆	AR	SV
4-60000H882-00	98259	DRAINMAST	排水桅杆	AR	SV
87232324V00	1028	SKINTEMPERATURESENSOR	蒙皮温度传感器	AR	
HTE690047	38090443	SWITCHPRESS. HOTAIR	压力电门	AR	
VD3900-03	98061288	FAN, RECIRCULATION	再循环风扇	AR	SV
VD3900-03	97061142	FAN, RECIRCULATION	再循环风扇	AR	SV
31073-110	13417	AILERONSERVOCONTROL	副翼伺服控制器	AR	SV
31073-110	3760	AILERONSERVOCONTROL	副翼伺服控制器	AR	SV
31073-110	13097	AILERONSERVOCONTROL	副翼伺服控制器	AR	SV
31073-110	9066	AILERONSERVOCONTROL	副翼伺服控制器	AR	SV
31077-111	7653	SPOILERSERVOCONTROL	扰流板伺服控制器	AR	
31077-111	7650	SPOILERSERVOCONTROL	扰流板伺服控制器	AR	
31077-111	7648	SPOILERSERVOCONTROL	扰流板伺服控制器	AR	
31077-111	7647	SPOILERSERVOCONTROL	扰流板伺服控制器	AR	
31077-111	7651	SPOILERSERVOCONTROL	扰流板伺服控制器	AR	
31077-111	7646	SPOILERSERVOCONTROL	扰流板伺服控制器	AR	
31077-111	7652	SPOILERSERVOCONTROL	扰流板伺服控制器	AR	
31077-111	7645	SPOILERSERVOCONTROL	扰流板伺服控制器	AR	
31077-111	7654	SPOILERSERVOCONTROL	扰流板伺服控制器	AR	
31077-111	7649	SPOILERSERVOCONTROL	扰流板伺服控制器	AR	
963B0000-01	02269	VALVE, TRIMAIR	配平空气活门	AR	
963A0000-02	02979	VALVE, TRIMAIR	配平空气活门	AR	SV
1320A0000-02	1320-3113	VALVE, TRIMAIR	配平空气活门	AR	
736A0000-02	04218	SENSOR, MIX. TEMP.	温度传感器	AR	
15800-348A	97078087	RINSEVALVE	冲洗活门	AR	

15800-348A	96126887	RINSEVALVE	冲洗活门	AR	
15800-348A	97088321	RINSEVALVE	冲洗活门	AR	
14330-050	12664	FLUSHVALVEASSY.	冲洗活门组件	AR	SV
14330-050	7008	FLUSHVALVEASSY.	冲洗活门组件	AR	SV
14330-050	7459	FLUSHVALVEASSY.	冲洗活门组件	AR	SV
769B0000-01	01958	CHECKVALVE	单向活门	AR	
769B0000-01	01979	CHECKVALVE	单向活门	AR	
810A0000-05	05086	RUDDERSERVOCONTROL	方向舵伺服控制器	AR	SV
810A0000-05	00514	RUDDERSERVOCONTROL	方向舵伺服控制器	AR	SV
810A0000-05	03442	RUDDERSERVOCONTROL	方向舵伺服控制器	AR	SV
6610-20560-01	128	ACTUATOR, ROTARY	作动器	AR	SV
87232323V00	VL2064003	SENSOR-DUCTTEMPERATURESPI	管道温度传感器	AR	
736A0000-02	04291	SENSOR, MIX. TEMP.	温度传感器	AR	
1209-100	3045	PRESSURESWITCH	压力电门	AR	SV
1209-100	3042	PRESSURESWITCH	压力电门	AR	SV
1209-100	34793	PRESSURESWITCH	压力电门	AR	SV
L95F100-603	31103	FUELTKOVERPRESSUREPROTECT	油箱燃油超压保护	AR	
L95F100-603	31104	FUELTKOVERPRESSUREPROTECT	油箱燃油超压保护	AR	
24E507009G03	N1711029	HEATER-WATER	热水器	AR	SV
24E507009G03	N0729203	HEATER, WATER	热水器	AR	SV
24E507009G03	UJW03727	HEATER, WATER	热水器	AR	SV
74-20	22630	FIREEXTINGUISHER	灭火器	AR	SV
74-20	B25314	FIREEXTINGUISHER	灭火器	AR	SV
600615-00-503	20618	FIREEXTINGUISHER	货舱通风控制器	AR	SV
746A0000-06	746-11992	VALVE, TRIMAIRPRESS.	配平空气压力活门	AR	SV
BA21758	13503	LAVATORYFIRE-EXTINGUISHER	厕所灭火瓶	AR	
BA24320A-1	46080	LAVATORYFIRE-EXTINGUISHER	厕所灭火瓶	AR	SV
BA21758	13543	LAVATORYFIRE-EXTINGUISHER	厕所灭火瓶	AR	
FRH280002	FR035AY	AIRRELEASEVALVE	放气活门	AR	SV
FRH280002	32020406	AIRRELEASEVALVE	放气活门	AR	SV
796815-02-03	3693	REFUELPRESELECTOR	燃油预选面板	AR	
1407KID-02-03	AS3057	REFUELMULTITANKINDICATOR	燃油指示面板	AR	
HTE190001-2	M133GB598	TWINMOTORACTUATOR	作动器	AR	SV
828A0000-02	U3722	BEVELGEARBOX63, 5DEG	齿轮箱	AR	
828A0000-02	U3721	BEVELGEARBOX63, 5DEG	齿轮箱	AR	
208724-0	2027	EMERGENCYESCAPEROPE	逃生绳	AR	
208724-0	2026	EMERGENCYESCAPEROPE	逃生绳	AR	
642-3802-517	2183001	THRUSTREVERSER	反推	AR	
642-3801-515	2182001	THRUSTREVERSER	反推	AR	
642-3801-515	2184001	THRUSTREVERSER	反推	AR	
642-3802-517	2185001	THRUSTREVERSER	反推	AR	
2510154-01-00	807	4TH. OCCUPANTSEAT	第四观察员座椅	AR	
D30665-709	C0849	SLIDE	滑梯	AR	SV
D30665-709	M9812	SLIDE	滑梯	AR	SV
D30664-709	M11557	SLIDE	滑梯	AR	SV
R0425A111	TAE6A004	LIFERAFT	救生筏	AR	
114122014	CH1302510	DOORACTUATOR, MLG	主起舱门作动筒	AR	SV
114122014	CH1302509	DOORACTUATOR, MLG	主起舱门作动筒	AR	SV
D31865-112	A156762	OFF-WINGSLIDE	翼上滑梯	AR	SV
D31865-111	A155839	OFF-WINGSLIDE	翼上滑梯	AR	SV
321-400-707-0	4200	COWLOPENACT	反推打开作动筒	AR	SV

321-400-707-0	4207	COWLOPENACT	反推打开作动筒	AR	SV
321-400-707-0	4206	COWLOPENACT	反推打开作动筒	AR	SV
321-400-707-0	4201	COWLOPENACT	反推打开作动筒	AR	SV
114160005	HAI-0370	JACKEJECTION	弹出作动筒	AR	
1330622V01	01T1782	3RD. OCCUPANTSEAT	第三观察员座椅	AR	
3552AAADAACXCD	P17071843	PORTABLEOXYGENCYL.	便携式氧气瓶	AR	
9700C1AF23AN	684583	PORTABLEOXYGENCYL.	便携式氧气瓶	AR	
9700C1AF23AN	ST33740	PORTABLEOXYGENCYL.	便携式氧气瓶	AR	
9700C1AF23AN	694393	PORTABLEOXYGENCYL.	便携式氧气瓶	AR	
9700C1AF23AN	P07051970	PORTABLEOXYGENCYL.	便携式氧气瓶	AR	
9700C1AF23AN	P07031205	PORTABLEOXYGENCYL.	便携式氧气瓶	AR	
A25315-1	H2362	PARKINGBRAKEVALVE	停留刹车活门	AR	
ZCV63-6	80129167	CHECKVALVE	单向活门	AR	
QA05797	RG42540	FILTER, HYD. HP	油滤	AR	
682007004	UEDH353	RATCONTROLPANEL	冲压空气涡轮控制	AR	
ZCV63-6	8012968	CHECKVALVE	单向活门	AR	
60592-201	A16582	RESERVOIRASSY	翼上滑梯气瓶	AR	SV
680203037A	297	RAMAIRTURBINE	冲压空气涡轮	AR	SV
933260	F9829764	PUMP	泵	AR	
D323-70101-000-00	569	VERTEILERBLOCK	安全活门总管	AR	
762080-1	H-0635	SAFETYVALVEL. G. S.	安全活门	AR	SV
762080-1	H-0625	SAFETYVALVEL. G. S.	安全活门	AR	SV
642-2300-9	P1037	AFTENGMOUNT	发动机后吊点	AR	
642-2300-9	P880	AFTENGMOUNT	发动机后吊点	AR	
642-2000-15	P2881	FWDENGMOUNT	发动机前吊点	AR	SV
642-2000-15	P1849	FWDENGMOUNT	发动机前吊点	AR	SV
342B050000	18694	THERMOSTAT-CONTROL	恒温控制器	AR	SV
342B050000	12844	THERMOSTAT-CONTROL	恒温控制器	AR	SV
341E030000	05131	THERMOSTAT-SOLENOID	恒温电磁阀	AR	SV
341E030000	03277	THERMOSTAT-SOLENOID	恒温电磁阀	AR	SV
6740E010000	00224	OVERPRESSUREVALVE	过压活门	AR	
6740E010000	01044	OVERPRESSUREVALVE	过压活门	AR	
780B0000-01	0780B00L	COMMANDSENSORUNIT	指令传感组件	AR	SV
716TS06Y	368	NW. STRG. HANDWHEELXMTR. UN	前轮转弯手轮	AR	
322200-7M00	AC02740	NW. STRG. HANDWHEELXMTR. UN	前轮转弯手轮	AR	
215TS07Y00	4997	LANDINGGEARCONTROLLEVER	起落架控制手柄	AR	
HTE420044	FR115BA	PRESSUREHOLDINGVALVE	稳压阀	AR	
HTE420044	FR112BA	PRESSUREHOLDINGVALVE	稳压阀	AR	
64882-206-1	7241	BRAKEPRESSUREINDICATOR	刹车压力指示	AR	SV
321200M02	1139	SPD. BRK. CTL. TRANSDUCERUN	速度刹车控制传感	AR	SV
Z212H0001110	02706	CONTROLUNIT	控制组件	AR	
Z220H0002110	02320	CONTROLUNIT	控制组件	AR	
6-1404-0000-4	970218	HYDRAULICHANDPUMP	手摇泵	AR	SV
6-1404-0000-4	980106	HYDRAULICHANDPUMP	手摇泵	AR	SV
748A0000-08	02047	ANTI-ICEVALVE	防冰活门	AR	
748A0000-08	02044	ANTI-ICEVALVE	防冰活门	AR	
L95F50-603	22619	FUELTKOVERPRESSUREPROTECT	油箱燃油超压保护	AR	SV
L95F50-603	22618	FUELTKOVERPRESSUREPROTECT	油箱燃油超压保护	AR	SV
HTE900118-001	FRTR186A	LOWPRESSUREFUELVALVE	低压燃油活门	AR	SV
HTE900118-001	27110482	LOWPRESSUREFUELVALVE	低压燃油活门	AR	SV
HTE190001-2	M118GB898	TWINMOTORACTUATOR	作动器	AR	SV

HTE190001-2	20126057	TWINMOTORACTUATOR	作动器	AR	SV
L83A13-617	20442	LEAK-MONITOR	渗漏检测	AR	
C24703003-1	H2490	PARKBRAKESELECTORVALVE	停留刹车选择活门	AR	
A25434006-3000	H3034	EMER. BRK. DUALDISTR. VALVE	应急刹车双向活门	AR	
114161003	CWDD-DH2	MODULE-JACKCONTROL	作动筒控制模块	AR	
6730C010000	03221	FANAIRVALVE	风扇空气活门	AR	
6730C010000	03885	FANAIRVALVE	风扇空气活门	AR	
11-851154-5	01752	PRECOOLEREXCHANGER	预冷器	AR	
11-851154-6	02140	PRECOOLEREXCHANGER	预冷器	AR	
864-001	0443	LIGHTEDVISUALICINGINDICAT	结冰探测器	AR	
9615325070	3219	DISPLAYMANAGEMENTCOMPUTE	显示管理计算机	AR	
9615325070	4939	DISPLAYMANAGEMENTCOMPUTE	显示管理计算机	AR	
350E053021818	0E0014049	FLIGHTWARNINGCOMPUTER	飞行警告计算机	AR	SV
350E053021818	0E0012102	FLIGHTWARNINGCOMPUTER	飞行警告计算机	AR	SV
49-170-11	04992	SL/FL. CONTROLCOMPUT.	缝翼襟翼控制计算	AR	SV
B401ACM0507	Q00149001	CFDIU	中央故障显示接口	AR	
9615325070	998256007	DISPLAYMANAGEMENTCOMPUTE	显示管理计算机	AR	
350E5151331	0E5002232	SDAC	系统数据获取集中	AR	
350E5151331	1791	SDAC	系统数据获取集中	AR	
HG2030AE23	56017622	ADIRU	大气数据惯性基准	AR	
Z010H0005118	02680	CIDSDIRECTOR	客舱内部通讯数据	AR	
2243800-364	RA08813	WIRELESSQUICKACCESSRECORI	数据存取记录器	AR	SV
Z010H0005119	03048	CIDSDIRECTOR	客舱内部通讯数据	AR	
87292325V07	VL2062007	AVNCSEQPTVENTCOMPUTER	电子舱设备通风计	AR	
RD-AX7271	300357	REPRODUCER-PRERECORDED	通告音乐收发器	AR	
3957985114	Q05720005	ENGINEINTERFACEUNIT	发动机接口组件	AR	
910030-5086	2024	DIU	数字接口组件	AR	
RD-AX7095-01	105030	REPRODUCER	播放机	AR	
49-170-11	49-170BAC	SL/FL. CONTROLCOMPUT.	缝翼襟翼控制计算	AR	SV
3957985114	2281	ENGINEINTERFACEUNIT	发动机接口组件	AR	
710100-2	4V5RF	IRIDIUMCOMMUNICATIONSYST	铱星通信系统	AR	
RD-AX1301-20	100213	MAINMULTIPLEXER	多路传输器	AR	
965-1676-003	EMK5-3350	GPWC, GROUND PROXIMITY WA	近地警告计算机	AR	SV
241-246-022-004	0324	ENGVIBMONITORINGUNIT	发动机喘振监控组	AR	
7530334	20484	SELECTOR, TEMP.	温度选择旋钮	AR	
520913	F9829481	CONST. SPEEDMOTOR/GENERATC	恒速发电机	AR	SV
34100005-1	81386D1	ENGINEFIREEXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1148TJ	CARTRIDGE	爆炸帽	AR	SV
34100005-1	79299D1	ENGINEFIREEXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1156TJ	CARTRIDGE	爆炸帽	AR	SV
34100005-1	81378D1	ENGINEFIREEXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1139TJ	CARTRIDGE	爆炸帽	AR	SV
34100005-1	79303D1	ENGINEFIREEXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1147TJ	CARTRIDGE	爆炸帽	AR	SV
QA05877	RG44796	VALVERESTRICT. BLEED	引气限制活门	AR	
14330-144	918	FLUSHCONTROLUNIT	冲洗控制组件	AR	
14330-144	2572	FLUSHCONTROLUNIT	冲洗控制组件	AR	
14330-144	4560	FLUSHCONTROLUNIT	冲洗控制组件	AR	
P99C38-601	20063	FUELPUMP	燃油泵	AR	
P99C38-601	20065	FUELPUMP	燃油泵	AR	
P99C38-601	20128	FUELPUMP	燃油泵	AR	

P99C38-601	20064	FUELPUMP	燃油泵	AR	
L83A13-614	24315	VALVE-DRAIN, WATER	排水活门	AR	
L83A13-614	24316	VALVE-DRAIN, WATER	排水活门	AR	
773A0000-01	06702	SENSOR, TEMP.	温度传感器	AR	
773A0000-01	28349	SENSOR, TEMP.	温度传感器	AR	
5039-200	1636	RAINREPELLENTGAGEASSY	排雨剂量表组件	AR	
C24739001	H1122	MANIFOLD (ALTNBRKSV) B	备用刹车伺服总管	AR	
C24740001	H1189	MANIFOLD (ALTNBRKSV) B	备用刹车伺服总管	AR	
C51LM0020	2497	VALVE, 4/4WAY-	活门	AR	
C82LL0010	3363	DRAINVALVE	排放活门	AR	SV
A25316-101	H1966	DUALSHUTTLEVALVE	双往复活门	AR	
D290-70172-000-00	916	MANIFOLD	总管	AR	
A25313002	H2948	SELECTOR	选择器	AR	
BHC1060-04	15284	VALVEPRIORITY	优先活门	AR	SV
ZCV64-10	80311937	CHECKVALVE	单向活门	AR	
S4-3400920-03	02400	VALVE, 2/2WAY-	活门	AR	
D9550001801700	FR1897	SIDESTICK	侧杆	AR	
321000M03	5558	SIDESTICKTRANSDUCERUNIT	侧杆传感器组件	AR	SV
321000M03	5559	SIDESTICKTRANSDUCERUNIT	侧杆传感器组件	AR	SV
D9550001901700	FR1897	SIDESTICK	侧杆	AR	
321000M03	4026	SIDESTICKTRANSDUCERUNIT	侧杆传感器组件	AR	SV
321000M03	4037	SIDESTICKTRANSDUCERUNIT	侧杆传感器组件	AR	SV
2403-89	240389-17	VHFANTENNA	甚高频天线	AR	SV
MF10-05-11	103654	CREWOXYGENMASK	机组氧气面罩	AR	SV
MF10-05-11	91644	CREWOXYGENMASK	机组氧气面罩	AR	SV
MF10-05-11	59695	CREWOXYGENMASK	机组氧气面罩	AR	SV
MF10-05-11	106177	CREWOXYGENMASK	机组氧气面罩	AR	SV
899-0850-004	Q09245006	RADIOMANAGEMENTPANEL	无线电管理面板	AR	SV
35-0L0-1003-06	0L0009028	ECAMCONTROLPANEL	控制面板	AR	
01N65920	12517644	LOCATORTRANSMITTER	定位发射机	AR	SV
2LA005543-10	382260	CAPTAINFLOODLIGHTUNIT	泛光灯组件	AR	
2LA005541-10	396360	FLOODLIGHTUNIT-CAPTAIN	泛光灯组件	AR	
ST3100-23-10	1843	HANDSET	电话	AR	
93-A150-20	01160	PREAMPLIFIERMODULE	前置放大器模块	AR	
RD-AV3001-33	100211	CONTROLUNIT-SYSTEM, VIDEO	视频系统控制组件	AR	
5XA005033-00	1574	CONTROLLER-LIGHTING	灯光控制器	AR	
5XA005033-00	2089	CONTROLLER-LIGHTING	灯光控制器	AR	
3107-89	1708	MARKERANTENNA	信标天线	AR	
4279204	100772	MOTORCONVERTER	雨刷电机转换器	AR	SV
4279198	29193	MOTORCONVERTER	雨刷电机转换器	AR	SV
FRH100013A	Q0711121	APUFUELPRESS. SWITCH	APU燃油压力电门	AR	
342300M01	4544	TRANSDUCERUNIT	传感器组件	AR	
342300M01	4524	TRANSDUCERUNIT	传感器组件	AR	
9599-607-12352	54742	RADIOALTIMETERANTENNA	无线电高度天线	AR	SV
9599-607-12352	54746	RADIOALTIMETERANTENNA	无线电高度天线	AR	SV
9599-607-12352	54736	RADIOALTIMETERANTENNA	无线电高度天线	AR	SV
9599-607-12352	6432	RADIOALTIMETERANTENNA	无线电高度天线	AR	SV
528-80	1889	WINGTIPNAVIGATIONLIGHT	翼尖导航灯	AR	
528-70	1844	WINGTIPNAVIGATIONLIGHT	翼尖导航灯	AR	SV
HTE200002-1	14146452	FUELTRANSFERVALVEACTUATOR	作动器	AR	SV
HTE200002-1	M384GB698	FUELTRANSFERVALVEACTUATOR	作动器	AR	SV

2LA005308-05	5689	WINGSTROBELIGHT	大翼频闪灯	AR	SV
2LA005308-05	6214	WINGSTROBELIGHT	大翼频闪灯	AR	SV
B27000	958	LPFUELSOVALPU	APU低压燃油活门作	AR	
C12CB0010	1060	PUMP, FUEL	燃油泵	AR	
9028A0004-01	07036	POS. PICKOFFUNIT	位置传感器	AR	
9028A0004-01	08012	POS. PICKOFFUNIT	位置传感器	AR	
ZCV63-8	80515546	CHECKVALVE	单向活门	AR	
ZCV63-6	80501101	CHECKVALVE	单向活门	AR	
ZCV63-6	80501102	CHECKVALVE	单向活门	AR	
ZCV63-6	8050197	CHECKVALVE	单向活门	AR	
ZCV63-6	80416209	CHECKVALVE	单向活门	AR	
ZCV63-6	80501100	CHECKVALVE	单向活门	AR	
ZCV63-8	80515545	CHECKVALVE	单向活门	AR	
ZCV63-8	80331768	CHECKVALVE	单向活门	AR	
793A0000-07	U1992	ACTUATOR-FLAP, NO. 3	襟翼作动器	AR	
793A0000-07	U1991	ACTUATOR-FLAP, NO. 3	襟翼作动器	AR	
794A0000-06	U1996	ACTUATOR-FLAP, NO. 4	襟翼作动器	AR	
794A0000-06	U1995	ACTUATOR-FLAP, NO. 4	襟翼作动器	AR	
792A0000-07	U1996	ACTUATOR-FLAP, NO. 2	襟翼作动器	AR	
792A0000-07	U1997	ACTUATOR-FLAP, NO. 2	襟翼作动器	AR	
791A0000-06	U2000	ACTUATOR-FLAP, NO. 1	襟翼作动器	AR	
791A0000-06	U2003	ACTUATOR-FLAP, NO. 1	襟翼作动器	AR	
PPA1202-00	9244	SMOKEDETECTOR	烟雾探测器	AR	
PPA1202-00	9462	SMOKEDETECTOR	烟雾探测器	AR	
PPA1202-00	10288	SMOKEDETECTOR	烟雾探测器	AR	
0727540	C110794	CAP-COUPLING, REFUEL	加油口盖	AR	
CG1151AC03	0940	ADIRS-CDU	大气数据惯导基准	AR	
C19266EA01	C1926601	MCDU	多功能控制显示组	AR	SV
C19266EA01	C19266013	MCDU	多功能控制显示组	AR	SV
ACP2788AB04	2788-7006	AUDIOCONTROLPANEL	音频控制面板	AR	SV
2598D	4609	LIGHTTRANSFORMER	灯光变压器	AR	
2598D	4624	LIGHTTRANSFORMER	灯光变压器	AR	
C12404AB02	C12404008	ATC/TCASCONTROLUNIT	控制组件	AR	
AR4709-1	N-C0880	COCKPITSYSTEMCONTROLLER	驾驶舱门控制器	AR	
Z020H0001112	020H00002	PROGRAMA. TESTPANEL	客舱内话程序和测	AR	
Z050H6045070	Z050H6000	CABINASSIGNM. MODULE	客舱分配组件	AR	
3214-54-10	3172	EMERG. POWERSUPPLY	应急电源供给组件	AR	
3214-54-10	1359	EMERG. POWERSUPPLY	应急电源供给组件	AR	
3214-54-10	1322	EMERG. POWERSUPPLY	应急电源供给组件	AR	
Z111H0033151	06778	AIP	乘务员指示面板	AR	
Z111H0033151	07095	AIP	乘务员指示面板	AR	
Z111H0033151	07096	AIP	乘务员指示面板	AR	
35-0D5-1003	0D5002245	COCKPITLOUDSPEAKERAMPLI	驾驶舱扬声器	AR	SV
35-0D5-1003	0D5002242	COCKPITLOUDSPEAKERAMPLI	驾驶舱扬声器	AR	SV
5XA005032-01	1122	CONTROLLER-LIGHTING	灯光控制器	AR	
792-6140-001	12769	HF-ANTENNA COUPLER	高频天线耦合器	AR	
792-6140-001	12776	HF-ANTENNA COUPLER	高频天线耦合器	AR	
831A0000-05	03821	WINGTIPBRAKE	翼尖刹车	AR	
831A0000-05	03819	WINGTIPBRAKE	翼尖刹车	AR	
RCF6708	8287	REGULATOR TRANSMITTER	氧气压力调节器	AR	SV
89794077	C19040157	OXYGEN CYLINDER ASSY	氧气瓶	AR	

ST3100-23-10	1600	HANDSET	电话	AR	
ST3100-23-10	1702	HANDSET	电话	AR	
PG1152AC03	98046234	AIRDATAMODULE	大气数据模块	AR	
PG1152AC03	98046235	AIRDATAMODULE	大气数据模块	AR	
PG1152AC03	98046231	AIRDATAMODULE	大气数据模块	AR	
PG1152AC03	98046253	AIRDATAMODULE	大气数据模块	AR	
PG1152AC03	98046239	AIRDATAMODULE	大气数据模块	AR	
PG1152AC03	98046242	AIRDATAMODULE	大气数据模块	AR	
PG1152AC03	98046265	AIRDATAMODULE	大气数据模块	AR	
PG1152AC03	97071235	AIRDATAMODULE	大气数据模块	AR	
74-20	22627	FIREEXTINGUISHER	灭火器	AR	SV
0074-20	7889	FIREEXTINGUISHER	灭火器	AR	
K217ABM11	1528	FLIGHTCONTROLUNIT	飞行控制组件	AR	SV
4236534	75605	RUNWAYTURNOFFLIGHT	转弯灯	AR	
4236534	75166	RUNWAYTURNOFFLIGHT	转弯灯	AR	
2LA005542-20	1152	FLOODLIGHTCENTER	泛光灯组件	AR	
1663214301	B2986	PROBESHEATCOMPUTER	探头加热计算机	AR	SV
1663214301	B6326	PROBESHEATCOMPUTER	探头加热计算机	AR	SV
C16291AB	Q06747050	ANGLEOFATTACKSENSOR	迎角传感器	AR	SV
C16291AB	Q06747050	ANGLEOFATTACKSENSOR	迎角传感器	AR	SV
0861ED	0861ED-46	ANGLEOFATTACKSENSOR	迎角传感器	AR	SV
PPA1104-01	01456	CARGOCOMPARTMENTSMOKEDETE	货仓烟雾探测器	AR	
PPA1104-01	01627	CARGOCOMPARTMENTSMOKEDETE	货仓烟雾探测器	AR	
0851HL	328861	PITOTUBE	皮托管	AR	SV
3720-00-00	ME2781	FIREDETECTIONUNIT	火警探测组件	AR	
7304-01-02	7599	FIREDETECTIONUNIT	火警探测组件	AR	
7304-01-02	8903	FIREDETECTIONUNIT	火警探测组件	AR	
416-00318-003	416003180	WINDOWHEATCOMPUTER	风挡加温计算机	AR	
416-00318-003	416003180	WINDOWHEATCOMPUTER	风挡加温计算机	AR	
8ES455012-00	618	POWERSUPPLYUNIT	电源供给组件	AR	SV
ACP2788AB04	5755	AUDIOCONTROLPANEL	音频管理组件	AR	SV
ACP2788AB05	2788-1501	AUDIOCONTROLPANEL	音频管理组件	AR	SV
899-0850-004	5138	RADIOMANAGEMENTPANEL	无线电管理面板	AR	SV
899-0850-004	5335	RADIOMANAGEMENTPANEL	无线电管理面板	AR	SV
622-5130-021	3300	WEATHERRADARDUALCTLUNIT	控制面板	AR	
913004	1742	CABINCONTROLUNIT	客舱控制组件	AR	
Z120H0040110	01105	AAP-ADDITIONALATTENDANTPA	乘务员面板	AR	
S1821502-02	LX1100034	FIXEDELTA	固定应急定位器	AR	SV
D23119751	B4519	NLGELECTRICALBOX	电子盒	AR	SV
CMK80-01	2214	PRESSURESWITCH	压力电门	AR	
558CA01Y1	5891	260ATHREEPOLECONTACTOR	接触器	AR	
558CA01Y1	5895	260ATHREEPOLECONTACTOR	接触器	AR	
558CA01Y1	5892	260ATHREEPOLECONTACTOR	接触器	AR	
558CA01Y1	5893	260ATHREEPOLECONTACTOR	接触器	AR	
558CA01Y1	5896	260ATHREEPOLECONTACTOR	接触器	AR	
558CA01Y1	5894	260ATHREEPOLECONTACTOR	接触器	AR	
DVE90-06	2023	LPSOLENIDSUPPLYVALVE	低压电磁阀供给活	AR	
8000282Y00	434	TAXILIGHT	滑行灯	AR	
1X2005012-00	2678	LIGHT-CARGOLOADINGAREA	货仓装载灯	AR	
ZCV63-6	8050199	CHECKVALVE	单向活门	AR	
ZCV63-6	8050198	CHECKVALVE	单向活门	AR	

ZCV63-6	80501104	CHECKVALVE	单向活门	AR	
ZCV63-6	80501103	CHECKVALVE	单向活门	AR	
64161-234-1	1623	METRICALTIMETER	高度表	AR	
64141-580-1	Q09163006	STANDBYALTIMETER	备用高度表	AR	SV
64050-866-1	4450	STANDBYAIRSPEEDINDICATOR	备用空速表	AR	SV
63543-150-5	3245	RMIVOR/DMEDDRMI	无线电磁指示器	AR	
8410B5-4-90	8410B5-13	CAMERA	摄像头	AR	
8410B2-4-90	8410B2-33	CAMERA	摄像头	AR	SV
8410B1-101-105	8410B1-43	CAMERA	摄像头	AR	
196PN01Y02	1862	RUDDERTRIMINDICATOR	方向舵配平指示器	AR	
27-457	1454	RUDDERTRIMCONTROL SWITCH	方向舵配平控制电	AR	
2610-13-1	283	CLOCK	时钟	AR	
C-5K	98041276	STANDBYCOMPASS	备用磁罗盘	AR	
H321BHM1	13382	STANDBYHORIZON	备用地平仪	AR	SV
4315542	82110	LANDINGLIGHT	着陆灯	AR	SV
4315542	104029	LANDINGLIGHT	着陆灯	AR	SV
829B0000-01	03795	ACTUATORA-SLAT	缝翼作动器	AR	
829B0000-01	03693	ACTUATORA-SLAT	缝翼作动器	AR	
829B0000-01	03793	ACTUATORA-SLAT	缝翼作动器	AR	
829B0000-01	03792	ACTUATORA-SLAT	缝翼作动器	AR	
830A0000-04	14666	ACTUATORB-SLAT	缝翼作动器	AR	
830A0000-04	14660	ACTUATORB-SLAT	缝翼作动器	AR	
830A0000-04	14662	ACTUATORB-SLAT	缝翼作动器	AR	
830A0000-04	14665	ACTUATORB-SLAT	缝翼作动器	AR	
830A0000-04	14652	ACTUATORB-SLAT	缝翼作动器	AR	
830A0000-04	14658	ACTUATORB-SLAT	缝翼作动器	AR	
830A0000-04	14663	ACTUATORB-SLAT	缝翼作动器	AR	
830A0000-04	14687	ACTUATORB-SLAT	缝翼作动器	AR	
830A0000-04	14651	ACTUATORB-SLAT	缝翼作动器	AR	
830A0000-04	14657	ACTUATORB-SLAT	缝翼作动器	AR	
830A0000-04	14661	ACTUATORB-SLAT	缝翼作动器	AR	
830A0000-04	14655	ACTUATORB-SLAT	缝翼作动器	AR	
830A0000-04	14659	ACTUATORB-SLAT	缝翼作动器	AR	
830A0000-04	14664	ACTUATORB-SLAT	缝翼作动器	AR	
830A0000-04	14654	ACTUATORB-SLAT	缝翼作动器	AR	
830A0000-04	14653	ACTUATORB-SLAT	缝翼作动器	AR	
206PN01	1179	DC. VOLTMETER	电压表	AR	
206PN01	1180	DC. VOLTMETER	电压表	AR	
9027-20010	9840669	SELECTOR, LDG. FIELDEL	选择器	AR	SV
777A0000-01	04226	SELECTOR, TEMP.	温度选择器	AR	
777A0000-01	04233	SELECTOR, TEMP.	温度选择器	AR	
777A0000-01	04245	SELECTOR, TEMP.	温度选择器	AR	
330TS08Y	605	FIREPANELENGINEAPU	发动机APU火警面板	AR	
9028A0004-01	08010	POS. PICKOFFUNIT	位置传感器	AR	
9028A0004-01	08013	POS. PICKOFFUNIT	位置传感器	AR	
521A0200-01	03458	ADAPTERPPU-ASSY	适配器	AR	
521A0200-01	03460	ADAPTERPPU-ASSY	适配器	AR	
Z130H0096110	01127	FAP-FORWARDATTENDANTPANEL	客舱内话乘务员面	AR	
12664	9814753	CHECKVALVE	单向活门	AR	
12664	9814733	CHECKVALVE	单向活门	AR	
12664	9814754	CHECKVALVE	单向活门	AR	

D05000	1624	VALVE-FILLANDDRAIN	加放水活门	AR	SV
D05000	2170	VALVE-FILLANDDRAIN	加放水活门	AR	SV
D05A00	5537	VALVE-FILLANDDRAIN	加放水活门	AR	
600612-00-510	20862	SENSOR, DUCT. TEMP.	管道温度传感器	AR	
600612-00-510	12103726	SENSOR, DUCT. TEMP.	管道温度传感器	AR	
9104A0006-01	061	PRESSURESENSORSIMPR	压力传感器	AR	
J172ABM	9480	ACCELEROMETER	加速计	AR	
J172ABM	9419	ACCELEROMETER	加速计	AR	
J172ABM	9478	ACCELEROMETER	加速计	AR	
J172ABM01	J172AB034	ACCELEROMETER	加速计	AR	
9104A0006-01	059	PRESSURESENSORSIMPR	压力传感器	AR	
972C10-1	J13807	VALVE-SHUTTLE	往复活门	AR	
9106A0005-01	0034	PRESSURESENSORSIMPR	压力传感器	AR	
9106A0005-02	03117	PRESSURESENSORSIMPR	压力传感器	AR	
986F12-1	1931	CHECKVALVE, PRESS. SER	单向活门	AR	
986F12-1	1927	CHECKVALVE, PRESS. SER	单向活门	AR	
VT442-2	0784	WATERQUANTITYINDICATOR	水量表	AR	
14403-085	0142	LIQUIDLEVELTRANSMITTER	水量传感器	AR	SV
9024-15704-03	14115438	SATETY-VALVE	安全活门	AR	
9024-15704-03	14115439	SATETY-VALVE	安全活门	AR	
330400M01	1777	THROTTLECONTROLUNIT	油门控制组件	AR	
330400M01	AG07823	THROTTLECONTROLUNIT	油门控制组件	AR	
HTE510005-1	FR156BA	PRESSUREREDUCINGVALVE	减压活门	AR	
1298A0000-01	00925	VALVE, CHECKTRIMAIR	配平空气单向活门	AR	SV
1298A0000-01	05853	VALVE, CHECKTRIMAIR	配平空气单向活门	AR	SV
4063-16082-3	1315611	CROSSBLEEDVALVE	活门	AR	SV
V2T127B	274	AIRBUTTERFLYVALVE	蝶形活门	AR	
C93R38-601	20008	FUELPUMPCANISTER	燃油泵保护罩	AR	
C93R38-601	20013	FUELPUMPCANISTER	燃油泵保护罩	AR	
C93R38-606	20228	FUELPUMPCANISTER	燃油泵保护罩	AR	
C93R38-606	20232	FUELPUMPCANISTER	燃油泵保护罩	AR	
ZCV64-12	8020658	CHRCKVALVE	单向活门	AR	
ZCV64-10	8020962	CHRCKVALVE	单向活门	AR	
ZCV63-6	8012937	CHRCKVALVE	单向活门	AR	
ZCV63-6	8012979	CHRCKVALVE	单向活门	AR	
70200	3632	VALVE, 2/2WAY	活门	AR	
70200	3683	VALVE, 2/2WAY	活门	AR	
70200	3699	VALVE, 2/2WAY	活门	AR	
828A0000-02	U3724	BEVELGEARBOX63, 5DEG	齿轮箱	AR	
114087007	SA0701109	DOORBY-PASSVALVE, MLG	旁通活门	AR	
HTE900087-001	FRTR244AV	FUELTRANSFERVALVE	燃油传输活门	AR	
HTE900087-001	FRTR246AV	FUELTRANSFERVALVE	燃油传输活门	AR	
HTE900087-001	FRTR248AV	FUELTRANSFERVALVE	燃油传输活门	AR	
HTE900087-001	FRTR250AV	FUELTRANSFERVALVE	燃油传输活门	AR	
C93R38-606	20229	FUELPUMPCANISTER	燃油泵保护罩	AR	
C93R38-606	20233	FUELPUMPCANISTER	燃油泵保护罩	AR	
796-809-6A	2480	FUELCADENSICON	密度计	AR	SV
796-809-6A	2618	FUELCADENSICON	密度计	AR	SV
796-809-6A	3686	FUELCADENSICON	密度计	AR	SV
9811839	FRTR269AV	CHECKVALVE	单向活门	AR	
9811839	FRTR268AV	CHECKVALVE	单向活门	AR	

9811839	FRTR267A	CHECKVALVE	单向活门	AR	
9811839	FRTR265A	CHECKVALVE	单向活门	AR	
9811839	FRTR270A	CHECKVALVE	单向活门	AR	
9811839	FRTR266A	CHECKVALVE	单向活门	AR	
HTE310021	FR120BA	AIRINLETVALVE	进气活门	AR	
1158000-21	FRTR221A	REFUELVALVE	加油活门	AR	SV
1158000-21	FRTR178A	REFUELVALVE	加油活门	AR	SV
1158000-21	FRTR112A	REFUELVALVE	加油活门	AR	SV
9815715	FRTR029A	RELIEFVALVE	释压活门	AR	
C49AA0221	913	CANISTER, PUMPFUEL	烟油保护罩	AR	
P99C38-601	20053	FUELPUMP-TANK	燃油泵	AR	
P99C38-601	20050	FUELPUMP-TANK	燃油泵	AR	
HTE900133	FRTR006A	FUELDEFUEL/TRANSFERVALVE	球形活门	AR	
HTE900135	FRTR009A	FUELTRANSFERVALVE	球形活门	AR	
788A0000-02	U1884	RIGHTANGLEGEARBOX	齿轮箱	AR	
L83A13-614	24007	VALVE-DRAIN, WATER	排水活门	AR	
L83A13-614	24010	VALVE-DRAIN, WATER	排水活门	AR	
773A0000-01	06804	SENSOR, TEMP.	温度传感器	AR	
D2907017500200	2166	HP-MANIFOLD	总管	AR	
BHC1060-04	12851	VALVEPRIORITY	优先活门	AR	SV
1396B0000-01	00601	VALVE, 2/2WAY-	活门	AR	SV
ZCV64-12	80413461	CHECKVALVE	单向活门	AR	
ZCV67-1	16-102567	CHECKVALVE	单向活门	AR	
789A0000-02	U1843	LINEGEARBOX	齿轮箱	AR	
789A0000-02	U1844	LINEGEARBOX	齿轮箱	AR	
12432-2	9814534	VALVE, ISOLATION	隔离活门	AR	
4063-18221	9517366	VALVE, ISOLATION	隔离活门	AR	SV
472412-1	26205EL	APUFIREEXTINGUISHERBOTTLE	APU灭火瓶	AR	
A805300-12	31401042	CARTRIDGE	爆炸帽	AR	
94830-04	1185	BRACKETFWDLEFT	APU前左吊点	AR	
94830-05	1277	BRACKETFWDRIGHT	APU前右吊点	AR	
94830-06	1222	BRACKETREAR	APU后吊点	AR	
FRH220034V	50105895	CHECKVALVEAPU	单向活门	AR	
101809-04	0151141	ALTITUDESWITCH	高度电门	AR	
PPA1104-01	01460	CARGOCOMPARTMENTSMOKEDETECTOR	货舱烟雾探测器	AR	
PPA1104-01	01457	CARGOCOMPARTMENTSMOKEDETECTOR	货舱烟雾探测器	AR	
PPA1104-01	01458	CARGOCOMPARTMENTSMOKEDETECTOR	货舱烟雾探测器	AR	
PPA1104-01	01459	CARGOCOMPARTMENTSMOKEDETECTOR	货舱烟雾探测器	AR	
CG7G0	5813	SMOKEDETECTOR	烟雾探测器	AR	
630CC01Y1	6294	100ASINGLEPOLECONTACTOR	接触器	AR	
630CC01Y1	4651	100ASINGLEPOLECONTACTOR	接触器	AR	
630CC01Y1	6298	100ASINGLEPOLECONTACTOR	接触器	AR	
630CC01Y1	6306	100ASINGLEPOLECONTACTOR	接触器	AR	
630CC01Y1	6338	100ASINGLEPOLECONTACTOR	接触器	AR	
640CC01Y1	7721	200ASINGLEPOLECONTACTOR	接触器	AR	
640CC01Y1	7720	200ASINGLEPOLECONTACTOR	接触器	AR	
640CC01Y1	8057	200ASINGLEPOLECONTACTOR	接触器	AR	
640CC01Y1	7722	200ASINGLEPOLECONTACTOR	接触器	AR	
640CC04A2Y00	48096	200ASINGLEPOLECONTACTOR	接触器	AR	
640CC01Y1	7719	200ASINGLEPOLECONTACTOR	接触器	AR	
655CC01Y1	2025	300ASINGLEPOLECONTACTOR	接触器	AR	

655CC01Y1	2053	300ASINGLEPOLECONTACTOR	接触器	AR	
3888394-221204	735	ELECTRONICCONTR. BOX	电子控制盒	AR	
9599-607-14942	14942-096	RADIOALTIMETERTRANSCEIVER	无线电高度收发机	AR	SV
9599-607-14943	14943-168	RADIOALTIMETERTRANSCEIVER	无线电高度收发机	AR	SV
14404-011B	98030411	VACUUMSYSTEMCONTROL	真空系统控制器	AR	
980-4750-001	FDR-03056	FLIGHTDATARECORDER	飞行数据记录仪	AR	
980-6022-001	CVR120-09	COCKPITVOICERECORDER	驾驶舱语音记录仪	AR	SV
35-0L5-1005-08	Q09305008	BATTERYCHARGELIMITER	电瓶充电限制器	AR	SV
35-0L5-1005-08	Q09305012	BATTERYCHARGELIMITER	电瓶充电限制器	AR	SV
564CA01Y1	9031	CONTACTOR	接触器	AR	
564CA01Y1	9637	CONTACTOR	接触器	AR	
564CA01Y1	9664	CONTACTOR	接触器	AR	
564CA02FY1	3407	60ATHREEPOLECONTACTOR	接触器	AR	
564CA02FY1	3409	60ATHREEPOLECONTACTOR	接触器	AR	
190QA01	3599	CURRENTTRANSFORMER	变压器	AR	
190QA01	3601	CURRENTTRANSFORMER	变压器	AR	
530AL01CN	2593	PWRSUPPLYDECOUPLINGUNIT	电源去耦组件	AR	
530AL01CN	2659	PWRSUPPLYDECOUPLINGUNIT	电源去耦组件	AR	
693335	MX-595260	PACKAGEE-PUMP	电动泵	AR	SV
693335	MX610533	PACKAGEE-PUMP	电动泵	AR	SV
4101002-11	2446	POWERTRANSFERUNIT	动力转换组件	AR	
C24730100-1	H5029	NLG. DOORUPLOCKASSY	前起舱门上锁	AR	
201122008	CWDD-DH14	DOORUPLOCK, MLG	主起舱门上锁	AR	
201122008	CWDD-DH14	DOORUPLOCK, MLG	主起舱门上锁	AR	
201117018	CWDD-DH66	UPLOCK, MLG	主起上锁	AR	
201117017	CWDD-DH13	UPLOCK, MLG	主起上锁	AR	
C24730001-6	H1870	NLG. UPLOCKASSY	前起上锁	AR	
22715-000-02	H0752	NLG. DOORACTUATINGCYLINDER	前起舱门作动筒	AR	
786A0000-12	04611	POWERCONTROLUNIT	动力控制组件	AR	
787A0000-07	09324	VALVEBLOCK	活门块	AR	
787A0000-07	09325	VALVEBLOCK	活门块	AR	
786A0000-12	01762	POWERCONTROLUNIT	动力控制组件	AR	
C19BQ0016	018	RESERVOIRHYDR. BLUE	液力油箱	AR	
HTE690035-1	FRTR098AV	PRESSURESWITCHAIR	压力电门	AR	
18301905-1	45803D	PRESSUREGAUGEAIR	压力表	AR	
HTE690112	FRTR013AV	PRESS. SWITCHBLUERSVR	压力电门	AR	
70400	13960	VALVERELIEFAIR	放气活门	AR	
C24837101-4	H1702	MANIFOLD	刹车总管	AR	
CZ9284E	HEK40480	PRESSURETRANSDUCER	压力传感器	AR	SV
CZ9284E	HEK16810	PRESSURETRANSDUCER	压力传感器	AR	SV
C24837101-4	H1640	MANIFOLD	刹车总管	AR	
CZ9284E	HEK17641	PRESSURETRANSDUCER	压力传感器	AR	SV
CZ9284E	HEK17650	PRESSURETRANSDUCER	压力传感器	AR	SV
5906734	11406	3HOLECURRENTTRANSFORMER	传感器	AR	
5906734	11405	3HOLECURRENTTRANSFORMER	传感器	AR	
5906734	11408	3HOLECURRENTTRANSFORMER	传感器	AR	
5906734	11404	3HOLECURRENTTRANSFORMER	传感器	AR	
5906734	11407	3HOLECURRENTTRANSFORMER	传感器	AR	
Y005-3	6421	TRANSFORMERRECTIFIER	变压整流器	AR	
Y005-2	2259	TRANSFORMERRECTIFIER	变压整流器	AR	
Y005-2	2963	TRANSFORMERRECTIFIER	变压整流器	AR	

503CA02F1-02Y1	2488	DOUBLETHREEPOLECONTACTOR	接触器	AR	
503CA02F1-02Y1	2489	DOUBLETHREEPOLECONTACTOR	接触器	AR	
HTE900095	FRTR120AV	TRANSFERVERVALVEDRIVESHAFT	传输活门驱动轴	AR	
HTE900095	FRTR119AV	TRANSFERVERVALVEDRIVESHAFT	传输活门驱动轴	AR	
HTE900096	FRTR121AV	TRANSFERVERVALVEDRIVESHAFT	传输活门驱动轴	AR	
HTE900096	FRTR024AV	TRANSFERVERVALVEDRIVESHAFT	传输活门驱动轴	AR	
93-A055-66	51309	AMBIENTMICROPHONE	麦克风	AR	
1X2005012-00	2624	LIGHT-CARGOLOADINGAREA	货仓装载灯	AR	
BC2065C	1990	SELCALCODESELECTIONPANEL	选择呼叫面板	AR	
30-1883-5	1774	WING/ENGINESCANLIGHT	机翼发动机探照灯	AR	
1X2005097-00	1261620	LOGOLIGHT	标志灯	AR	SV
1X2005097-00	377530	LOGOLIGHT	标志灯	AR	SV
8420B1-201	8420B1-201	COCKPIT-DOORSURVEILLANCE	驾驶舱门检测系统	AR	
2LA455010-00	1571607	STROBELIGHT	频闪灯	AR	SV
2LA455010-00	894	STROBELIGHT	频闪灯	AR	SV
2LA005303-05	5391	TAILSTROBELIGHT	航行灯	AR	SV
ZCV63-4	8033129	CHECKVALVE	单向活门	AR	
ZCV63-4	80331103	CHECKVALVE	单向活门	AR	
ZCV63-4	80413295	CHECKVALVE	单向活门	AR	
ZCV63-4	80218674	CHECKVALVE	单向活门	AR	
ZCV63-4	8033152	CHECKVALVE	单向活门	AR	
ZCV63-4	80331120	CHECKVALVE	单向活门	AR	
ZCV63-6	71216216	CHECKVALVE	单向活门	AR	
ZCV63-6	71216287	CHECKVALVE	单向活门	AR	
ZCV64-12	80213805	CHECKVALVE	单向活门	AR	
ZCV64-20	8031093	CHECKVALVE	单向活门	AR	
ZCV64-20	8031778	CHECKVALVE	单向活门	AR	
ZCV212	71222218	DOUBLECHECKVALVE	双向选择活门	AR	
521100	F9829672	GENERATORCONTROLUNIT	发电机控制组件	AR	
8ES455012-00	1115857	POWERSUPPLY	电源供给组件	AR	SV
1B1000-1GS	M8956095	STATICINVERTER	静变流机	AR	SV
47215920BB00	472159214	PROBESHEATCOMPUTER	探头加热计算机	AR	SV
8ES403703-02	1227024	RWDFACINGNAVLIGHTXFMR	尾翼航行灯复压器	AR	
HTE310021	FR122BA	AIRINLETVALVE	进气活门	AR	
DK120-90	AT140713	ULB	水下信标电池	AR	SV
DK120-90	AT140251	ULB	水下信标电池	AR	SV
9508175	FRTR300AV	FLOATVENTVALVE	浮子活门	AR	
9508175	FRTR303AV	FLOATVENTVALVE	浮子活门	AR	
9508175	FRTR306AV	FLOATVENTVALVE	浮子活门	AR	
9508175	FRTR305AV	FLOATVENTVALVE	浮子活门	AR	
5906733	8180	6HOLECURRENTTRANSFORMER	传感器	AR	
5906733	8181	6HOLECURRENTTRANSFORMER	传感器	AR	
8ES005309-00	365586	POWERSUPPLYUNIT	电源供给组件	AR	
8ES005309-00	2583	POWERSUPPLYUNIT	电源供给组件	AR	
D290-70173-000-00	401	HP-MANIFOLD	高压总管	AR	
S4-3401190	02417	VALVE, 3/2WAY-	活门	AR	
BHC1060-04	3146	VALVEPRIORITY	优先活门	AR	SV
QA06304	RG3-3907	FILTER	油滤	AR	
ZCV64-10	701219	CHECKVALCE	单向活门	AR	
P7119HP	456790027	VALVESAMPLING	取样活门	AR	
ZCV66-1	05-12012	CHECKVALVE	单向活门	AR	

114151004	CWDD-DH29	VALVE, RELIEFH. P.	释压活门	AR	
450-2-3100-00	33051	SWITCHPRESSUREHYD	压力电门	AR	SV
50-2-3100-00	10154	SWITCHPRESSUREHYD.	压力电门	AR	SV
CZ9DM6A	HAK36878	PRESSURETRANSDUCER	压力传感器	AR	
D2907017100000	185	HPMANIFOLD	高压总管	AR	
50-2-3100-00	9391	SWITCHPRESSUREHYD	压力电门	AR	SV
50-2-3100-00	9392	SWITCHPRESSUREHYD	压力电门	AR	SV
CZ9284E	HEK17092	PRESSURETRANSDUCER	压力传感器	AR	SV
114151004	CWDD-DH23	VALVE, RELIEFH. P.	释压活门	AR	
S4-3401760	01193	VALVE, 3/2WAY-	活门	AR	
P7119HP	456790012	VALVESAMPLING	取样活门	AR	
QA06304	RG2-1974	FILTER	油滤	AR	
ZCV64-16	80424349	CHECKVALVE	单向活门	AR	
ZCV67-1	8011740	CHECKVALVE	单向活门	AR	
1559A9900-01	01494	HPMANIFOLD	高压总管	AR	
CZ9284E	HEK75576	PRESSURETRANSDUCER	压力传感器	AR	SV
50-2-3100-00	9342	SWITCHPRESSUREHYD.	压力电门	AR	SV
50-2-3100-00	9355	SWITCHPRESSUREHYD.	压力电门	AR	SV
114151004	DH-0920-C	VALVE, RELIEFH. P.	释压活门	AR	
ZCV64-16	30821315	CHECKVALVE	单向活门	AR	
71190400010NCOA	M90796000	VALVESAMPLING	取样活门	AR	SV
QA06304	RM11-1061	FILTER	油滤	AR	
C19DS0026	012	RESERVOIRHYDR.	液压油箱	AR	
C82LL0010	11420	DRAINVALVE	排放活门	AR	SV
70400	2949	VALVERELIEFAIR	释压活门	AR	
HTE690035-1	FRTR126AV	PRESSURESWITCHAIR	压力电门	AR	
18301905-1	45810D	PRESSUREGAUGEAIR	压力表	AR	
C19DS0016	004	RESERVOIRHYDR.	液压油箱	AR	
C82LL0010	2658	DRAINVALVE	排放活门	AR	SV
70400	2937	VALVERELIEFAIR	释压活门	AR	
HTE690035-1	FRTR125AV	PRESSURESWITCHAIR	压力电门	AR	
18301905-1	45804D	PRESSUREGAUGEAIR	压力表	AR	
SB209L1A1-1484	51662	HYDR. ACCUMULATOR	储压器	AR	
HTE510016	C172068	ACCUMULATORGASCHARGINGVAL	充气活门	AR	SV
18330904-2	45429D	HIGHPRESSUREGAUGE	压力表	AR	SV
SB209L1A1-1484	50655	HYDR. ACCUMULATOR	储压器	AR	
HTE510016	C062377	ACCUMULATORGASCHARGINGVAL	充气活门	AR	SV
18330904-2	45438D	HIGHPRESSUREGAUGE	压力表	AR	SV
2LA005127-01	921	OVERWINGEMERG. LIGHT	翼上应急灯	AR	
2LA005128-01	912	OVERWINGEMERG. LIGHT	翼上应急灯	AR	
2LA005413-01	896	OVERWINGEMERG. LIGHT	翼上应急灯	AR	
2LA005414-01	908	OVERWINGEMERG. LIGHT	翼上应急灯	AR	
8ES005304-00	1361	POWERSUPPLYUNIT	电源供给组件	AR	SV
VD3920	97071002	FAN, EXTRACTION	风扇	AR	SV
VD3810	12034813	FAN, EXTRACTION	风扇	AR	SV
V2T152D	4707	AIRBUTTERFLYVALVE	蝶形活门	AR	SV
V2T152D	L10410456	AIRBUTTERFLYVALVE	蝶形活门	AR	SV
V2T152D	3935	AIRBUTTERFLYVALVE	蝶形活门	AR	SV
CT191B	998	AIRCHECKVALVE	单向活门	AR	
S67-1575-52	512-22549	ACTIVEGPSANTENNA	GPS天线	AR	
S67-1575-52	512-19619	ACTIVEGPSANTENNA	GPS天线	AR	

D0003000100000	4253	RHEOSTAT	变阻器	AR	
D0003000100000	4185	RHEOSTAT	变阻器	AR	
D0003000100000	4251	RHEOSTAT	变阻器	AR	
D0003000100100	1640	RHEOSTAT	变阻器	AR	
058-001-00	4791	ROTARYSWITCH	旋钮	AR	
3508802-36	FRTR126A	INDICATOR, MAGNETICLEVEL	油尺	AR	
3508802-36	FRTR125A	INDICATOR, MAGNETICLEVEL	油尺	AR	
EVT3454HC	1.65E+08	FAN	风扇	AR	SV
EVT3454HC	1.65E+08	FAN	风扇	AR	SV
TA01Z6005	2911	AUTOTRANSFORMER	变压器	AR	
TA01Z6005	2808	AUTOTRANSFORMER	变压器	AR	
TA01Z6005	2812	AUTOTRANSFORMER	变压器	AR	
3025	1979	STATICCONVERTER	静变流机	AR	
058-001-00	4690	ROTARYSWITCH	旋钮	AR	
310ZN01Y01	3527	UNBALANCEDETECTOR	不平衡探测器	AR	
310ZN01Y01	3528	UNBALANCEDETECTOR	不平衡探测器	AR	
2LA007307-00	2297	CABINOVERPRESSUREINDICAT	客舱超压指示灯	AR	SV
2LA007307-00	2287	CABINOVERPRESSUREINDICAT	客舱超压指示灯	AR	SV
2LA007307-00	2283	CABINOVERPRESSUREINDICAT	客舱超压指示灯	AR	SV
2LA007307-00	2278	CABINOVERPRESSUREINDICAT	客舱超压指示灯	AR	SV
2LA005469-00	5834	WARNINGLIGHTPANEL	警告灯面板	AR	
2LA005469-00	5820	WARNINGLIGHTPANEL	警告灯面板	AR	
2LA005469-00	5684	WARNINGLIGHTPANEL	警告灯面板	AR	
2LA005469-00	5688	WARNINGLIGHTPANEL	警告灯面板	AR	
2LA005469-00	5822	WARNINGLIGHTPANEL	警告灯面板	AR	
2LA005469-00	5846	WARNINGLIGHTPANEL	警告灯面板	AR	
B42CA2002	4250	VALVENONRETURN	活门	AR	
B42CA2002	4273	VALVENONRETURN	活门	AR	
B42CA2002	4397	VALVENONRETURN	活门	AR	
3001-01-111	9806-0574	LINEARACCELEROMETER	线性加速计	AR	SV
L95F50-603	22665	FUELTKOVERPRESSUREPROTECT	油箱燃油超压保护	AR	SV
VT477-2	0572	INDICATORQTY. RSVR.	液压油箱油量指示	AR	
342300M01	4315	TRANSDUCERUNIT	传感器	AR	
342300M01	4327	TRANSDUCERUNIT	传感器	AR	
HTE200002-1	M386GB698	FUELTRANSFERVERVALVEACTUATOR	燃油传输活门作动	AR	SV
E03A00	2941	FIRE-SHUT-OFF-VALVE	防火关断活门	AR	
E03A00	2531	FIRE-SHUT-OFF-VALVE	防火关断活门	AR	
20700-300	908	VALVE, FUEL	燃油活门	AR	
HTE200002-1	M387GB698	FUELTRANSFERVERVALVEACTUATOR	燃油传输活门作动	AR	SV
HTE200002-1	M385GB698	FUELTRANSFERVERVALVEACTUATOR	燃油传输活门作动	AR	SV
2439-89-03	243989-51	ATC/DME. ANTENNA	空中交通管制测距	AR	
2439-89-03	243989-51	ATC/DME. ANTENNA	空中交通管制测距	AR	
2407-89-03	3796	ATC/DME. ANTENNA	空中交通管制测距	AR	
2407-89-03	3816	ATC/DME. ANTENNA	空中交通管制测距	AR	
2439-89-03	243989-51	ATC/DME. ANTENNA	空中交通管制测距	AR	
2439-89-03	243989-19	ATC/DME. ANTENNA	空中交通管制测距	AR	
3105-89	1249	GLIDEANTENNA	下滑道天线	AR	
3901395	FRTR272AV	PUMPJET	引射泵	AR	
3901395	FRTR273AV	PUMPJET	引射泵	AR	
3106-89	1248	LOCALIZERANTENNA	航向天线	AR	
615-2630-102	576-13473	ADFANTENNA	自动定向天线	AR	SV

615-2630-102	3915	ADFANTENNA	自动定向天线	AR	SV
831A0000-05	03820	WINGTIPBRAKE	翼尖刹车	AR	
831A0000-05	03822	WINGTIPBRAKE	翼尖刹车	AR	
9811820	FRTR174A	CHECKVALVE	单向活门	AR	
9811820	FRTR173A	CHECKVALVE	单向活门	AR	
2403-89	4971	VHFANTENNA	甚高频天线	AR	SV
2403-89	240389-17	VHFANTENNA	甚高频天线	AR	SV
D201094	020202	STATICPROB	静压探头	AR	
D201094	020203	STATICPROB	静压探头	AR	
D201094	020196	STATICPROB	静压探头	AR	
D201094	020206	STATICPROB	静压探头	AR	
D201094	020200	STATICPROB	静压探头	AR	
D201094	020209	STATICPROB	静压探头	AR	
38E93-6	18764	WINGANTIICINGCONTROLVALVE	大翼防冰控制活门	AR	SV
38E93-6	13214	WINGANTIICINGCONTROLVALVE	大翼防冰控制活门	AR	SV
C20215000	01417	BRAKEPEDALTRANSMITTER	刹车传输组件	AR	SV
QA07739	RF11-3106	RSVRPRESSUNIT	液力油箱压力组件	AR	
C24592000-1	H1500	MASTERCYLINDER	控制总泵	AR	
C24592000-1	H1499	MASTERCYLINDER	控制总泵	AR	
114086001	CWDD-DH35	CUT-OUTVALVE	关断活门	AR	
114087007	SA0701114	DOORBY-PASSVALVE, MLG	主起舱门旁通活门	AR	
790A0000-02	U2752	BEVELGEARBOX19DEG.	齿轮箱	AR	
827A0000-02	U947	GEARBOX, T-	齿轮箱	AR	
790A0000-02	U2777	BEVELGEARBOX19DEG.	齿轮箱	AR	
828A0000-02	U3723	BEVELGEARBOX63, 5DEG	齿轮箱	AR	
VFT210B00	042702362	AIROUTLET/INLETVALVE	空气进口外流活门	AR	SV
788A0000-02	U1885	RIGHTANGLEGEARBOX	齿轮箱	AR	
790A0000-02	U2778	BEVELGEARBOX19DEG.	齿轮箱	AR	
761B0000-01	04624	ACTUATOR, RAMAIRINLET	冲压进气口作动筒	AR	
761B0000-01	05133	ACTUATOR, RAMAIRINLET	冲压进气口作动筒	AR	
1091A0000-01	01843	INJECTOR, WATER	喷嘴	AR	
1091A0000-01	01881	INJECTOR, WATER	喷嘴	AR	
1303A0000-04	02033	VALVE, FLOWCONTROL	流量控制活门	AR	
1303A0000-04	1303-0323	VALVE, FLOWCONTROL	流量控制活门	AR	
S4-3500711	1021	GROUNDSERVICEANIFO	地面勤务总管	AR	
S4-3500712	0303	GROUNDSERVICEANIFO	地面勤务总管	AR	
749198-2	H0489	HYDRAULICRESERVOIR	液力油箱	AR	
50-2-3100-00	9599	SWITCHPRESSUREHYD.	压力电门	AR	SV
D23278100	L0944	TOWINGADAPTERASSY	牵引组件	AR	
769105A	CWDD-DH20	MODULERATGNDCHECK	RAT地面模式选择器	AR	
QA05593	RG3-2182	FILTERHYD. HP	油滤	AR	
S4-3500711	0910	GROUNDSERVICEANIFO	地面勤务总管	AR	
1905A0000-01	01269	SAFETYVALVEL. G. S.	安全活门	AR	
41-2-1100-02	1028	ACTUATOR, EMER. RAMAIR	作动筒	AR	SV
QA05561	RG5-5557	FILTERHYD. LP	油滤	AR	
TM113-1	2208	TRANSDUC. /SWITCH-TEMP	电门	AR	
FE171-000	FR966	CABLETENSIONREGULATOR	钢索张力调节器	AR	
A25461-104	H3082	AUTOMATICSELECTOR	自动选择活门	AR	
114083003	CWDD-DH14	VENTVALVE, MLG	主架通气活门	AR	
622-5134-064	2213	WEATHERRADARRTDUALMOUNT	气象雷达收发机基	AR	
20790-03AC	9851621	VALVE, OUTFLOW	外流活门	AR	

D272-70250-004-00	NA001	RODSPRING	弹簧杆	AR	
QA05797	RG4-2553	FILTER, HYD. HP	油滤	AR	
QA05561	RG4-5255	FILTERHYD. LP	油滤	AR	
TM113-1	2256	TRANSDUC. /SWITCH-TEMP	电门	AR	
ZCV63-8	80331796	CHECKVALVE	单向活门	AR	
3022016-000	G1731300	RELIEFVALVE	释压活门	AR	
72CF8944-00	884	FLEXIBLECONTROL	软轴	AR	
72CF8945-00	6677	FLEXIBLECONTROL	软轴	AR	
72CF8944-00	6333	FLEXIBLECONTROL	软轴	AR	
72CF8945-00	855	FLEXIBLECONTROL	软轴	AR	
94830-11	378	VIBRAT. ISOLAT	吊点减震器	AR	
94830-10	393	VIBRAT. ISOLAT	吊点减震器	AR	SV
94830-09	390	VIBRAT. ISOLAT	吊点减震器	AR	SV
60128-101	C2111	RAFTSURVIVALKIT	救生包	AR	SV
60128-101	C1709	RAFTSURVIVALKIT	救生包	AR	SV
60128-101	C1782	RAFTSURVIVALKIT	救生包	AR	SV
60128-101	C1778	RAFTSURVIVALKIT	救生包	AR	SV
ZRA380-00	ASA26895	TRANSDUCER	传感器	AR	
ZRA380-00	ASA10172	TRANSDUCER	传感器	AR	
ZRA1990030	4031	TRANSDUCER	传感器	AR	
APTE182-30BARG	6755-5-2	TRANSDUCER	传感器	AR	
HTE69000-1	FRTR421AV	P-SWITCH	压力电门	AR	SV
HTE69000-1	FRTR422AV	P-SWITCH	压力电门	AR	SV
SB209L1A1-1483	20499	HYDR. ACCUMULATOR	储压器	AR	SV
18330904-2	45376D	HIGHPRESSUREGAUGE	压力表	AR	SV
HTE510016	C082039	ACCUMULATORGASCHECKVALVE	充气阀	AR	SV
2598D	4674	LIGHTTRANSFORMER	灯光变压器	AR	
2598D	4665	LIGHTTRANSFORMER	灯光变压器	AR	
C20105000	08340	TACHOMETER	轮速传感器	AR	
C20105000	09182	TACHOMETER	轮速传感器	AR	
C20105000-2	53764	TACHOMETER	轮速传感器	AR	SV
C20105000-1	7694	TACHOMETER	轮速传感器	AR	
Z220H0002110	220H00016	CONTROLUNIT	控制组件	AR	
QA05604	RG2-2925	FILTERHYD. LP	油滤	AR	
TM113-1	2289	TRANSDUC. /SWITCH-TEMP	电门	AR	
A25312-1	H2010	THROTTLEVALVE	推力活门	AR	
747A0000-03	01968	WATEREXTRACTOR	水分离器	AR	
758A0000-02	02087	BYPASSVALVE	旁通活门	AR	SV
30-1883-6	1765	WING/ENGINESCANLIGHT	大翼发动机探照灯	AR	
763A0000-03	10644	SENSORTEMP	温度传感器	AR	SV
763A0000-03	27719	SENSORTEMP	温度传感器	AR	SV
766A0000-01	02404	SENSORTEMP	温度传感器	AR	
764B0000-01	04579	SENSORTEMP	温度传感器	AR	SV
767A0000-04	02290	SENSORTEMP	温度传感器	AR	
763A0000-03	10654	SENSORTEMP	温度传感器	AR	SV
755C0000-01	81210-585	REHEATER	再加热器	AR	SV
756A0000-06	841210-51	CONDENSER	冷凝器	AR	SV
72071000	27253	OVEN	烤箱	AR	
72071000	773	OVEN	烤箱	AR	
72071000	328	OVEN	烤箱	AR	
72071000	28009	OVEN	烤箱	AR	

72071000	27285	OVEN	烤箱	AR	
72071000	322	OVEN	烤箱	AR	
2056C0000-01	2056-0517	PLENUM	集气室	AR	SV
622-5136-201	1786	WEATHERRADARDUALANTMOUNT	气象雷达安装座	AR	
622-5137-601	6460	WEATHERRADARANTENNA	气象雷达	AR	SV
5913667-4	4204	GENAUXILIARYPOWERUNIT	APU发电机	AR	SV
1263A0000-02	2876	ACM	空气循环机	AR	
754C0000-01	6074	HEATEXCHANGERMAIN	主热交换器	AR	SV
47145-148	888	TRIM. HO. STAB. ACTUATOR	水平安定面作动筒	AR	
4500-01-482	3711	FIREDETECOTR	火警探测组件	AR	
3601-91-675-400C-1	218301	FIREDETECOTR	火警探测组件	AR	
4550-01-482	3885	FIREDETECOTR	火警探测组件	AR	
D5757030501500	02554	STRUASSY	支柱组件	AR	
D5757030501500	02138	STRUASSY	支柱组件	AR	
753D0000-01	81211-721	HEATEXCHANGERPRIMARY	次热交换器	AR	SV
N/A	N/A	FIRSTAIDKIT	急救箱	AR	
N/A	N/A	FIRSTAIDKIT	急救箱	AR	
N/A	N/A	EMERGCYMEDICALEQUIPMENT	应急医疗箱	AR	
UPK-A01	N/A	UNIVERSALPRECAUTIONKIT	卫生防疫包	AR	
A2567081506800	N/A	DEMOKIT	演示包	AR	
A2567081500000	N/A	DEMOKIT	演示包	AR	
A12SA	N/A	VOICEGUN	扩音器	AR	SV
D53132110000	RADSA1017	RADOME	雷达罩	AR	
ZCV64-10	60801564	CHECKVALVE	单向活门	AR	
ZCV64-10	80311946	CHECKVALVE	单向活门	AR	
ZCV64-10	80311964	CHECKVALVE	单向活门	AR	
ZCV63-6	71216257	CHECKVALVE	单向活门	AR	
ZCV63-6	80416310	CHECKVALVE	单向活门	AR	
ZCV63-8	8042840	CHECKVALVE	单向活门	AR	
ZCV63-4	80331111	CHECKVALVE	单向活门	AR	
ZCV63-4	80423477	CHECKVALVE	单向活门	AR	
ZCV63-4	80218660	CHECKVALVE	单向活门	AR	
058-001-00	4571	ROTARYSWITCH	旋转电门	AR	
ZCV64-12	8020618	CHECKVALVE	单向活门	AR	
ST3100-33-10	1568	HANDSET	电话	AR	
1266-100	34642	PRESSURESWITCH	压力电门	AR	SV
114087007	SA0700279	DOORBY-PASSVALVE	旁通活门	AR	
114170008	CWDD-DH37	SELECTORVALVEMANIFOLD	选择活门总管	AR	
114079018	CWDD-DH16	SELECTORVALVE	选择活门	AR	
114079019	CH1122302	SELECTORVALVE	选择活门	AR	
114083003	CWDD-DH13	VENTVALVE, MLG	通气活门	AR	
N/A	N/A	E/ETRACK	电子设备架	AR	
ZCV63-6	8012948	CHECKVALVE	单向活门	AR	
ZCV63-6	8012975	CHECKVALVE	单向活门	AR	
058-001-00	4757	ROTARYSWITCH	旋钮	AR	
ZCV66-1	04-091082	CHECKVALVE	单向活门	AR	
EVT174-227	11240	TECHNOFAN	刹车风扇	AR	
EVT174-227	11241	TECHNOFAN	刹车风扇	AR	
EVT174-227	11242	TECHNOFAN	刹车风扇	AR	
EVT174-227	11243	TECHNOFAN	刹车风扇	AR	
S4-3402180	01235	ELECTRIC. SELECTORVA	选择活门	AR	

S4-3400900-01	02934	MANUALSELECTORVALVE	手动选择活门	AR	SV
S4-3400900-01	01515	MANUALSELECTORVALVE	手动选择活门	AR	SV
S4-3300520-01	1697	ACTUATOR	货仓门作动筒	AR	SV
S4-3300520-01	1743	ACTUATOR	货仓门作动筒	AR	SV
S4-3300520-01	1694	ACTUATOR	货仓门作动筒	AR	SV
S4-3300520-01	1739	ACTUATOR	货仓门作动筒	AR	SV
MXP401	13342	CREWOXYGENMASKSTORAGEBOX	机组氧气面罩储存	AR	
MXP401	13340	CREWOXYGENMASKSTORAGEBOX	机组氧气面罩储存	AR	
MXP401	13368	CREWOXYGENMASKSTORAGEBOX	机组氧气面罩储存	AR	
MXP401	12795	CREWOXYGENMASKSTORAGEBOX	机组氧气面罩储存	AR	
1338-1430	587	NLG. ROTATINGMECHANISM	前轮驱动机构	AR	
1338-1430	608	NLG. ROTATINGMECHANISM	前轮驱动机构	AR	
322000M02	1933	TRANSDUCERUNIT	传感器组件	AR	SV
322000M02	1896	TRANSDUCERUNIT	传感器组件	AR	SV
SC4700-5	5846	YAWDAMPERSERVOACTUATOR	偏航阻尼作动器	AR	SV
SC4700-5	1856	YAWDAMPERSERVOACTUATOR	偏航阻尼作动器	AR	SV
6137-3	1096	RUDDERTRIMACTUATOR	方向舵配平作动器	AR	
3108-89	978	VOR. ANTENNA	VOR天线	AR	
72184012B	5044	WATERHEATER	热水器	AR	
72184012B	5042	WATERHEATER	热水器	AR	
72184012B	5133	WATERHEATER	热水器	AR	
72184012B	5401	WATERHEATER	热水器	AR	
72184012B	5128	WATERHEATER	热水器	AR	
C20225508	3176	MLG. BRAKEASSY	刹车	AR	
C20225508	5288	MLG. BRAKEASSY	刹车	AR	
C20225508	3534	MLG. BRAKEASSY	刹车	AR	
C20225508	5330	MLG. BRAKEASSY	刹车	AR	
D2565800100000	NA	FLIGHTKIT2	飞行包	AR	SV
N/A	N/A		起落架舱门连杆（左侧）		
822-0299-020	180614	RECEIVER, ADF	自动定向机	AR	SV
822-0297-020	112510	RECEIVER, VOR/MB	甚高频全向信标	AR	SV
822-0297-020	112511	RECEIVER, VOR/MB	甚高频全向信标	AR	SV
B401ACM0507	Q00149001	CFDIU	中央故障显示器接	AR	
822-0299-020	151603	RECEIVER, ADF	自动接收机	AR	SV
87292325V07	VL2062004	AEVC	通风计算机	AR	
9615325070	3713	DMC	显示管理计算机	AR	
9615325070	4931	DMC	显示管理计算机	AR	
965-1676-003	EMK5-1803	EGPWS	近地警告计算机	AR	SV
822-0323-020	6990	VHF/COMM TRANSCE/VER	甚高频收发机	AR	SV
822-0323-020	3292	VHF/COMM TRANSCE/VER	甚高频收发机	AR	SV
49-170-11	04993	SLAT/FLAP CONTROL COMPUTE	襟缝翼控制计算机	AR	SV
49-170-11	49-170BAC	SLAT/FLAP CONTROL COMPUTE	襟缝翼控制计算机	AR	SV
AMU2790CB06	2790-2607	AMU	音频管理组件	AR	
9615325070	3458	DMC	显示管理计算机	AR	
822-0330-020	841	HF/COMN TRANSCE/VER	高频收发机	AR	
822-0330-020	111258	RECEIVER-TRANSMITTER, HF	高频收发机	AR	
7517900-10020	20007749	TCAS COMPUTER UNIT	应答机	AR	
822-0329-020	1161	DME	测距机询问器	AR	
822-0329-020	1730DG	DME	测距机询问器	AR	
965-0758-001	CMUMK2-03	CMU, COMM MANAGEMENT UNI	通讯管理组件	AR	SV
RD-AX7271	300454	ANNOUNCEMENT	播放器	AR	

822-0323-020	6352	VHF/COMM TRANSCEIVER	甚高频收发机	AR	SV
BA21758	13528	FIR EXTINGUISHER	灭火瓶	AR	
BA21758	13091	FIR EXTINGUISHER	灭火瓶	AR	
BA21758	13545	FIR EXTINGUISHER	灭火瓶	AR	
622-5132-622	19HMH	WEATHER TADAR TRANSCEIVER	气象雷达收发机	AR	
622-5132-622	1611VY	WEATHER TADAR TRANSCEIVER	气象雷达收发机	AR	
740121B	1125	GPCU	地面电源控制组件	AR	
759D0000-02	0331	CONTROLLER PACK	空调控制器	AR	
759D0000-02	3072	CONTROLLER PACK	空调控制器	AR	
740120C	4135	GCU GENERATOR CONTROL UNIT	发电机控制组件	AR	SV
740120C	7761	GCU GENERATOR CONTROL UNIT	发电机控制组件	AR	SV
740120C	4729	GCU GENERATOR CONTROL UNIT	发电机控制组件	AR	SV
822-1152-122	911C	GLU	全球着陆系统组件	SV	
822-1152-122	911D	GLU	全球着陆系统组件	AR	
785-002-8	785002IN6	BMC	引气监控计算机	AR	
Z010H0005119	02886	CIDS	客舱内话数据指令	AR	
Z010H0005119	03131	CIDS	客舱内话数据指令	AR	
785002-9	785002IN8	BMC	引气监控计算机	AR	SV
35-0E5-1513	0E5002331	SDAC	系统数据采集集中	AR	
35-0E5-1513	0E5002478	SDAC	系统数据采集集中	AR	
746923E	2047	EGIU	发电接口装置	AR	
746923E	2053	EGIU	发电接口装置	AR	
RD-AX7095-01	D437544	PES	娱乐系统播放器	AR	
SIC 5059-11-0207	1895	FQIC	燃油指示计算机	AR	
30042-0000-0501	8061	FLSCU	油位传感控制组件	AR	
30042-0000-0501	5736	FLSCU	油位传感控制组件	AR	
775C0000-04	01010	ZONE CONTROLLER	区域温度控制器	AR	
C13043AA06	C13043031	FMGC	飞行管理指引计算	AR	
C13043AA06	Q00194007	FMGC	飞行管理指引计算	AR	
B397BAM0624	Q00140008	FAC	飞行增稳计算机	AR	SV
B397BAM0624	Q00140013	FAC	飞行增稳计算机	AR	SV
3957985114	1992	EIU	发动机连接组件	AR	
3957985114	Q05720007	EIU	发动机连接组件	AR	
773A0000-01	06462	TEMPERATURE SENSOR	温度传感器	AR	
350E053021818	0E0016635	FWC	警告计算机	AR	SV
9022-15702-11	9867403	CPC	客舱压力控制器	AR	
9022-15702-11	9931765	CPC	客舱压力控制器	AR	
115370-1016	1948	FCDC	飞行控制数据采集	AR	SV
115370-1016	1949	FCDC	飞行控制数据采集	AR	SV
3945128218	ELACVB012	ELAC	计算机	AR	
3945128218	ELACVB018	ELAC	计算机	AR	
RAI2800M0706	5207	SDCU	烟雾探测器控制组	AR	SV
B372BAM0515	Q00136010	SEC	扰流板升降舵计算	AR	SV
B372BAM0515	Q00136013	SEC	扰流板升降舵计算	AR	SV
B372BAM0515	Q00136010	SEC	扰流板升降舵计算	AR	SV
208724-0	2080	EMERGENCY ESCAPE ROPE	逃生绳	AR	
208724-0	2081	EMERGENCY ESCAPE ROPE	逃生绳	AR	
472412-1	2126M	APU FIRE EXTINGUISHER BOT	灭火瓶	AR	
CG7G0	4425	SMOKE DETECTOR	烟雾探测器	AR	
30-1883-5	1759	WING & NACELLE INJECTION	大翼观察灯	AR	
0861ED	0861ED-44	ANGLE OF ATTACK SENSOR	迎角传感器	AR	SV

A805300-12	01047	APU FIRE EXTINGUISHER BOT	灭火瓶爆炸帽	AR	
C24592000-1	H1544	FOOT MOTOR	步进马达	AR	
C24592000-1	H1534	FOOT MOTOR	步进马达	AR	
1330622V01	759	3RD OCCUPANT SEAT	观察员座椅	AR	
25-10-154-01-00	818	FORTH OCCUPANT SEAT	第四观察员座椅	AR	
TAAI2-33CE00-01	499	F/O SEAT	副驾驶座椅	AR	
VFT210B00	042700429	AIR INLET VALVE	进气活门	SV	SV
TAAI2-33PE00-01	1748	PILOT SEAT	机长座椅	AR	
72071000	0769	OVEN	烤箱	AR	
72071000	0457	OVEN	烤箱	AR	
72071000	0058	OVEN	烤箱	AR	
72071000	0233	OVEN	烤箱	AR	
72071000	0331	OVEN	烤箱	AR	
72071000	0334	OVEN	烤箱	AR	
72184012B	6093	WATER HEATER	热水器	AR	
72184012B	5398	WATER HEATER	热水器	AR	
72184003B	3590	WATER HEATER	热水器	AR	SV
72184012B	4608	WATER HEATER	热水器	AR	
72184012B	5797	WATER HEATER	热水器	AR	
222-1	029	REFRIGERATOR	冰箱	AR	
35-0D5-1003	1900	COCKPIT LOUDSPEAKER	驾驶舱扬声器	AR	SV
35-0L5-1005-08	2407	BATTERY CHARGE LIMITER	电瓶充电限制器	AR	SV
Z030H0005110	30765	CIDS DEU TYPE AA	编码组件 AA型	AR	
Y005-3	6654	TRANSFORMER RECTIFIER	变压整流器	AR	
AR4709-1	N-C1291	COCKPIT SYSTEM CONTROLLER	驾驶舱系统控制器	AR	
K217ABM11	1365	FCU	飞行控制组件	AR	SV
RD-AV3001-33	201002	VSCU	系统控制组件	AR	
196PN01Y02	1344	RUDDER TRIM INDICATOR	方向舵配平指示器	AR	
64161-234-1	1525	METRIC ALTIMETER	高度表	AR	
622-5130-021	1FJJH	WEATHER RADAR DUAL CTL UN	气象雷达控制组件	AR	
C12404AB02	1019	ATC CONTROL PANEL	ATC/TACS控制组件	SV	
2610-13-1	544	CLOCK	时钟	AR	
899-0850-004	6327	RMP	无线电管理面板	AR	SV
899-0850-004	6014	RMP	无线电管理面板	AR	SV
35-0L5-1005-08	2087	BATTERY CHARGE LIMITER	电瓶充电限制器	AR	SV
35-0D5-1003	0D5002273	COCKPIT LOUDSPEAKER	扬声器	AR	SV
63543-150-4	Q09157003	VOR/DME RMI	无线电磁指示器	AR	
64882-206-1	6815	PRESSURE INDICATOR	压力指示器	SV	SV
3105-89	1276	GLIDE ANTENNA	下滑道天线	AR	
Z111H0033151	06823	AIP-ATTENDANT INDICATION	乘务员指示面板	AR	
27-457	1471	RUDDER TRIM CONTROL SWITC	方向舵配平控制开	AR	
Z111H0033151	07182	AIP-ATTENDANT INDICATION	乘务员指示面板	AR	
Z111H0033151	111H00039	AIP-ATTENDANT INDICATION	乘务员指示面板	AR	
C5K	980512927	STANDBY COMPASS	备用罗盘	AR	
206PN01	1262	VOLTMETERS	电压指示器	AR	
206PN01	1258	VOLTMETERS	电压指示器	AR	
CG1151AC03	2719	CDU	控制显示组件	AR	
11-851154-6	02501	PRECOOLER EXCHANGER	预冷器	AR	
986F12-1	1983	PRESSURE SEVICE CHECK VAL	压力勤务单向活门	AR	
342B050000	03647	FAN AIR VALVE CONTROL TH	风扇空气阀恒温器	AR	SV
4-60000H882-00	96283	DRAIN MAST	排水桅杆	AR	SV

4-60000H882-00	10277	DRAIN MAST	排水桅杆	AR	SV
HTE190001-2	M207GB04	LOW PRESS VALVE ACTUATOR	低压燃油活门作动	AR	SV
HTE190001-2	M316GB598	CROSS FEED VALVE ACTUATOR	交输活门作动器	AR	SV
L83A13-617	20407	LEAK MONITOR	渗漏监控器	AR	
FE240-004	1882	DOMPER	阻尼器	AR	SV
4279198	25990	WIPER MOTOR	雨刷马达	AR	SV
4279204	26340	WIPER MOTOR	雨刷马达	AR	SV
115800021	7060062	REFUEL VALVE	加油活门	AR	
115800021	FR248BA	REFUEL VALVE	加油活门	AR	
115800021	FRTR173A	REFUEL VALVE	加油活门	AR	
15-40F-11	71495048	SMOKE HOOD	防烟面罩	AR	
15-40F-11	64358043	SMOKE HOOD	防烟面罩	AR	
15-40F-11	64358042	SMOKE HOOD	防烟面罩	AR	
15-40F-80	75443048	SMOKE HOOD	防烟面罩	AR	
15-40F-11	61098011	SMOKE HOOD	防烟面罩	AR	
15-40F-11	64358011	SMOKE HOOD	防烟面罩	AR	
15-40F-11	61098054	SMOKE HOOD	防烟面罩	AR	
FRH100014A	Q34121018	APU FUEL LOW PRESSURE SW	燃油低压电门	AR	
HTE69000-1	33071602	FUEL PUMP PRESSURE SWITCH	燃油泵压力电门	AR	SV
S4-3402180	01293	MANUAL SELECTOR VALVE	手动选择活门	AR	
9024-15704-2	0257152	SAFETY VALVE	安全活门	AR	SV
9024-15704-2	0257153	SAFETY VALVE	安全活门	AR	SV
20790-03AC	1151606	OUTFLOW VALVE	外流活门	AR	
1303A0000-04	00327	FLOW CONTROL VALVE	流量控制阀	AR	
1303A0000-04	03296	FLOW CONTROL VALVE	流量控制阀	AR	
761B0000-01	02479	AIR-INLET FLAP ACTUATOR	制动器	AR	
HTE200002-1	M300GB598	ACTUATOR	作动筒	AR	SV
HTE200002-1	M441GB798	ACTUATOR	作动筒	AR	SV
ZCV212	8093052	DOUBLE CHECK VALVE	双向阀	AR	
S4-3300520-01	0922	CARGO DOOR ACTUATOR	货舱门作动器	AR	SV
S4-3300520-01	1813	CARGO DOOR ACTUATOR	货舱门作动器	AR	SV
9599-607-12352	09106	RA ANTENNA	无线电高度表天线	AR	SV
9599-607-12352	54747	RA ANTENNA	无线电高度表天线	AR	SV
9599-607-12352	13195	RA ANTENNA	无线电高度表天线	AR	SV
9599-607-12352	54745	RA ANTENNA	无线电高度表天线	AR	SV
47215920BB00	472159212	PHC	探头加温计算机	AR	SV
47215920BB00	472159212	PHC	探头加温计算机	AR	SV
416-00318-003	416003180	WHC	窗户加温计算机	AR	
6664287-0	4714	WHC	窗户加温计算机	AR	
777A0000-01	04820	SELECTOR TEMP	温度选择器	AR	
777A0000-01	04832	SELECTOR TEMP	温度选择器	AR	
777A0000-01	04992	SELECTOR TEMP	温度选择器	AR	
9027-20010	9840618	LFES	着陆高度选择器	AR	SV
3720-01-01	UL9727	FDU	火警探测组件	AR	
BC2065C	2010	CODE SELECT PLANEL	呼叫代码选择面板	AR	
241-246-022-004	0366	EVMU	发动机振动监控组	AR	
35-0L0-1001-04	0L0003627	ECAMCP	中央显示器控制面	AR	
899-0850-004	4236	RMP	无线电管理面板	AR	SV
38E93-6	11417	WING ANTI-ICE CONTROL VAL	大翼防冰活门	AR	SV
342B050000	16260	CONTROL-THERMOSTAT	恒温控制器	AR	SV
2696A0000-01	2696A00L1	PRESSURE SENSOR	压力传感器	AR	

HTE200002-1	M442GB798	TRANSFER VALVE ACTUATOR	传输活门作动器	AR	SV
1298A0000-01	1298-2350	TRIM AIR CHECK VALVE	配平空气单向活门	AR	SV
1298A0000-01	02739	TRIM AIR CHECK VALVE	配平空气单向活门	AR	SV
HTE200002-1	M490GB798	ACTUATOR	作动器	AR	SV
786-052	2686	PROTECTOR	保护器	AR	
786-052	2646	PROTECTOR	保护器	AR	
HTE200002-1	M491GB798	ACTUATOR	作动器	AR	SV
600615-00-503	20321	VENTILATION CONSTROLLER	通风控制器	AR	SV
736A0000-02	04002	TEMPERATURE SENSOR	温度传感器	AR	
736A0000-02	04394	TEMPERATURE SENSOR	温度传感器	AR	
HTE370001	M0454VNR0	HP GROUND CONNECTORHP	地面接头	AR	
6610-20560-01	5847	MIXER FLAP ACTUATOR	混合挡板制动器	SV	SV
1320A0000-02	1320A00L	TRIM AIR VALVE	空气配平活门		
1320A0000-02	1320-2790	TRIM AIR VALVE	空气配平活门	AR	
1320A0000-02	1320-3463	TRIM AIR VALVE	空气配平活门	AR	
CT191B	1005	CHECK VALVE	单向阀	AR	
V2T127D	1898	AIR INLET VALVE	空调近期活门	AR	SV
V2T152D	07678	BYPASS VALVE	旁通活门	AR	SV
VD3900-03	98071314	FAN, RECIRCULATION	再循环风扇	AR	SV
VD3900-03	98101368	RECIRCULATION FAN	再循环风扇	AR	SV
QA06423-01	1902	FILTER CARTRIDGE	过滤器	AR	SV
QA06423-01	2002	FILTER CARTRIDGE	过滤器	AR	SV
755C0000-01	81210-571	REHEATER	再加热器	AR	SV
755C0000-01	81210-501	REHEATER	再加热器	AR	SV
2439-89-03	243989-54	ATC ANTENNA	空中交通管制天线	AR	
11-851154-6	02166	PRECODER EXCHANGER	预冷器	AR	
9104A0006-01	034	PRESSURE SENSOR	压力传感器	AR	
761A0000-04	01675	AIR-INLET FLAP ACTUATOR	进气挡板作动器	AR	SV
B27000	978	AUP LP VALVE ACTUATORAPU	低压活门作动器	AR	
12664	9814829	CHECK VALVE	单向阀	AR	
12664	9814843	CHECK VALVE	单向阀	AR	
9104A0006-01	020	PRESSURE SENSOR	压力传感器	AR	
41-2-1100-02	1038	ACTUATOR	作动器	AR	SV
14404-011B	98070475	CONTROLLER VACUUM SYST	真空系统控制器	AR	
Z020H0001112	01100	PROGRAM TEST PANEL	程序测试面板	AR	
503CA02F1-02Y1	2514	CONTACTOR	接触器	AR	
503CA02F1-02Y1	2515	CONTACTOR	接触器	AR	
822-1330-001	3JCRL	GPS ANTENNA	全球定位系统天线	AR	
822-1330-001	2N6PL	GPS ANTENNA	全球定位系统天线	AR	
3214-54-10	1405	EMERGENCY POWER SUPPLY UN	应急电源供应组件	AR	
3214-54-10	1435	EMERGENCY POWER SUPPLY UN	应急电源供应组件	AR	
3214-54-10	C07679	EMERGENCY POWER SUPPLY UN	应急电源供应组件	AR	
2LA005128-01	916	OVERWING EMERGENCY LIGHT	大翼应急灯	AR	
2LA005414-01	917	OVERWING EMERGENCY LIGHT	大翼应急灯	AR	
2LA005127-01	931	OVERWING EMERGENCY LIGHT	大翼应急灯	AR	
4236534	75722	RUNWAY TURNOFF LIGHT	跑道转弯灯	AR	
4236534	75778	RUNWAY TURNOFF LIGHT	跑道转弯灯	AR	
PPA1102-00	2305	AMBIANT SMOKE DETECTOR	烟雾探测器	AR	SV
PPA1102-00	3083	AMBIANT SMOKE DETECTOR	烟雾探测器	AR	SV
PPA1102-00	3660	AMBIANT SMOKE DETECTOR	烟雾探测器	AR	SV
PPA1102-00	10707	AMBIANT SMOKE DETECTOR	烟雾探测器	AR	SV

PPA1102-00	11836	AMBIANT SMOKE DETECTOR	烟雾探测器	AR	SV
PPA1102-00	11853	AMBIANT SMOKE DETECTOR	烟雾探测器	AR	SV
101809	9809360A	ALTITUDE SWITCH	高度电门	AR	
4236564	81974	TAXI LIGHT	滑行灯	AR	
1X2005012-00	2990	LOAD AERA LIGHT	装载区域灯	AR	
2LA005303-05	5418	STROBE LIGHT UNIT	频闪灯组件	AR	SV
2LA005469-00	5891	LIGHT-WARNING-PANEL	警告灯面板	AR	
2LA005469-00	1006080	LIGHT-WARNING-PANEL	警告灯面板	AR	
2LA005469-00	5753	LIGHT-WARNING-PANEL	警告灯面板	AR	
2LA005469-00	5894	LIGHT-WARNING-PANEL	警告灯面板	AR	
2LA005469-00	5829	LIGHT-WARNING-PANEL	警告灯面板	AR	
622-5136-201	2972	WEATHER-RADAR ANTENA ASSI	气象雷达无线组件	AR	
2LA005469-00	5893	LIGHT-WARNING-PANEL	警告灯面板	AR	
9700-C1A-F23AN	613560	PORTABLE OXYGEN EQUIPMENT	便携式氧气设备	AR	SV
9700-C1A-F23AN	P07110632	PORTABLE OXYGEN EQUIPMENT	便携式氧气设备	AR	SV
9700-C1A-F23AN	ST50905	PORTABLE OXYGEN EQUIPMENT	便携式氧气设备	AR	SV
9700-C1A-F23AN	ST263121	PORTABLE OXYGEN EQUIPMENT	便携式氧气设备	AR	SV
9700-C1A-F23AN	ST68833	PORTABLE OXYGEN EQUIPMENT	便携式氧气设备	AR	SV
2LA007307-00	2341	LIGHT-WARNING-PANEL	警告灯面板	AR	SV
2LA007307-00	2342	LIGHT-WARNING-PANEL	警告灯面板	AR	SV
2LA007307-00	2346	LIGHT-WARNING-PANEL	警告灯面板	AR	SV
2LA007307-00	2347	LIGHT-WARNING-PANEL	警告灯面板	AR	SV
Y005-2	3012	TRANSFORMER RECTIFIER	变压整流器	AR	
8ES403703-02	1631	TRANSFORMER	变压器	AR	
528-70	4521	LIGHT NANIGATION-WING TIP	翼尖导航灯	AR	SV
1X2005097-00	2565045	LOGO LIGHT	航徽灯	AR	SV
764A0000-03	83222	TEMPERATURE SENSOR	温度传感器	AR	
764A0000-03	07166	TEMPERATURE SENSOR	温度传感器	AR	
764A0000-03	07198	TEMPERATURE SENSOR	温度传感器	AR	
ST3100-33-10	873	HANDSET	手持电话	AR	
ST3100-23-10	5092	HANDSET	手持电话	AR	
ST3100-23-10	2871	HANDSET	手持电话	AR	
ST3100-23-10	05545	HANDSET	手持电话	AR	
MF10-05-11	SE02336	MASK	氧气面罩	SV	SV
114122014	DH-4375-C	MLG DOOR ACTUATING-CYLIND	主起落架舱门作动	AR	SV
114122014	CH1127529	MLG DOOR ACTUATING-CYLIND	主起落架舱门作动	AR	SV
833B0100-01	U1834	SHAFT	轴组件	AR	
833B0100-01	U1835	SHAFT	轴组件	AR	
833B0200-01	U1832	SHAFT ASSY	轴组件	AR	
833B0200-01	U1833	SHAFT ASSY	轴组件	AR	
833B0400-01	U1835	SHAFT ASSY	轴组件	AR	
833B1100-01	U1836	SHAFT ASSY	轴组件	AR	
833A2100-01	U2232	SHAFT ASSY	轴组件	AR	
9811839	345AY	CHECK VALVE	单向活门	AR	
9811839	346AY	CHECK VALVE	单向活门	AR	
9811839	344AY	CHECK VALVE	单向活门	AR	
9811839	347AY	CHECK VALVE	单向活门	AR	
9811839	342AY	CHECK VALVE	单向活门	AR	
9811839	343AY	CHECK VALVE	单向活门	AR	
9811820	FRTR176AV	CHECK VALVE	单向活门	AR	
9811820	FRTR177AV	CHECK VALVE	单向活门	AR	

5906734	11445	TRANSFORMER-CURRENT	电流互感器	AR	
5906734	11447	TRANSFORMER-CURRENT	电流互感器	AR	
5906734	11449	TRANSFORMER-CURRENT	电流互感器	AR	
5906734	11446	TRANSFORMER-CURRENT	电流互感器	AR	
5906734	11448	TRANSFORMER-CURRENT	电流互感器	AR	
C12CB0010	1014	APU FUEL PUMP	燃油泵	AR	
8ES005304-00	1706	POWER SUPPLY UNIT	电源供应组件	AR	SV
93-A150-20	01176	CONTROL UNIT	控制组件	AR	
L95F100-603	31152	OVER PRESSURE PROTECTOR	过压保护器	AR	
L95F100-603	31151	OVER PRESSURE PROTECTOR	过压保护器	AR	
93-A055-66	51329	FAIRCHILD MODEL	转换器	AR	
0212KTU-09	985513	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
0212KTU-09	985514	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
0212KTU-09	985516	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
0212KTU-08	985360	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
0212KTU-08	985359	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
PPA1202-00	2697	AMBIANT SMOKE DETECTOR	烟雾探测器	AR	
PPA1202-00	7886	AMBIANT SMOKE DETECTOR	烟雾探测器	AR	
PPA1202-00	15660	AMBIANT SMOKE DETECTOR	烟雾探测器	AR	
0212KTU-04	FR0783302	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
0212KTU-07	985400	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
0212KTU-04	985411	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
0212KTU-07	985401	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
0212KTU-03	985453	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
0212KTU-03	985455	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
0212KTU-05	985344	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
0212KTU-05	985343	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
833A1600-01	U1836	SHAFT ASSY	轴组件	AR	
833A1600-01	U1837	SHAFT ASSY	轴组件	AR	
833B1200-01	U1838	SHAFT ASSY	轴组件	AR	
833B1200-01	U1839	SHAFT ASSY	轴组件	AR	
833B0300-01	U1831	SHAFT ASSY	轴组件	AR	
833B0300-01	U1830	SHAFT ASSY	轴组件	AR	
833A1700-01	U1832	SHAFT ASSY	轴组件	AR	
833A1700-01	U1833	SHAFT ASSY	轴组件	AR	
833B0400-01	U1836	SHAFT ASSY	轴组件	AR	
833B0800-01	U1835	SHAFT ASSY	轴组件	AR	
833B0800-01	U1836	SHAFT ASSY	轴组件	AR	
833A1900-01	U1819	SHAFT ASSY	轴组件	AR	
833A1900-01	U1820	SHAFT ASSY	轴组件	AR	
833A0700-01	U1833	SHAFT ASSY	轴组件	AR	
833A0700-01	U1834	SHAFT ASSY	轴组件	AR	
833A1800-01	U1835	SHAFT ASSY	轴组件	AR	
833A1800-01	U1836	SHAFT ASSY	轴组件	AR	
833A2000-01	U1840	SHAFT ASSY	轴组件	AR	
833A2000-01	U1841	SHAFT ASSY	轴组件	AR	
833B1300-01	U1832	SHAFT ASSY	轴组件	AR	
833B1300-01	U1833	SHAFT ASSY	轴组件	AR	
833B0900-01	U1769	SHAFT ASSY	轴组件	AR	
833B0900-01	U1770	SHAFT ASSY	轴组件	AR	
833A0600-01	U1854	SHAFT ASSY	轴组件	AR	

833A0600-01	U1855	SHAFT ASSY	轴组件	AR	
833B1100-01	U1835	SHAFT ASSY	轴组件	AR	
833A2100-01	U2231	SHAFT ASSY	轴组件	AR	
833B1000-01	U1768	SHAFT ASSY	轴组件	AR	
833A1500-01	U1841	SHAFT ASSY	轴组件	AR	
833A2200-01	U885	SHAFT ASSY	轴组件	AR	
833A0500-01	U890	SHAFT ASSY	轴组件	AR	
833A2400-02	U2428	TORQUE SHAFT	扭力轴	AR	
833C5200-02	U1882	STEADY BEARING ASSY	支承轴承	AR	
833C5200-02	U1883	STEADY BEARING ASSY	支承轴承	AR	
830A0000-04	14867	ACTUATOR B SLATB	型作动器	AR	
830A0000-04	14876	ACTUATOR B SLATB	型作动器	AR	
830A0000-04	14868	ACTUATOR B SLATB	型作动器	AR	
830A0000-04	14874	ACTUATOR B SLATB	型作动器	AR	
830A0000-04	13043	ACTUATOR B SLATB	型作动器	AR	
830A0000-04	14864	ACTUATOR B SLATB	型作动器	AR	
830A0000-04	14869	ACTUATOR B SLATB	型作动器	AR	
830A0000-04	14870	ACTUATOR B SLATB	型作动器	AR	
830A0000-04	14861	ACTUATOR B SLATB	型作动器	AR	
830A0000-04	14873	ACTUATOR B SLATB	型作动器	AR	
830A0000-04	14862	ACTUATOR B SLATB	型作动器	AR	
830A0000-04	14875	ACTUATOR B SLATB	型作动器	AR	
830A0000-04	14866	ACTUATOR B SLATB	型作动器	AR	
830A0000-04	14863	ACTUATOR B SLATB	型作动器	AR	
830A0000-04	18555	ACTUATOR B SLATB	型作动器	AR	
830A0000-04	14871	ACTUATOR B SLATB	型作动器	AR	
829B0000-01	03844	ACTUATOR-ROTARY SLAT	缝翼旋转作动器	AR	
829B0000-01	03845	ACTUATOR-ROTARY SLAT	缝翼旋转作动器	AR	
829B0000-01	03846	ACTUATOR-ROTARY SLAT	缝翼旋转作动器	AR	
829B0000-01	03847	ACTUATOR-ROTARY SLAT	缝翼旋转作动器	AR	
833C2300-02	U1876	STEADY BEARING ASSY	支承轴承	AR	
833C2300-02	U1877	STEADY BEARING ASSY	支承轴承	AR	
6-1404-0000-4	980122	HYDRAULIK HAND PUMP	液压手摇泵	AR	SV
0212KTU-13	985605	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
0212KTU-10	985706	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
0212KTU-17	985687	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
0212KTU-06	985252	FUEL QUANTITY TANK UNIT	油箱油量组件	AR	
796815-02-03	4471	FUEL QUANTITY PRESELECTOR	油量预选器	AR	
HC3100-23-10	2972	BRACKET ASSY-SUPPORT	支架组件	AR	
HC3100-23-10	06337	BRACKET ASSY-SUPPORT	支架组件	AR	
HC3100-23-10	1618	BRACKET ASSY-SUPPORT	支架组件	AR	
HC3100-33-10	840	BRACKET ASSY-SUPPORT	支架组件	AR	
Z040H0005110	07082	CIDS DEU TYPE BB	编码组件BB型	AR	
Z040H0005110	07083	CIDS DEU TYPE BB	编码组件BB型	AR	
Z040H0005110	07084	CIDS DEU TYPE BB	编码组件BB型	AR	
Z040H000820A	040H00015	CIDS DEU TYPE BB	编码组件BB型	AR	
521100	F9829268	GENERATOR CONTROL UNIT	恒速马达控制组件	AR	
622-5134-064	2231	MIUNTING	安装架	AR	
30-1883-6	1775	WING & NACELLE INPECTION	大翼观察灯	AR	
5906733	8202	CURRENT TRANSFORMER	电流互感器	AR	
5906733	8218	CURRENT TRANSFORMER	电流互感器	AR	

864-001	6357	INDICATOR-LIGHTED ICING	照明结冰指示器	AR	
600612-00-510	20878	SENSOR TEMP	温度传感器	AR	
0212KTU-13	985604	FUEL QUANTITY TANK UNIT	燃油油量探测器	AR	
0212KTU-14	982214	FUEL QUANTITY TANK UNIT	燃油油量探测器	AR	
0212KTU-14	982317	FUEL QUANTITY TANK UNIT	燃油油量探测器	AR	
0212KTU-14	982318	FUEL QUANTITY TANK UNIT	燃油油量探测器	AR	
0212KTU-14	982323	FUEL QUANTITY TANK UNIT	燃油油量探测器	AR	
HTE900118-001	FR210BA	LP FUEL VALVE	低压燃油活门	AR	SV
HTE900118-001	FR217BA	LP FUEL VALVE	低压燃油活门	AR	SV
801B1300-01	U1834	SHAFT ASSY	扭力轴	AR	
801B1300-01	U1829	SHAFT ASSY	扭力轴	AR	
801B1600-01	U1835	SHAFT ASSY	扭力轴	AR	
801B1600-01	U1837	SHAFT ASSY	扭力轴	AR	
801B1200-01	U1827	SHAFT ASSY	扭力轴	AR	
801B0600-01	U1831	SHAFT ASSY	扭力轴	AR	
801B1400-01	U1828	SHAFT ASSY	扭力轴	AR	
801B0700-01	U1832	SHAFT ASSY	扭力轴	AR	
773A0000-01	23546	TEMPERATURE SENSOR	温度传感器	AR	
87232324V00	1056	SKIN TEMPERATURE SENSOR	蒙皮温度传感器	AR	
792-6140-001	12803	ANTENNA COUPLER	天线耦合器	AR	
792-6140-001	12813	ANTENNA COUPLER	天线耦合器	AR	
Z030H0005110	30786	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30778	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30774	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30769	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30785	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30784	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30770	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30782	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30771	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30777	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	33917	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30762	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30766	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30775	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30787	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30763	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30767	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30772	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30781	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30768	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30773	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30779	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30764	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0005110	30783	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z030H0004110	20870	CIDS DEU TYPE AA	编码组件 AA型	AR	
Z220H0002110	02377	DRAIN MAST CONTROL UNIT	废水防冰控制组件	AR	
Z220H0002110	220H00002	DRAIN MAST CONTROL UNIT	废水防冰控制组件	AR	
Z212H0001110	02722	WATER HEATING C.U	废水防冰控制组件	AR	
1209-100	3048	SWITCH PRESSURE	压力电门	AR	SV
1209-100	3179	SWITCH PRESSURE	压力电门	AR	SV

1209-100	26561	SWITCH PRESSURE	压力电门	AR	SV
QA05877	RG62146	BLEED-AIR LINE RESTRICTOR	引起管路限流器	AR	
773A0000-01	06683	TEMPERATURE SENSOR	温度传感器	AR	
C49AA0221	919	APU FUEL-PUMP CONAPU	温度传感器	AR	
E03A00	3151	FIRE VALVE SHUTOFF	防火关断活门	AR	
E03A00	3154	FIRE VALVE SHUTOFF	防火关断活门	AR	
P99C38-605	20625	FUEL PUMP	燃油泵	AR	
P99C38-605	20626	FUEL PUMP	燃油泵	AR	
P99C38-605	20627	FUEL PUMP	燃油泵	AR	
P99C38-605	20310	FUEL PUMP	燃油泵	AR	
0212KTU-06	985253	FUEL QUANTITY TANK UNIT	燃油油量探测器	AR	
0212KTU-15	981766	FUEL QUANTITY TANK UNIT	燃油油量探测器	AR	
0212KTU-01	984415	FUEL QUANTITY TANK UNIT	燃油油量探测器	AR	
0212KTU-01	984416	FUEL QUANTITY TANK UNIT	燃油油量探测器	AR	
0212KTU-16	985817	FUEL QUANTITY TANK UNIT	燃油油量探测器	AR	
0212KTU-16	985846	FUEL QUANTITY TANK UNIT	燃油油量探测器	AR	
4550-01-482/190C-6	3983	FIRE OVERHEAT DETECTOR	超温探测器	AR	
4550-01-482/190C-6	3939	FIRE OVERHEAT DETECTOR	超温探测器	AR	
A06L00	3561	ACTUATOR	作动器	AR	
A06L00	3180	ACTUATOR	作动器	AR	
P99C38-605	20312	FUEL PUMP	燃油泵	AR	
P99C38-601	20217	FUEL PUMP	燃油泵	AR	
321200M02	1377	SPEED BRAKE CONTROL TRANS	减速刹车控制传感	AR	SV
780B0000-01	0780B00L	COMMAND SENSOR UNIT	指令传感器组件	AR	SV
J172ABM	9531	ACCELEROMETER UNIT	飞控加速度计	AR	
J172ABM	9567	ACCELEROMETER UNIT	飞控加速度计	AR	
J172ABM	9568	ACCELEROMETER UNIT	飞控加速度计	AR	
J172ABM	9572	ACCELEROMETER UNIT	飞控加速度计	AR	
530AL01CN	2589	P. S. D. U	供电分离组件	AR	
530AL01CN	2665	P. S. D. U	供电分离组件	AR	
3530000-1	FRTR29188	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR29184	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR29193	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR29193	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR29183	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR29186	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR27163	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	C11101871	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR27163	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR29180	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR29198	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	C11101872	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR29178	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR29190	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR29179	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR29181	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR29189	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR29194	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR29187	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR29192	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR27164	SENSOR-FUEL LEVEL	油位传感器	AR	

342300M01	4548	TRANSDUCER UNIT	传感器组件	AR	
342300M01	4410	TRANSDUCER UNIT	传感器组件	AR	
342300M01	4409	TRANSDUCER UNIT	传感器组件	AR	
342300M01	4547	TRANSDUCER UNIT	传感器组件	AR	
3540000-1	C06104026	TEMPERATURE SENSOR	温度传感器	AR	
3540000-1	FRTR3604A	TEMPERATURE SENSOR	温度传感器	AR	
D57750005001	AP925	5# SPOILER	右5号扰流板	AR	
D57750003001	AP921	3# SPOILER	右3号扰流板	AR	
2LA403702-01	937	TAIL NAVIGATION	尾部导航灯	AR	
D57750004001	AP938	4# SPOILER	4号扰流板	AR	
D57750001001	AP710	1# SPOILER	右1号扰流板	AR	
D57750002001	AP717	2# SPOILER	右2号扰流板	AR	
D57750005000	AP928	5# SPOILER	左5号扰流板	AR	
D57750004000	AP935	4# SPOILER	4号扰流板	AR	
D57750003000	AP928	3# SPOILER	左3号扰流板	AR	
D57750002000	AP718	2# SPOILER	左2号扰流板	AR	
D57750001000	AP723	1# SPOILER	左1号扰流板	AR	
240789	3914	ATC ANTENNA	空中交通管制天线	AR	
240789	3988	ATC ANTENNA	空中交通管制天线	AR	
3530000-1	FRTR29177	SENSOR FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR29185	SENSOR FUEL LEVEL	油位传感器	AR	
0212KTU-09	985515	WING TANK FUEL-QUANTITY	大翼油箱燃油量探	AR	
642M3002-503	5530001	FAN COWL	风扇整流罩	AR	
642M3001-505	5529001	FAN COWL	风扇整流罩	AR	
642M3001-503	5531001	FAN COWL	风扇整流罩	AR	
642M3002-505	5532001	FAN COWL	风扇整流罩	AR	
622-5137-601	6491	ANTENNA RADIATOR	气象雷达天线	AR	SV
201122008	CWDD-DH18	DOOR UPLOCK	舱门上位锁	AR	
A25434006-3000	H3354	EMER BRK DUAL DISTR VALVE	应急刹车双重分配	AR	
114087007	DH-2798-0	DOOR BY-PASS VALVE MLG	主起落架舱门旁通	AR	
S4-340132	02567	SAFETY-VALVE	安全活门	AR	
S4-3500711	1106	GROUND SERVICE MANIFO	地面勤务总管	AR	
A25315-1	H2979	PARKING BRAKE VALVE	停留刹车活门	AR	
753D0000-01	81211-658	HEAT EXCHANGER	热交换器	AR	SV
753C0000-01	04801	HEAT EXCHANGER	热交换器	AR	
754D0000-01	81212-656	HEAT EXCHANGER MAIN	热交换器	AR	SV
754C0000-01	05223	HEAT EXCHANGER MAIN	热交换器	AR	SV
14403-001	811	WASTE TANK	污水箱	AR	
35-0F5-1000	0F5013887	BOARD-ANNUNCIATOR LIGHT	信号灯测试板	AR	
35-0F5-1000	0F5013894	BOARD-ANNUNCIATOR LIGHT	信号灯测试板	AR	
35-0F5-1000	0F5013901	BOARD-ANNUNCIATOR LIGHT	信号灯测试板	AR	
35-0F5-1000	0F5013889	BOARD-ANNUNCIATOR LIGHT	信号灯测试板	AR	
35-0F5-1000	0F5013946	BOARD-ANNUNCIATOR LIGHT	信号灯测试板	AR	
35-0F5-1000	0F5013891	BOARD-ANNUNCIATOR LIGHT	信号灯测试板	AR	
35-0F5-1000	0F5013900	BOARD-ANNUNCIATOR LIGHT	信号灯测试板	AR	
35-0F5-1000	0F5013890	BOARD-ANNUNCIATOR LIGHT	信号灯测试板	AR	
35-0F5-1000	0F5013888	BOARD-ANNUNCIATOR LIGHT	信号灯测试板	AR	
35-0F5-1000	0F5013892	BOARD-ANNUNCIATOR LIGHT	信号灯测试板	AR	
35-0F5-1000	0F5013896	BOARD-ANNUNCIATOR LIGHT	信号灯测试板	AR	
35-0F5-1000	0F5013898	BOARD-ANNUNCIATOR LIGHT	信号灯测试板	AR	
35-0F5-1000	0F5013895	BOARD-ANNUNCIATOR LIGHT	信号灯测试板	AR	

35-0F5-1000	0F5013886	BOARD-ANNUNCIATOR LIGHT	信号灯测试板	AR	
35-0F5-1000	0F501391	BOARD-ANNUNCIATOR LIGHT	信号灯测试板	AR	
8410B2-4-90	8410B2-37	CAMERA GALLEY CDSS	厨房摄像头	AR	SV
8410B2-4-90	8410B2-38	CAMERA GALLEY CDSS	厨房摄像头	AR	SV
Z120H0040110	01118	CIDS AFT ATTND PNL	后乘务员面板	AR	
5XA005033-00	2126	LIGHT CONTROLLER	灯光控制器	AR	
5XA005032-01	1127	LIGHT CONTROLLER	灯光控制器	AR	
5XA005033-00	2130	LIGHT CONTROLLER	灯光控制器	AR	
3001-01-111	9806-0625	ACCELEROMETER	三轴加速度计	AR	SV
DVE90-06	2048	ELECTROVANNE VAVLE OXYGEN	供氧电磁阀	AR	
801B4400-01	U1862	SHAFT ASSY	扭力轴	AR	
801B4400-01	U1863	SHAFT ASSY	扭力轴	AR	
801B0500-01	U1831	SHAFT ASSY	扭力轴	AR	
801B0500-01	U1839	SHAFT ASSY	扭力轴	AR	
801B4800-01	U1838	SHAFT ASSY	扭力轴	AR	
801B4700-01	U1846	SHAFT ASSY	扭力轴	AR	
801B0700-01	U1838	SHAFT ASSY	扭力轴	AR	
801B0600-01	U1832	SHAFT ASSY	扭力轴	AR	
801B4600-02	U1780	SHAFT ASSY	扭力轴	AR	
801B4600-02	U1781	SHAFT ASSY	扭力轴	AR	
114086001	CWDD-DH9	CUT-OUT VALVE	关断活门	AR	
S4-3500711	1110	MANIFOLO GROUND SERVICE	渗漏测量总管	AR	
114083003	CWDD-DH16	VALVE SEL-HYDR-VENT	旁通活门	AR	
114087007	DH-2646-C	DOOR BY-PASS VALVE MLG	主起落架舱门旁通	AR	
114083003	CWDD-DH12	VALVE SEL-HYDR-VENT	旁通活门	AR	
QA07739	RE2-3477	RESERVOIR PRESSURE UNIT	油箱压力组件	AR	
201122008	CWDD-DH19	DOOR UPLOCK	舱门上位锁	AR	
6730C010000	00214	FAN AIR VALVE	风扇气动活门	AR	
6730C010000	00215	FAN AIR VALVE	风扇气动活门	AR	
6740E010000	00144	OVER PRESSURE VALVE	过压活门	AR	
6740E010000	01976	OVER PRESSURE VALVE	过压活门	AR	
S4-3500712	0330	MAINFOLO GROUND SERVICE	渗漏总管	AR	
114087007	DH-2103-C	VALVE SEL-HYDK-BYPASS	旁通活门	AR	
QA05561	RG4-5242	FILTER HYDRAULIC	液压油滤	AR	
1263A0000-02	00542	ACM	空气循环机	AR	
1263A0000-02	00661	ACM	空气循环机	AR	
QA05604	RG4-3282	FILTER HYDRAULIC	液压油滤	AR	
RD-AX1301-2E	C988739	MAIN MULTIPLEXER	主数据选择器	AR	
Z130H0096110	00981	CIDS FWD ATTND PNL	前乘务员面板	AR	
2LA005543-10	601	FLOODLIGHT UNIT, RH	右侧泛光灯组件	AR	
2LA005541-10	1751878	FLOODLIGHT UNIT, RH	右侧泛光灯组件	AR	
833A2400-02	U2429	TORQUE SHAFT	扭力轴	AR	
910030-5086	2023	DIU	数字接口组件	AR	
630CC01Y1	6396	S. P. NO CONTACTOR	接触器	AR	
630CC01Y1	6403	S. P. NO CONTACTOR	接触器	AR	
630CC01Y1	6408	S. P. NO CONTACTOR	接触器	AR	
630CC01Y1	6436	S. P. NO CONTACTOR	接触器	AR	
640CC01Y1	7828	S. P. NO CONTACTOR	接触器	AR	
640CC01Y1	7857	S. P. NO CONTACTOR	接触器	AR	
640CC01Y1	8017	S. P. NO CONTACTOR	接触器	AR	
640CC01Y1	8018	S. P. NO CONTACTOR	接触器	AR	

640CC01Y1	8019	S. P. NO CONTACTOR	接触器	AR	
640CC01Y1	8020	S. P. NO CONTACTOR	接触器	AR	
564CA02FY1	3412	CONTACTOR	接触器	AR	
564CA02FY1	3413	CONTACTOR	接触器	AR	
564CA01Y1	9844	S. P. NO CONTACTOR	接触器	AR	
564CA01Y1	9845	S. P. NO CONTACTOR	接触器	AR	
564CA01Y1	10450	S. P. NO CONTACTOR	接触器	AR	
558CA01Y1	6071	T. P. S. T NO CONTACTOR	接触器	AR	
558CA01Y1	6072	T. P. S. T NO CONTACTOR	接触器	AR	
558CA01Y1	6073	T. P. S. T NO CONTACTOR	接触器	AR	
558CA01Y1	6074	T. P. S. T NO CONTACTOR	接触器	AR	
558CA01Y1	6075	T. P. S. T NO CONTACTOR	接触器	AR	
558CA01Y1	6076	T. P. S. T NO CONTACTOR	接触器	AR	
655CC01Y1	2068	SP CONTACTOR	单级接触器	AR	
630CC01Y1	6435	S. P. NO CONTACTOR	接触器	AR	
PG1152BC02	0610E636	ADM	大气数据模块	AR	
PG1152BC02	00062291	ADM	大气数据模块	AR	
7304-01-02	7170	UETECTION UNIT-FIRE	火警探测组件	AR	
7304-01-02	7838	UETECTION UNIT-FIRE	火警探测组件	AR	
PG1152AC03	96095038	ADM	大气数据模块	AR	
PG1152AC03	96095058	ADM	大气数据模块	AR	
PG1152AC03	96095050	ADM	大气数据模块	AR	
PG1152AC03	96095042	ADM	大气数据模块	AR	
PG1152AC03	95054474	ADM	大气数据模块	AR	
PG1152AC03	95054478	ADM	大气数据模块	AR	
800-160-201	0805045	VEDIO PLAYER	娱乐视频播放器	AR	
800-160-201	0805050	VEDIO PLAYER	娱乐视频播放器	AR	
1-001-0102-0296	M8956496	STATIC INVERTER	静变流器	AR	
1663214301	B3139	PHC	探头加温计算机	AR	SV
CMK80-01	2196	PRESSURE SWITCH	压力电门	AR	
7530334	20487	SELECTOR-TEMP-CARGO	货舱温度选择器	AR	
330TS08Y	615	ENG/APU FIRE PANEL	火警面板	AR	
980-4700-003	3734	FDR	飞行数据记录器	AR	SV
2LA005542-20	1169	FLOOD LIGHT UNIT	主仪表灯面板	AR	
528-80	3205	LIGHT NANIGATION	导航灯	AR	
3106-89	1274	LOCALIZER ANTENNA	航向天线	AR	
3107-89	1728	ANTENNE MARKER	指点信标天线	AR	
8ES005309-00	2866	POWER SUPPLY UNIT	电源供应组件	AR	
8ES005309-00	3351	POWER SUPPLY UNIT	电源供应组件	AR	
22715-000-02	H0763	DOOR ACTUATOR	舱门作动筒	AR	
758A0000-02	02130	BYPASS VALVE	旁通活门	AR	SV
758A0000-02	01983	BYPASS VALVE	旁通活门	AR	SV
747A0000-03	02019	WATER EXTRACTOR	水分离器	AR	
747A0000-03	02031	WATER EXTRACTOR	水分离器	AR	
778A0200-03	N/A	PIPE ASSY	管组件	AR	SV
778A0200-03	N/A1	PIPE ASSY	管组件	AR	SV
763A0000-03	10815	SENSOR TEMPERATURE	温度传感器	AR	SV
763A0000-03	10831	SENSOR TEMPERATURE	温度传感器	AR	SV
763A0000-03	10947	SENSOR TEMPERATURE	温度传感器	AR	SV
763A0000-03	10948	SENSOR TEMPERATURE	温度传感器	AR	SV
763A0000-03	10950	SENSOR TEMPERATURE	温度传感器	AR	SV

763A0000-03	11204	SENSOR TEMPERATURE	温度传感器	AR	SV
767A0000-04	02298	SENSOR TEMPERATURE	温度传感器	AR	
767A0000-04	02334	SENSOR TEMPERATURE	温度传感器	AR	
766A0000-01	02431	SENSOR TEMPERATURE	温度传感器	AR	
766A0000-01	02440	SENSOR TEMPERATURE	温度传感器	AR	
716TS06Y	1425	TRANSMITTER UNIT	前轮转弯传感器	AR	
711TS06Y	1738	TRANSMITTER UNIT	前轮转弯传感器	AR	SV
4063-18221	0417365	ISOLATION VALVE	隔离活门	AR	SV
VD3810	05012826	FLOW FAN	风扇	AR	SV
VD3920	08064379	FAN EXTRACTION	风扇	SV	SV
C20215000	01175	BEK PEDAL XMTR UNIT	刹车脚踏传感器	AR	SV
769106A	CWDD-DH5-	RAT GND CHEC MODULE	RAT地面检查模块	AR	
70200	3782	SESERVOIR REPRESSURE VALV	油箱释压阀	AR	
C51LM0020	2512	VALVE RESERVOIR FILL	加油活门	AR	
18301905-1	44529D	AIR PRESSURE GAGE (YELLOW)	液压表	AR	
18301905-1	46115D	AIR PRESSURE GAGE (BLUE)	液压表	AR	
18301905-1	46100D	AIR PRESSURE GAGE (GREEN)	液压表	AR	
70200	3768	SESERVOIR REPRESSURE VALV	油箱释压阀	AR	
70200	3775	SESERVOIR REPRESSURE VALV	油箱释压阀	AR	
QA05797	RG42538	LOW PRESSURE FILTER	释压活门	AR	
201117017	CWDD-DH94	UPLOCK MALG	主起落架上位锁	AR	
201117018	CWDD-DH88	UPLOCK MALG	主起落架上位锁	AR	
114161003	CWDD-DH33	RAT TACK HYDRAULICRAT	收放控制组件	AR	
SB209L1A1-1484	51344	ACCUMULATOR HYDRAULIC	蓄压器	AR	
18330904-2	060600	PRESSURE GAGE	压力表	AR	SV
SB209L1A1-1484	103525	ACCUMULATOR HYDRAULIC	蓄压器	AR	
18330904-2	074842	PRESSURE GAGE	压力表	AR	SV
0212KTU-11	985592	WING TANK FUEL-QUANTITY I	大翼油箱燃油量探	AR	
0212KTU-17	985688	WING TANK FUEL-QUANTITY I	大翼油箱燃油量探	AR	
3530000-1	FRTR29182	WING TANK FUEL LEVEL SENS	大翼油箱油位传感	AR	
3530000-1	FRTR29196	WING TANK FUEL LEVEL SENS	大翼油箱油位传感	AR	
3540000-1	C12104230	TEMPERATURE SENSOR	温度传感器	AR	
3540000-1	FRTR3659A	TEMPERATURE SENSOR	温度传感器	AR	
ZRA1990030	4078	LABEM PRESSURE TRANSDUCEP	压力传感器	AR	
ZRA380-00	ASA02681	LABEM PRESSURE TRANSDUCEP	压力传感器	AR	
AR4714-7	H-E6175	STRIKE ELECTRIC	静电释放装置	SV	SV
3108-89	997	VOR ANTENNA	甚高频全向信标天	AR	
C19BQ0016	030	RESERVOIR HYDRAULIC	液压油箱	AR	
70400	2977	VALVE RELIEF	释压活门	AR	
322000M02	1951	TRANSDUCEER UNIT	传感器组件	AR	SV
322000M02	1976	TRANSDUCEER UNIT	传感器组件	AR	SV
6423802517	2203001	DOOR OF THRUST REVERSER	反推	SV	
6423801515	2204001	DOOR OF THRUST REVERSER	反推	AR	
321-400-707-0	4725	COWL OPEN ACT	反推打开作动筒	SV	SV
6423802517	2205001	DOOR OF THRUST REVERSER	反推	AR	
321-400-707-0	4161	COWL OPEN ACT	反推打开作动筒	SV	SV
6423801515	2202001	DOOR OF THRUST REVERSER	反推	SV	
9028A0004-01	08195	PPU-POSITION PICK-OFF UN	不对称传温传感器	AR	
9028A0004-01	08198	PPU-POSITION PICK-OFF UN	不对称传温传感器	AR	
QA05593	RG5-4664	FILTER HYDRAULIC	液压油滤	AR	
C24839010-2	H1321	MANIFOLO ALTERNATE BRAKE	备用刹车伺服活门	AR	

C20103500	07575	BRAKE SERVOVALVE	刹车伺服活门	AR	
C20103500	07577	BRAKE SERVOVALVE	刹车伺服活门	AR	
C25243002-2	H1374	SAFETY VALVE	安全活门	AR	
C25243002-2	H1376	SAFETY VALVE	安全活门	AR	
C24840010-2	H1315	MANIFOLO ALTERNATE BRAKE	备用刹车伺服活门	AR	
C20103500	07563	BRAKE SERVOVALVE	刹车伺服活门	AR	
C20103500	07574	BRAKE SERVOVALVE	刹车伺服活门	AR	
C25243002-2	H1350	SAFETY VALVE	安全活门	AR	
C25243002-2	H1351	SAFETY VALVE	安全活门	AR	
31077-111	7890	SPOILER SERVO CONTROL	扰流板伺服控制器	AR	
31077-111	7896	SPOILER SERVO CONTROL	扰流板伺服控制器	AR	
31077-111	7895	SPOILER SERVO CONTROL	扰流板伺服控制器	AR	
31077-111	7894	SPOILER SERVO CONTROL	扰流板伺服控制器	AR	
31077-111	7892	SPOILER SERVO CONTROL	扰流板伺服控制器	AR	
31077-111	7891	SPOILER SERVO CONTROL	扰流板伺服控制器	AR	
31077-111	8659	SPOILER SERVO CONTROL	扰流板伺服控制器	AR	
31077-111	7893	SPOILER SERVO CONTROL	扰流板伺服控制器	AR	
31077-111	7897	SPOILER SERVO CONTROL	扰流板伺服控制器	AR	
31077-111	7900	SPOILER SERVO CONTROL	扰流板伺服控制器	AR	
828A0000-02	T3275	BEVEL GBARBOX	斜齿轮箱	AR	
828A0000-02	T3276	BEVEL GBARBOX	斜齿轮箱	AR	
828A0000-02	T3277	BEVEL GBARBOX	斜齿轮箱	AR	
828A0000-02	T3278	BEVEL GBARBOX	斜齿轮箱	AR	
788A0000-02	T1662	GEARBOX	角齿轮箱	AR	
788A0000-02	T1663	GEARBOX	角齿轮箱	AR	
0212KTU-10	985707	WING FUEL QUANTITY TANK I	机翼油箱油箱探测	AR	
0212KTU-11	985591	WING FUEL QUANTITY TANK I	机翼油箱油箱探测	AR	
HTE690047	FR268	SWITCH PRESSURE HOT AIR	热空气压力电门	AR	
HTE420044	FR135BA	PRESSURE HOLDING VALVE	稳压阀	AR	
HTE420044	FR136BA	PRESSURE HOLDING VALVE	稳压阀	AR	
HTE310021	FR164BA	AIR INLET VALVE	空气进气活门	AR	
HTE310021	FR169BA	AIR INLET VALVE	空气进气活门	AR	
HTE900087-001	FRTR187AV	TRANSFOR VALVE	传输活门	AR	
HTE900087-001	FRTR223AV	TRANSFOR VALVE	传输活门	AR	
HTE900087-001	FRTR232AV	TRANSFOR VALVE	传输活门	AR	
HTE900087-001	FRTR233AV	TRANSFOR VALVE	传输活门	AR	
9508175	FRTR263AV	VENT VALVE	通气浮子活门	AR	
9508175	FRTR327AV	VENT VALVE	通气浮子活门	AR	
9508175	FRTR330AV	VENT VALVE	通气浮子活门	AR	
9508175	FRTR339AV	VENT VALVE	通气浮子活门	AR	
520913	G0130283	CONSTANT SPEED MOTOR GENI	恒速马达发电机	AR	SV
QA05561	RF12-2154	LOW PRESSURE FILTER ASSY	低压油滤组件	AR	
TM113-1	16242	TRANSDUCER AND SWITCH TEM	传感器和温度电门	AR	
TM113-1	2232	TRANSDUCER AND SWITCH TEM	传感器和温度电门	AR	
TM113-1	2301	TRANSDUCER AND SWITCH TEM	传感器和温度电门	AR	
C93R38-606	D02417	FUEL PUMP CANISTER	燃油泵保护罩	AR	
C93R38-606	20214	FUEL PUMP CANISTER	燃油泵保护罩	AR	
C93R38-601	20018	FUEL PUMP CANISTER	燃油泵保护罩	AR	
C93R38-601	20021	FUEL PUMP CANISTER	燃油泵保护罩	AR	
C93R38-606	20213	FUEL PUMP CANISTER	燃油泵保护罩	AR	
C93R38-606	20313	FUEL PUMP CANISTER	燃油泵保护罩	AR	

HTE900135	FRTR032A	FUEL CROSSFEED VALVE	燃油交输活门	AR	
20700-300	976	APU FUEL LOW PRESSURE VALVE	燃油低压电门	AR	
833B1000-01	U1769	SHAFT ASSY	扭力轴	AR	
L95F50-603	22703	OVERPRESSURE PROTECTOR	过压保护器	AR	SV
L95F50-603	22655	OVERPRESSURE PROTECTOR	过压保护器	AR	SV
827A0000-02	T835	TEE GEATHAT	型齿轮箱	AR	
521A0200-01	03488	ADAPTER PPU-ASSYPPU	适配器组件	AR	
521A0200-01	03489	ADAPTER PPU-ASSYPPU	适配器组件	AR	
31075-840	3852	ELEVATOR SERVO CONTROL	升降舵伺服控制器	AR	SV
31075-840	10714	ELEVATOR SERVO CONTROL	升降舵伺服控制器	AR	SV
833A1500-01	U1840	SHAFT ASSY	轴组件	AR	
833A1400-01	U1835	SHAFT ASSY	轴组件	AR	
833A1400-01	U1836	SHAFT ASSY	轴组件	AR	
D2907017500200	1916	RESERVOIR PRESSURE UNIT	油箱压力组件	AR	
HTE900095	FR146BA	TRANSFER VALVE DRIVE	传输活门驱动器	AR	
HTE900095	FR141BA	TRANSFER VALVE DRIVE	传输活门驱动器	AR	
HTE900096	FR146BA	TRANSFER VALVE DRIVE	传输活门驱动器	AR	
HTE900096	FR147BA	TRANSFER VALVE DRIVE	传输活门驱动器	AR	
749198-2	H0475	HYDRAULIK RESERVOIR	液压油箱	AR	
831A0000-05	03873	WING TIP BRAKE	翼尖刹车	AR	
831A0000-05	03871	WING TIP BRAKE	翼尖刹车	AR	
114170008	CWDD-DH48	SELECTOR VALVE MANIFOLD	选择活门总管	AR	
L95F50-603	22454	OVERPRESSURE PROTECTOR	过压保护器	AR	SV
330400M01	1775	THROTTLE CONTROL UNIT	扭力控制组件	AR	
330400M01	1812	THROTTLE CONTROL UNIT	扭力控制组件	AR	
31073-110	14559	AILERON SERVOCONTROL	副翼伺服作动器	AR	SV
31073-110	3301	AILERON SERVOCONTROL	副翼伺服作动器	AR	SV
31073-110	3825	AILERON SERVOCONTROL	副翼伺服作动器	AR	SV
680203037A	0216	RAM AIR TURBINE	冲压空气涡轮	AR	SV
520550	F9412559	RAT PUMP-HYDRAULICRAT	液压泵	AR	
972C10-1	1031	SHUTTLE VALVE	换向阀	AR	
FRH230003C	FR2608L	PRESSURE REAL	减压阀	AR	
CT141	N/A	AIR INLET CHECK VALVE	单向活门	AR	
114160005	HAZ10347	ACK ELECTIONACK	发射器	AR	
682007004	UEDH37098	RAT CONTROL PANELRAT	控制面板	AR	
C19DS0016	029	RESERVOIR HYDRAULIC	液压油箱	AR	
C19DS0026	029	RESERVOIR HYDRAULIC	液压油箱	AR	
72CF8945-00	486	FLEXIBLE CONTROL ASSEMBLY	柔性控制组件	AR	
72CF8944-00	650	FLEXIBLE CONTROL ASSEMBLY	柔性控制组件	AR	
72CF8945-00	534	FLEXIBLE CONTROL ASSEMBLY	柔性控制组件	AR	
72CF8944-00	7422	FLEXIBLE CONTROL ASSEMBLY	柔性控制组件	AR	
2LA005413-01	909	OVERWING EMERGENCY LIGHT	大翼应急灯	AR	
DK120	ST45050	ULB OF THE CUR	水下定位信标	AR	SV
DK120-90	AT151845	ULB OF THE CUR	水下定位信标	AR	SV
ZCV63-6	804168	CHECK VALVE	换向阀	AR	
831A0000-05	03881	WING TIP BRAKE	翼尖刹车	AR	
31075-840	4579	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
31075-840	9408	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
693335	MX607457	PUMP-ELECTRIC	电动泵	AR	SV
693335	MX600262	PUMP-ELECTRIC	电动泵	AR	SV
986F12-1	2024	PRESSURE SEVICE CHECK VALVE	压力勤务单向活门	AR	

3214-54-10	1163	EMERGENCY POWER SUPPLY UN	应急电源供应组件	AR	
14320-002C1	409	TOILET ASSY	马桶	AR	
14330-062	140265	MOTOR	马达	AR	
14330-050	6534	FLUSH VALVE ASSEMBLY	充流活门组件	AR	SV
15800-348A	97088212	VALVE ASSY-RINSE	冲洗活门	AR	
14330-144	792	FLUSH CONTROL UNIT	厕所冲流控制组件	AR	
31073-110	3826	AILERON SERVOCONTROL	副翼伺服作动器	AR	SV
831A0000-05	03870	WING TIP BRAKE	翼尖刹车	AR	
769B0000-01	02002	CHECK VALVE	单向阀	AR	
769B0000-01	02004	CHECK VALVE	单向阀	AR	
D290-70713-000-00	407	MEASUREMENT SOLENOIDVALVE	渗漏电磁组件	AR	
D290-70194-026-00	7507978	BLUE SYSTEM HP MANIFOLD	蓝系统高压总管组	AR	
QA06304	RG5-3191	FILTER HYDRAULIC	液压油滤	AR	
ZCV66-1	71203326	VALVE	活门	AR	
P7119HP	N/A	SAMPING VALVE	取样活门	AR	
ZCV64-10	7012178	CHECK VALVE	单向阀	AR	
S4-3400950-06	02433	VALVE 3/2 WAY	活门	AR	
BHC1060-04	3137	PRIORITY VALVE	优先活门	AR	SV
CZ9284E	HEK17170	PRESSURE TRANSDUCER	压力传感器	AR	SV
114151004	CWDD-DH29	VALVE RELIEF	释压活门	AR	
S4-3401190	02433	VALVE WAY	电磁活门	AR	
50-2-3100-00	26125	SWITCH PRESSURE HYD	液压压力电门	AR	SV
D290-70207-020-00	7536485	GREEN SYSTEM HP MANIFOLD	绿系统高压总管组	AR	
D290-70171-000-00	1771	MEASUREMENT SOLENOIDVALVE	渗漏电磁组件	AR	
S4-3400950-06	02444	VALVE	活门	AR	
114151004	CWDD-DH29	VALVE RELIEF	减压阀	AR	
QA06304	RG4-2605	FILTER	油滤	AR	
CZ9DM6A	HAK23691	PRESSURE TRANSDUCER	压力传感器	AR	
50-2-3100-00	26048	SWITCH PRESSURE HYD	液压压力电门	AR	SV
ZCV67-1	80424409	VALVE	活门	AR	
P7119HP	N/A1	SAMPING VALVE	取样活门	AR	
SC4700-5	5100	YAW DAMPER SERVOACTUATOR	偏航阻尼作动器	AR	SV
SC4700-5	11414	YAW DAMPER SERVOACTUATOR	偏航阻尼作动器	AR	SV
791A0000-06	U2012	1# FLAP ACTUATOR	号襟翼作动器	AR	
8420B1-201	8420B1-20	LCD COMPUTER CDSSSDSS LCI	计算机	AR	
8450B5	8450B5-15	HINGE ASSY	铰链组件	AR	
212096-3-3	S3218014	HR/SAT AODIO SELECT PANEL	高频卫星选择面板	AR	
12664	9814989	CHECK VALVE	单向阀	AR	
2439-89-03	243989-51	ATC ANTENNA	空中交通管制天线	AR	
710100-2	4V0D0	IRIDIUM COMMUNICATION SYS	铱星通讯系统	AR	
6137-3	1133	RUDDER TRIM ACTUATOR	方向舵作动器	AR	
SB209L1A1-1484	41348	ACCUMULATOR	蓄压器	AR	
18330904-2	N/A	PRESSURE GAGE	压力表	AR	SV
ZCV64-10	80311935	CHECK VALVE	单向阀	AR	
ZCV63-6	80526233	CHECK VALVE	单向阀	AR	
789A0000-02	U1867	LINE GEARBOX	线齿轮箱	AR	
ZCV63-6	80416285	CHECK VALVE	单向阀	AR	
ZCV63-6	71216239	CHECK VALVE	单向阀	AR	
ZCV63-6	80526147	CHECK VALVE	单向阀	AR	
ZCV63-6	80416141	CHECK VALVE	单向阀	AR	
ZCV63-6	8041673	CHECK VALVE	单向阀	AR	

ZCV63-6	80416205	CHECK VALVE	单向阀	AR	
ZCV63-4	80413313	CHECK VALVE	单向阀	AR	
ZCV63-4	80423455	CHECK VALVE	单向阀	AR	
ZCV63-4	80423424	CHECK VALVE	单向阀	AR	
ZCV64-10	7012131	CHECK VALVE	单向阀	AR	
ZCV63-8	8042854	CHECK VALVE	单向阀	AR	
ZCV64-12	80413441	CHECK VALVE	单向阀	AR	
ZCV64-12	80423333	CHECK VALVE	单向阀	AR	
ZCV64-10	80311957	CHECK VALVE	单向阀	AR	
450-2-3100-00	28094	PRESSURE SWITCH	压力电门	AR	SV
D2727000700200	N/A	CENTERING SPING ROD	定中弹簧杆	AR	
ZCV63-4	80413319	CHECK VALVE	单向阀	AR	
ZCV63-4	80218666	CHECK VALVE	单向阀	AR	
ZCV63-6	80416182	CHECK VALVE	单向阀	AR	
ZCV64-10	80413186	CHECK VALVE	单向阀	AR	
810A0000-04	02930	RUDDER SERVO CONTROL	方向舵伺服控制器	AR	
810A0000-05	03443	RUDDER SERVO CONTROL	方向舵伺服控制器	AR	SV
810A0000-05	12557	RUDDER SERVO CONTROL	方向舵伺服控制器	AR	SV
801A0800-01	U1837	SHAFT ASSY	扭力轴	AR	
801A0300-01	U1865	SHAFT ASSY	扭力轴	AR	
789A0000-02	U1868	SHAFT ASSY	扭力轴	AR	
564CA01Y1	9856	CONTACTOR 60A60A	插头	AR	
564CA01Y1	9857	CONTACTOR 60A60A	插头	AR	
310ZN01Y01	3565	UNBALANCE DETECTOR	不平衡探测器	AR	
DHE1141	98-19	DETECTOR	探测器	AR	SV
TA01Z6005	2946	TRANSFORMATEUR	变压器	AR	
190QA01	3610	CURRENT TRANSFORMER	电流整流器	AR	
564CA01Y1	9859	CONTACTOR 60A60A	插头	AR	
310ZN01Y01	3563	UNBALANCE DETECTOR	不平衡探测器	AR	
DHE1141	98-13	DETECTOR	探测器	AR	SV
DHE1141	98-17	DETECTOR	探测器	AR	SV
DHE1141	99-41	DETECTOR	探测器	AR	SV
190QA01	3608	CVRRENT TRANSFORMER	电流整流器	AR	
D9255003200200	AF1972	800VU PANEL ASSY REFUEL80	加油面板组件	AR	
1058-34	398	TPIUTPIS	探测组件	AR	
QA05797	RG3-4351	FILTER ASSY HYDRAULIC	油滤组件	AR	
3025	2016	STATIC CONVERTER	静变流机	AR	
D9550011400400	FR1909	114VU FLAP CONTROL ASSY1	襟翼控制组件	AR	
801C1900-02	U3806	STEADY BEARING ASSY	支承轴承	AR	
801C1900-02	U3807	STEADY BEARING ASSY	支承轴承	AR	
A25316-101	H2027	SHUTTLE VALVE	关断活门	AR	
292-1-3100-00	02041	WWITCH PRESSURE	压力电门	AR	
D323-70101-000-00	627	MANIFOLD ASSY	总管组件	AR	
762080-1	H0703	SAFETY VALVE	安全活门	AR	SV
762080-1	H0710	SAFETY VALVE	安全活门	AR	SV
801A1500-01	U1841	SHAFT ASSY	扭力杆	AR	
801C1900-02	U3708	STEADY BEARING ASSY	支承轴承	AR	
801A1500-01	U1843	SHAFT ASSY	扭力杆	AR	
801C1900-02	U3725	STEADY BEARING ASSY	支承轴承	AR	
790A0000-02	T2404	BEVEL GBARBOX	锥形齿轮箱	AR	
790A0000-02	U2814	BEVEL GBARBOX	锥形齿轮箱	AR	

D290-70235-004-00	7548405	MANIFOLD ASSY	总管组件	AR	
ZCV64-20	8031782	CHECK VALVE	单向阀	AR	
D290-70234-000-00	638	UNION SPECIAL	接头	AR	
801B4700-01	U1843	SHAFT ASSY	传动轴	AR	
801C1700-02	U20298	STEADY BEARING ASSY	支撑轴承	AR	
801C1700-02	U20336	STEADY BEARING ASSY	支撑轴承	AR	
801C1700-02	U20343	STEADY BEARING ASSY	支撑轴承	AR	
801C1700-02	U20333	STEADY BEARING ASSY	支撑轴承	AR	
801C1700-02	U20289	STEADY BEARING ASSY	支撑轴承	AR	
801C1700-02	U18680	STEADY BEARING ASSY	支撑轴承	AR	
801B4800-01	U1834	SHAFT ASSY	传动轴	AR	
790A0000-02	U2813	BEVEL GEARBOX	锥形齿轮箱	AR	
2439-89-03	243989-51	DMEDME	天线	AR	
2439-89-03	243989-54	DMEDME	天线	AR	
801C1700-02	U20344	STEADY BEARING ASSY	支承轴承	AR	
801C1700-02	U20341	STEADY BEARING ASSY	支承轴承	AR	
801C1700-02	U20342	STEADY BEARING ASSY	支承轴承	AR	
801C1700-02	U18681	STEADY BEARING ASSY	支承轴承	AR	
801C1700-02	U20294	STEADY BEARING ASSY	支承轴承	AR	
801C1700-02	U20290	STEADY BEARING ASSY	支承轴承	AR	
801C1700-02	U20340	STEADY BEARING ASSY	支承轴承	AR	
801C1700-02	U20339	STEADY BEARING ASSY	支承轴承	AR	
801C1700-02	U20349	STEADY BEARING ASSY	支承轴承	AR	
801A0300-01	U1866	STEADY BEARING ASSY	支承轴承	AR	
801A0800-01	U1835	STEADY BEARING ASSY	支承轴承	AR	
801B1400-01	U1832	STEADY BEARING ASSY	支承轴承	AR	
801A0200-01	U1860	STEADY BEARING ASSY	支承轴承	AR	
801A0200-01	U1861	STEADY BEARING ASSY	支承轴承	AR	
D2907017601400	N/A	MANIFOLD ASSY	总管组件	AR	
ZCV63-6	8041676	CHECK VALVE	单向活门	AR	
564CA01Y1	9626	CONTACTOR 60A60A	接触器	AR	
564CA01Y1	9775	CONTACTOR 60A60A	接触器	AR	
564CA01Y1	9782	CONTACTOR 60A60A	接触器	AR	
D3231006200000	047	BELLCRANK ASSY	曲柄组件	AR	
D3231005120000	036	MOUNT	支座	AR	
S1821502-02	LX1100019	EMERGENCY LOCATOR TRANSMI	应急定位发射器	SV	SV
2598D	4918	LIGHTING TRANSFORMER	照明变压器	AR	
2598D	4919	LIGHTING TRANSFORMER	照明变压器	AR	
FE171-000	FR1001	REGULATOR CABLE TENSION	钢索张力调节器	AR	
87232323V00	VL2064002	SENSOR-TEMP-DUCT	管道温度传感器	AR	
791A0000-06	U2011	FLAP ACTUATOR	襟翼作动器	AR	
792A0000-07	U2017	FLAP ACTUATOR	襟翼作动器	AR	
792A0000-07	U2018	FLAP ACTUATOR	襟翼作动器	AR	
793A0000-07	U2012	FLAP ACTUATOR	襟翼作动器	AR	
793A0000-07	U2088	FLAP ACTUATOR	襟翼作动器	AR	
794A0000-06	U2014	FLAP ACTUATOR	襟翼作动器	AR	
794A0000-06	U2015	FLAP ACTUATOR	襟翼作动器	AR	
748A0000-08	02088	VALVE ANTI ICING	防冰活门	AR	
748A0000-08	02029	VALVE ANTI ICING	防冰活门	AR	
6-1404-0000-4	040106	PUMP-HAND-HYDRAULIC	手动液压泵	AR	SV
3508802-29	FRTR159A	HOUSING INDICATOR, MAGNET	油尺	AR	

FRH050002	N/A	HOUSING INDICATOR, MAGNET	油尺	AR	
D324-70104-002-00	7524869	MANIFOLD ASSY	总管组件	AR	
CZ9284E	HEK20895	PRESSURE TRANSDUCER	压力电门	AR	SV
CZ9DW6	HAK5623	PRESSURE TRANSDUCER	压力电门	AR	
D2907017800000	635	UNION SPECIAL	接头	AR	
14320-002C2	639	TOLET ASSY	马桶	AR	
15800-358	25963	VALVE ASSY RINSE	清洗活门	AR	SV
14330-144	4564	FLUSH CONTROL UNIT	厕所冲洗控制组件	AR	
14330-062	050751	MOTOR	马达	AR	
14330-050	11485	FLUSH VALVE ASSEMBLY	冲洗活门组件	AR	SV
14320-002C2	662	TOLET ASSY	马桶	AR	
15800-358	0427	VALVE ASSY RINSE	清洗活门	AR	SV
14330-050	6434	FLUSH VALVE ASSEMBLY	冲洗活门组件	AR	SV
14330-144	2386	FLUSH CONTROL UNIT	厕所冲洗控制组件	AR	
14330-062	140742	MOTOR	马达	AR	
642-2300-11	P2643	ENG AFT MOUNT ASSY	左发动机后吊点组	SV	
642-2000-15	P3249	AWD ENG MOUNT	左发动机前吊点	SV	SV
HTE510016	C062309	VALVE GAS CHARGING	充气活门	AR	SV
HTE510016	FRTR48	VALVE GAS CHARGING	充气活门	AR	SV
HTE510016	C173608	VALVE GAS CHARGING	充气活门	AR	SV
HTE690112	FRTR042	PRESSURE SWITCH	压力电门	AR	
70400	2978	VALVE RELIEF	释压活门	AR	
HTE690035-1	FRTR173	PRESSURE SWITCH	压力电门	AR	
70400	2870	VALVE RELIEF	释压活门	AR	
HTE690035-1	FRT165	PRESSURE SWITCH	压力电门	AR	
D2907019700800	7494659	MANIFOLD ASSY	总管组件	AR	
D290-70172-000-00	944	PTU MANIFOLDPTU	总管	AR	
A25313002	H3006	SELECTOR VALVE	选择活门	AR	
ZCV64-10	80413194	CHECK VALVE	单向活门	AR	
BHC1060-04	11570	VALVE PRIORITY	选择活门	AR	SV
1396B0000-01	00599	VALVE	活门	AR	SV
3901395	FRTR310AV	JET PUMP ASSY	引射泵	AR	
3901395	FRTR342BA	JET PUMP ASSY	引射泵	AR	
L83A13-610	36736	WATER DRAIN VALVE	排水活门	AR	
L83A13-610	36737	WATER DRAIN VALVE	排水活门	AR	
HTE69000-1	FRTR518AV	PRESS SWITCH MAIN PUMP	主泵压力电门	AR	SV
D282-70039-006-00	98052	APU FUEL-DRAIN/VENTAPU	排放口	AR	
D201094-D	NA	STATIC PROBE	静压探头	AR	
D201094-D	NA1	STATIC PROBE	静压探头	AR	
D201094-D	NA2	STATIC PROBE	静压探头	AR	
403VU	NA	403VU PANEL403VU	面板	AR	
23VU	NA	23VU PANEL23VU	面板	AR	
24VU	NA	24VU PANEL24VU	面板	AR	
108VU	NA	108VU PANEL108VU	面板	AR	
119VU	NA	119VU PANEL119VU	面板	AR	
500VU	NA	500VU PANEL500VU	面板	AR	
117VU	NA	117VU PANEL117VU	面板	AR	
402VU	NA	402VU PANEL402VU	面板	AR	
25VU	NA	25VU PANEL25VU	面板	AR	
50VU	NA	50VU PANEL50VU	面板	AR	
301VU	NA	301VU PANEL301VU	面板	AR	

40VU	NA	40VU PANEL40VU	面板	AR	
48VU	NA	48VU PANEL48VU	面板	AR	
058-001-00	4894	ROTARY SWITCH	旋转电门	AR	
111VU	NA	111VU PANEL111VU	面板	AR	
D0003000100100	686	RHEOSTAT	变阻器	AR	
54VU	NA	54VU PANEL54VU	面板	AR	
D0003000100000	4235	RHEOSTAT	变阻器	AR	
112VU	NA	112VU PANEL112VU	面板	AR	
D0003000100000	4156	RHEOSTAT	变阻器	AR	
115VU	NA	115VU PANEL115VU	面板	AR	
058-001-00	4896	ROTARY SWITCH	旋转电门	AR	
54VU	NA1	54VU PANEL54VU	面板	AR	
D0003000100000	4238	RHEOSTAT	变阻器	AR	
21VU	NA	21VU PANEL21VU	面板	AR	
058-001-00	4906	ROTARY SWITCH	旋转电门	AR	
35VU	NA	35VU PANEL35VU	面板	AR	
30VU	NA	30VU PANEL30VU	面板	AR	
058-003-00	8398	ROTARY SWITCH	旋转电门	AR	
058-003-00	8412	ROTARY SWITCH	旋转电门	AR	
110VU	NA	110VU PANEL110VU	面板	AR	
058-002-03	929	ROTARY SWITCH	旋转电门	AR	
22VU	NA	22VU PANEL22VU	面板	AR	
058-001-00	4916	ROTARY SWITCH	旋转电门	AR	
8VU	NA	8VU PANEL8VU	面板	AR	
058-003-00	7377	ROTARY SWITCH	旋转电门	AR	
058-003-00	7382	ROTARY SWITCH	旋转电门	AR	
058-003-00	7384	ROTARY SWITCH	旋转电门	AR	
058-003-00	7387	ROTARY SWITCH	旋转电门	AR	
HTE900133	FRTR034A	DEFUEL/TRANSFER VALVEHTE	抽油传输活门	AR	
9815715	FRTR042A	CENTER TANK PRESSURE REL	中央油箱是呀活门	AR	
2624-82	262482-97	ELT ANTENNAELT	应急定位器信号发射天线		
786A0000-12	0786A00L	PCU	动力控制组件	AR	
787A0000-07	0787A00L	BROCK VALVE	活门块	AR	
787A0000-07	0787A00L	BROCK VALVE	活门块	AR	
9028A0004-01	9028A00TV	PPU-POSITION PICK-OFF UN	位置反馈组件	AR	
9028A0004-01	9028A00TV	PPU-POSITION PICK-OFF UN	位置反馈组件	AR	
786A0000-12	01931	PCU	动力控制组件	AR	
787A0000-07	03899	VALVE BLOCK	活门块	AR	
787A0000-07	03919	VALVE BLOCK	活门块	AR	
9028A0004-01	05582	PPU-POSITION PICK-OFF UN	位置反馈组件	AR	
9028A0004-01	07566	PPU-POSITION PICK-OFF UN	位置反馈组件	AR	
D2907017100000	铭牌损伤	MEASUREMENT SOLENOIDVALVE	渗漏电磁组件	AR	
QA06304	RG53183	FILTER	油滤	AR	
ZCV67-1	16-102566	CHECK VALVE	单向活门	AR	
ZCV64-16	80424345	CHECK VALVE	单向活门	AR	
S4-3401760	01195	PILOT VALVE	先导阀	AR	
P7119HP	456790	SAMPING VALVE	取样活门	AR	
CZ9284E	HEK52279	PRESSURE TRANSDUCER	压力传感器	AR	SV
50-2-3100-00	9384	SWITCH PRESSURE HYD	压力电门	AR	SV
50-2-3100-00	11953	SWITCH PRESSURE HYD	压力电门	AR	SV
S43401610-01	01185	WAY VALVE	电磁活门	AR	

114151004	CWDD-DH27	VALVE RELIEF	释压活门	AR	
485000-27	01030	ACOUSTIC FILTER ELEC PUMP	电动泵滤音器	AR	
14320-020	274	WASTE DRAIN VALVE	污水活门	AR	
D3231006100000	047	BELLCRANK ASSY	曲柄组件	AR	
642-4001-501	3961001	NOZZLE CORE	尾喷	AR	SV
238-0451-523	8158001	CENTERBODY	中心体	AR	
238-0451-513	3058001	CENTERBODY	中心体	AR	
4357626	698940540	WIPER ARM	雨刷器	AR	
4357619	698940530	WIPER ARM	雨刷器	AR	
4343253	ID76774	WIPER BLADE	雨刷	AR	
4343253	ID2746067	WIPER BLADE	雨刷	AR	
1338-1430	590	NLG ROTATING MECHANISM	前架旋转机构	AR	
1338-1430	2838	NLG ROTATING MECHANISM	前架旋转机构	AR	
47145-147	1082	TRIM HO STAB ACTUATOR THS	作动筒	AR	SV
C24730001-9	1672C2473	NLG UNLOCK ASSY	前起落架上位锁组	AR	
C24837101-4	H4713	MANIFOLD ASSY-NORM BRAKE	刹车活门总成	AR	
C24837101-4	H1925	MANIFOLD ASSY-NORM BRAKE	刹车活门总成	AR	
C24730100	H1886	NLG DOOR UNLOCK	前起落架舱门上位	AR	
EVT174-500E	6504	FAN MOTOR	机轮风扇马达	AR	SV
EVT174-500E	2566	FAN MOTOR	机轮风扇马达	AR	SV
EVT174-500E	6494	FAN MOTOR	机轮风扇马达	AR	SV
EVT174-500E	09850	FAN MOTOR	机轮风扇马达	AR	SV
C2015000-1	7068	FAN TACHOMETER	风扇转速计	AR	
C2015000-1	98386	FAN TACHOMETER	风扇转速计	AR	
C2015000-1	11027	FAN TACHOMETER	风扇转速计	AR	
C2015000-1	14944	FAN TACHOMETER	风扇转速计	AR	
D27270400010	TH-958	FEEL UNIT	感觉组件	AR	
EVT174-2E8	N/A1	FAN ASSY	轮轴风扇组件	AR	
EVT174-2E8	N/A2	FAN ASSY	轮轴风扇组件	AR	
EVT174-2E8	N/A3	FAN ASSY	轮轴风扇组件	AR	
EVT174-2E8	N/A4	FAN ASSY	轮轴风扇组件	AR	
D2511163300000A	837	LIGHT KIT	备用灯泡箱	AR	
NA	NA	EMERGENCY MEDICAL EQUIPM	应急医疗箱	AR	
505256-401	D0117	LIFE LINE	逃生绳	AR	
505256-401	D0116	LIFE LINE	逃生绳	AR	
505256-401	A0507	LIFE LINE	逃生绳	AR	
505256-401	A0911	LIFE LINE	逃生绳	AR	
NA	NA1	FRIST AID KIT	急救包	AR	
NA	NA2	FRIST AID KIT	急救包	AR	
85-16-11494-05	NA1	HAND MIKE	麦克风	AR	
85-16-11494-05	NA2	HAND MIKE	麦克风	AR	
FKK8-35KL	NA	FIREPROOF GLOVES	防火手套	AR	
63600-537	L1833390	CREW LIFE VEST	机组救生衣	AR	
63600-537	L1833398	CREW LIFE VEST	机组救生衣	AR	
63600-537	L1833393	CREW LIFE VEST	机组救生衣	AR	
63600-537	L1833392	CREW LIFE VEST	机组救生衣	AR	
63600-537	L351418	CREW LIFE VEST	机组救生衣	AR	
63600-537	L1833369	CREW LIFE VEST	机组救生衣	AR	
63600-501	L260845	CREW LIFE VEST	机组救生衣	AR	
63600-537	L1833363	CREW LIFE VEST	机组救生衣	AR	
63600-537	L1833397	CREW LIFE VEST	机组救生衣	AR	

63600-537	L350598	CREW LIFE VEST	机组救生衣	AR	
502761-407-2269	NA	KIDS LIFE LINE	儿童安全带	AR	
502761-407-2269	NA	KIDS LIFE LINE	儿童安全带	AR	
502761-407-2269	NA	KIDS LIFE LINE	儿童安全带	AR	
502761-407-2269	NA	KIDS LIFE LINE	儿童安全带	AR	
502761-407-2269	NA	KIDS LIFE LINE	儿童安全带	AR	
502761-407-2269	NA	KIDS LIFE LINE	儿童安全带	AR	
2010-6-011-2251	NA	EXTENDED LIFE LINE	加长安全带	AR	
2010-6-011-2251	NA	EXTENDED LIFE LINE	加长安全带	AR	
500903-403-2291	NA	EXTENDED LIFE LINE	加长安全带	AR	
2010-6-011-2251	NA	EXTENDED LIFE LINE	加长安全带	AR	
2010-6-011-2251	NA	EXTENDED LIFE LINE	加长安全带	AR	
2010-6-011-2251	NA	EXTENDED LIFE LINE	加长安全带	AR	
2010-6-011-2251	NA	EXTENDED LIFE LINE	加长安全带	AR	
FLYAWAYKITII	NA	FLYAWAY KIT II	飞行器器材包	AR	
289-1001	NA	PASSENGER MASK	旅客氧气面罩	AR	
289-1001	NA	PASSENGER MASK	旅客氧气面罩	AR	
289-601-248	NA	PASSENGER MASK	旅客氧气面罩	AR	
P207-0012-001	NA	FLASH LIGHT	手电	AR	
P207-0012-001	NA	FLASH LIGHT	手电	AR	
P207-0012-001	NA	FLASH LIGHT	手电	AR	
P207-0012-001	NA	FLASH LIGHT	手电	AR	
P207-0012-001	NA	FLASH LIGHT	手电	AR	
P207-0012-001	NA	FLASH LIGHT	手电	AR	
P207-0012-001	NA	FLASH LIGHT	手电	AR	
KB-B2375	NA	Security information box	安保资料箱	AR	
216200-0	1EA	LIFE VEST	救生衣	AR	
63600-137	118EA	LIFE VEST	救生衣	AR	
63914-101	3EA	LIFE VEST	救生衣	AR	
P0640-101	5EA	LIFE VEST	救生衣	AR	
642-2300-11	XA2017102	ENG AFT MOUNT ASSY	左发动机后吊点组	AR	
6840023E16	PHCKM513	NOZZLE-FUEL(need flow ra	燃油喷嘴	AR	
6840023E16	PHC687J4	NOZZLE-FUEL(need flow ra	燃油喷嘴	AR	
6840023E16	PHCJD568	NOZZLE-FUEL(need flow ra	燃油喷嘴	AR	
6840023E16	PHCFB303	NOZZLE-FUEL(need flow ra	燃油喷嘴	AR	
6840023E18	PHC8U120	NOZZLE, FUEL (SPD, need flc	燃油喷嘴	AR	
6840023E18	PCY3622F	NOZZLE, FUEL (SPD, need flc	燃油喷嘴	AR	
6840023E18	PCY2028P	NOZZLE, FUEL (SPD, need flc	燃油喷嘴	AR	
6840023E18	PHCN6602	NOZZLE, FUEL (SPD, need flc	燃油喷嘴	AR	
6840023E18	PCY2026P	NOZZLE, FUEL (SPD, need flc	燃油喷嘴	AR	
6840023E18	PCY7324F	NOZZLE, FUEL (SPD, need flc	燃油喷嘴	AR	
6840023E18	PCY2037P	NOZZLE, FUEL (SPD, need flc	燃油喷嘴	AR	
6840023E18	PCY2041P	NOZZLE, FUEL (SPD, need flc	燃油喷嘴	AR	
6840023E18	PCY139A7	NOZZLE, FUEL (SPD, need flc	燃油喷嘴	AR	
6840023E18	PCY2040P	NOZZLE, FUEL (SPD, need flc	燃油喷嘴	AR	
6840023E18	PCY2034P	NOZZLE, FUEL (SPD, need flc	燃油喷嘴	AR	
6840023E18	PHC4U532	NOZZLE, FUEL (SPD, need flc	燃油喷嘴	AR	
6840023E18	PCY2033P	NOZZLE, FUEL (SPD, need flc	燃油喷嘴	AR	
6840023E18	PHC9U299	NOZZLE, FUEL (SPD, need flc	燃油喷嘴	AR	
6840023E18	PHCOU360	NOZZLE, FUEL (SPD, need flc	燃油喷嘴	AR	
6840023E18	PHCOC044	NOZZLE, FUEL (SPD, need flc	燃油喷嘴	AR	

102-00090	04536	OIL TEMP SENSOR	温度传感器	AR	
108280-211	NA001	TUBE/HOSE	管路	SV	
112441-507	NA001	TUBE/HOSE	管路	SV	
11-841193-4	YY084611	HEAT EXCHANGER	热交换器	AR	
1211313-010	APMMH412	RH VSV actuator	VSV作动筒	AR	
1211313-010	VE142	RH VSV actuator	VSV作动筒	AR	
121664-8	DJ918180	VBV DOOR #2	VBV作动门	AR	
121664-8	DJ917662	VBV DOOR #3	VBV作动门	AR	
121664-8	DJ918389	VBV DOOR #4	VBV作动门	AR	
121664-8	DJ918055	VBV DOOR #5	VBV作动门	AR	
121664-8	DJ918384	VBV DOOR #6	VBV作动门	AR	
121664-8	DJ918379	VBV DOOR #7	VBV作动门	AR	
121664-8	DJ918394	VBV DOOR #8	VBV作动门	AR	
121664-8	DJ918369	VBV DOOR #9	VBV作动门	AR	
121664-8	DJ918376	VBV DOOR #10	VBV作动门	AR	
121664-8	DJ918364	VBV DOOR #11	VBV作动门	AR	
121664-8	DJ918374	VBV DOOR #12	VBV作动门	AR	
121666-13	YG204945	ACTUATOR-BALLSCREW MASTER	作动筒	AR	
121762-3	EM539230	VBV Flexible Shafts	VBV软轴	AR	
121762-4	YG397862	VBV Flexible Shafts	VBV软轴	AR	
121762-4	EM504841	VBV Flexible Shafts	VBV软轴	AR	
121762-4	EM504839	VBV Flexible Shafts	VBV软轴	AR	
121762-4	DV502710	VBV Flexible Shafts	VBV软轴	AR	
121762-4	AM504930	VBV Flexible Shafts	VBV软轴	AR	
121762-4	DV502693	VBV Flexible Shafts	VBV软轴	AR	
121762-4	EM504836	VBV Flexible Shafts	VBV软轴	AR	
121762-4	DV502694	VBV Flexible Shafts	VBV软轴	AR	
121762-4	EM504934	VBV Flexible Shafts	VBV软轴	AR	
121762-4	DV502687	VBV Flexible Shafts	VBV软轴	AR	
121762-4	DV502711	VBV Flexible Shafts	VBV软轴	AR	
144-405-000-033	YV055871	SENSOR, VIBRATION TURBINE	传感器	AR	
1B6550	2662	CHIP DETECTOR (MCD)	磁堵	AR	
1D6549	1222	DEBRIS MONITOR (MCD HOUS)	MCD壳体	AR	
2293B020000	19126	CHECK VALVE	单向活门	AR	
22M1027-101	NA001	HOUSING	壳体	SV	
22M1027-109	NA001	BOOTIE, HP	连接管	SV	
22M1027-111	NA001	BOOTIE, LP	连接管	SV	
22M1037-101	NA001	BLANKET, INSUL	隔热罩	SV	
238-0502-503	NA001	AIR DUCT	空气管路	SV	
238-0504-507	NA001	BRACKET	支架	SV	
238-0505-503	NA001	BRACKET	支架	SV	
238-0556-503	NA001	BRACKET, ASSY	支架组件	SV	
238-0554-501	NA001	BRACKET	支架	SV	
238-0556-501	NA001	BRACKET	支架	SV	
238-0557-501	NA001	BRACKET	支架	SV	
238-0602-503	NA001	AIR DUCT	空气管路	SV	
238-0608-503	NA001	BRACKET	支架	SV	
238-0610-511	NA001	SHIELD FIRE	防火板	SV	
238-0612-503	NA001	TUBE	管路	SV	
238-0660-501	NA001	Bracket	支架	SV	
238-0701-523	NA001	TUBE	管路	SV	

238-0701-525	NA001	TUBE	管路	SV	
238-0701-527	NA001	TUBE/HOSE	管路	SV	
238-0701-529	NA001	TUBE/HOSE	管路	SV	
238-0704-505	NA001	Bracket	支架	SV	
238-0706-503	NA001	Bracket	支架	SV	
238-0708-507	NA001	Bracket	支架	SV	
238-0801-512	NA001	TUBE	管路	SV	
238-0801-513	NA001	TUBE	管路	SV	
238-0801-539	NA001	TUBE	管路	SV	
238-0801-541	NA001	TUBE	管路	SV	
238-0801-543	NA001	TUBE	管路	SV	
238-0801-545	NA001	TUBE	管路	SV	
238-0801-547	NA001	TUBE	管路	SV	
238-0801-551	NA001	TUBE	管路	SV	
238-0801-557	NA001	TUBE	管路	SV	
238-0801-561	NA001	TUBE	管路	SV	
238-0802-503	NA001	DRAIN	余油盒	AR	
238-0811-501	NA001	DRAIN MASTER	余油盒	AR	
238-0823-503	NA001	BRACKET	支架	SV	
238-0823-505	NA001	BRACKET	支架	SV	
238-0825-503	NA001	BRACKET	支架	SV	
238-0851-509	51563	FAN FIRE DETECTOR	火警线	AR	
238-0856-135	NA001	BRACKET	支架	SV	
238-0856-139	NA001	BRACKET	支架	SV	
238-0856-143	NA001	BRACKET	支架	SV	
238-0856-147	NA001	BRACKET	支架	SV	
238-0856-151	NA001	BRACKET	支架	SV	
238-0856-159	NA001	BRACKET	支架	SV	
238-0856-179	NA001	BRACKET	支架	AR	
238-0856-3	NA001	BRACKET	支架	SV	
238-0856-3	NA002	BRACKET	支架	SV	
238-0910-19	NA001	Bracket	支架	SV	
238-0910-35	NA001	Bracket	支架	SV	
238-0910-37	NA001	BRACKET	支架	SV	
238-0910-5	NA001	Bracket	支架	SV	
238-0914-503	NA001	BRACKET	支架	SV	
238-0950-15	NA001	Bracket	支架	SV	
238-0950-285	NA001	BRACKET	支架	SV	
238-0950-311	NA001	BRACKET	支架	SV	
238-0950-351	NA001	Bracket	支架	SV	
238-0950-63	NA001	Bracket	支架	SV	
238-0950-69	NA001	Bracket	支架	SV	
238-0950-73	NA001	Bracket	支架	SV	
238-0950-75	NA001	Bracket	支架	SV	
238-0950-77	NA001	Bracket	支架	SV	
238D0551-519	NA001	Duct	管路	SV	
238D0551-525	NA001	Duct	空气管路	SV	
116854-507	NA001	TUBE	管路	SV	
14495-505	NA001	Duct	空气管路	SV	
24F5202	YT096048	Oil tank	滑油箱	AR	
30679-175	NA001	V CLAMP	卡箍	SV	

30679-300	NA001	V CLAMP	卡箍	SV	
30679-300	NA002	V CLAMP	卡箍	SV	
320-290-101-0	YH563138	Harness-CJ11R	导线	AR	
320-290-301-0	YH646030	Harness-CJ12R	导线	AR	
320-298-101-0	YH579674	HARNESS, WIRING DPM	导线	AR	
320-364-203-0	YH515564	HARNESS, WIRING J9	导线	AR	
320-364-401-0	YH556142	HARNESS, WIRING J11	导线	AR	
320-372-602-0	YH549157	HARNESS, WIRING J10	导线	AR	
320-392-702-0	YH546107	HARNESS, WIRING J8	导线	AR	
320-401-101-0	YH170661	HARNESS, WIRING J13	导线	SV	
320-401-201-0	EM462737	Harness-CJ13	导线	AR	
320-401-401-0	YH520491	HARNESS, WIRING J7	导线	AR	
320-549-004-0	YJ198290	N2	传感器	AR	
320-557-502-0	YH596392	N1	传感器	AR	
321-450-802-0	NA001	Adapter ring assembly(SPI	转接环	SV	
321-451-300-0	NA001	STRUT, 3 AND 9 O' CLOCK	支架	SV	
321-451-300-0	NA002	STRUT, 3 AND 9 O' CLOCK	支架	SV	
321-453-601-0	NA001	STRUT, ASSY NP	支架	SV	
325-014-802-0	YH355696	Harness-CJ11L	导线	AR	
325-014-901-0	YH400692	Harness-CJ12L	导线	AR	
327155-3	3054	ANTI-ICE VALVE	防冰活门	AR	
3282970-4	EM608041	BLEED VALVE STOP MECHANIS	止动机构	AR	
3291390-2	NA001	VALVE-AIR TRANSIENT	瞬态放气活门	AR	
3291556-3	YG456390	STARTER VALVE	启动活门	AR	
329695-8	9922J	HPT CLEARANCE VALVE	HPT间隙控制活门	AR	
337-075-105-0	9704	LUBRICATION UNIT	润滑组件	AR	
34H40-400	NA001	V CLAMP	卡箍	SV	
34H40-400	NA002	V CLAMP	卡箍	SV	
34H40-400	NA003	V CLAMP	卡箍	SV	
34H40-400	NA004	V CLAMP	卡箍	SV	
34H40-400	NA005	V CLAMP	卡箍	SV	
3505582-28	440402	STARTER	起动机	AR	
390-611-301-0	YJ369204	PLUG, IDENTIFICATION	识别塞	AR	
396800-12	YA015476	MOTOR GEAR BLEED VALVE	扭矩马达	AR	
41SG381-1	153164	PRESSURE TRANSDUCER	压力传感器	SV	
4205401	4. 21E+10	HYDRAULIC PUMP	液压泵	AR	
450-1-3100-00	8497	PRESSURE SWITCH	压力电门	AR	
45731-1382	YB002078	FUEL HEATER-SERVO	滑油伺服热交换器	AR	
45731-1391	YB006501	IDG OIL COOLER	IDG滑油冷却器	AR	
45D31	7264	FUEL SWITCH	燃油电门	AR	
45D32	1246	CUSTOM CONTROL SENSOR	传感器	AR	
10-631045-2	UNNFD212	ignition exciter	点火激励器	AR	
10-631045-2	UNNFD187	ignition exciter	点火激励器	AR	
642-9855-503	NA001	Bracket	支架	SV	
642-9919-501	NA001	Bracket	支架	SV	
642-3031-501	NA001	BRACKET, ASSY	支架组件	SV	
642-3031-501	NA002	BRACKET, ASSY	支架组件	SV	
642-9928-501	NA001	Bracket	支架	SV	
642-5503-501	NA001	AIR DUCT(UNION)	空气管路	SV	
642-5508-503	NA001	AIR DUCT	空气管路	SV	
642-5510-501	NA001	AIR DUCT	空气管路	SV	

642-5511-503	NA001	AIR DUCT	空气管路	SV	
642-5515-507	NA001	BRACKET, ASSY	支架组件	SV	
642-5612-501	NA001	BRACKET, ASSY	支架组件	SV	
642-5612-503	NA001	BRACKET, ASSY	支架组件	SV	
642-5613-501	NA001	Bracket	支架	SV	
642-5651-501	NA001	Bracket	支架	SV	
642-5652-501	NA001	Bracket	支架	SV	
642-5653-501	NA001	Bracket	支架	SV	
642-5653-501	NA002	Bracket	支架	SV	
642-5657-505	NA001	Bracket	支架	SV	
642-5658-503	NA001	TUBE/HOSE	管路	SV	
642-5663-501	NA001	Bracket	支架	SV	
642-5663-501	NA002	Bracket	支架	SV	
642-5665-501	NA001	Bracket	支架	SV	
642-5671-501	NA001	Bracket	支架	SV	
642-5672-501	NA001	Bracket	支架	SV	
642-5672-501	NA002	Bracket	支架	SV	
642-5673-501	NA001	Bracket	支架	SV	
642-5676-501	NA001	Bracket	支架	SV	
642-5677-501	NA001	Bracket	支架	SV	
642-5702-501	NA001	Bracket	支架	SV	
642-5703-501	NA001	Bracket	支架	SV	
642-5705-501	NA001	Bracket	支架	SV	
642-5715-507	NA001	Bracket	支架	SV	
642-5752-501	NA001	Bracket	支架	SV	
642-5753-501	NA001	Bracket	支架	SV	
642-5754-501	NA001	TUBE/HOSE	管路	SV	
642-5754-503	NA001	TUBE/HOSE	管路	SV	
642-5754-505	NA001	TUBE/HOSE	管路	SV	
642-5754-507	NA001	TUBE/HOSE	管路	SV	
642-5801-507	NA001	TUBE/HOSE	管路	SV	
642-5801-509	NA001	TUBE/HOSE	管路	SV	
642-5801-511	NA001	BRACKET, ASSY	支架组件	SV	
642-5801-515	NA001	BRACKET, ASSY	支架组件	SV	
642-5801-517	NA001	BRACKET, ASSY	支架组件	SV	
642-5801-521	NA001	BRACKET, ASSY	支架组件	SV	
642-5826-501	NA001	Bracket	支架	SV	
642-5827-501	NA001	Bracket	支架	SV	
642-5830-503	NA001	BRACKET	支架	SV	
642-5856-501	NA001	BRACKET	支架	SV	
642-5862-501	NA001	BRACKET	支架	SV	
642-5926-501	NA001	TUBE/HOSE	管路	SV	
642-5926-502	NA001	TUBE/HOSE	管路	SV	
642-5926-503	NA001	TUBE/HOSE	管路	SV	
642-5926-504	NA001	TUBE/HOSE	管路	SV	
642-5927-501	NA001	Bracket	支架	SV	
642-5927-502	NA001	Bracket	支架	SV	
642-9825-501	NA001	Bracket	支架	SV	
642-9825-501	NA002	Bracket	支架	SV	
642-9826-501	NA001	Bracket	支架	SV	
642-9826-501	NA002	Bracket	支架	SV	

642-9826-501	NA003	Bracket	支架	SV	
642-9827-501	NA001	Bracket	支架	SV	
642-9828-503	NA001	Bracket	支架	SV	
642-9830-501	NA001	Bracket	支架	SV	
642-9831-501	NA001	Bracket	支架	SV	
642-9831-501	NA002	Bracket	支架	SV	
642-9831-501	NA003	Bracket	支架	SV	
642-9831-503	NA001	Bracket	支架	SV	
642-9831-503	NA001	Bracket	支架	SV	
642-9831-505	NA001	Bracket	支架	SV	
642-9833-501	NA001	Bracket	支架	SV	
642-9834-501	NA001	Bracket	支架	SV	
642-9835-501	NA001	Bracket	支架	SV	
642-9836-501	NA001	Bracket	支架	SV	
642-9837-503	NA001	Bracket	支架	SV	
642-9838-505	NA001	Bracket	支架	SV	
642-9840-501	NA001	BRACKET, ASSY	支架组件	SV	
642-9841-501	NA001	Bracket	支架	SV	
642-9843-501	NA001	Bracket	支架	SV	
642-9844-501	NA001	Bracket	支架	SV	
642-9845-501	NA001	Bracket	支架	SV	
642-9846-501	NA001	BRACKET, ASSY	支架组件	SV	
642-9847-501	NA001	Bracket	支架	SV	
642-9848-501	NA001	TUBE/HOSE	管路	SV	
642-9849-503	NA001	Bracket	支架	SV	
642-9850-501	NA001	Bracket	支架	SV	
642-9851-503	NA001	Bracket	支架	SV	
642-9852-501	NA001	Bracket	支架	SV	
642-9855-501	NA001	Bracket	支架	SV	
642-9855-502	NA001	Bracket	支架	SV	
642-9856-501	NA001	Bracket	支架	SV	
642-9857-503	NA001	Bracket	支架	SV	
642-9857-503	NA002	Bracket	支架	SV	
642-9857-505	NA001	Bracket	支架	SV	
642-9858-502	NA001	Bracket	支架	SV	
642-9861-501	NA001	Bracket	支架	SV	
642-9863-501	NA001	Bracket	支架	SV	
642-9867-505	NA001	Bracket	支架	SV	
642-9868-501	NA001	Bracket	支架	SV	
642-9869-501	NA001	Bracket	支架	SV	
642-9870-503	NA001	Bracket	支架	SV	
642-9871-503	NA001	BRACKET, ASSY	支架组件	SV	
642-9876-503	NA001	Bracket	支架	SV	
642-9877-503	NA001	Bracket	支架	SV	
642-9878-501	NA001	BRACKET, ASSY	支架组件	SV	
642-9879-501	NA001	BRACKET	支架	SV	
642-9887-501	NA001	Bracket	支架	SV	
642-9889-501	NA001	Bracket	支架	SV	
642-9889-501	NA002	Bracket	支架	SV	
642-9890-501	NA001	Bracket	支架	SV	
642-9892-501	NA001	Bracket	支架	SV	

642-9892-501	NA002	Bracket	支架	SV	
642-9893-501	NA001	Bracket	支架	SV	
642-9894-501	NA001	Bracket	支架	SV	
642-9896-501	NA001	BRACKET, ASSY	支架组件	SV	
642-9897-501	NA001	BRACKET, ASSY	支架组件	SV	
642-9898-503	NA001	Bracket	支架	SV	
642-9899-503	NA001	Bracket	支架	SV	
642-9912-501	NA001	Bracket	支架	SV	
642-9913-501	NA001	Bracket	支架	SV	
642-9915-501	NA001	Bracket	支架	SV	
642-9916-501	NA001	Bracket	支架	SV	
642-9917-501	NA001	Bracket	支架	SV	
642-9918-501	NA001	Bracket	支架	SV	
642-9921-501	NA001	Bracket	支架	SV	
642-9922-501	NA001	Bracket	支架	SV	
642-9923-501	NA001	Bracket	支架	SV	
642-9924-501	NA001	BRACKET, ASSY	支架组件	SV	
642-9925-501	NA001	Bracket	支架	SV	
642-9926-501	NA001	Bracket	支架	SV	
642-9927-501	NA001	Bracket	支架	SV	
642-9929-501	NA001	Bracket	支架	SV	
642-9930-501	NA001	Bracket	支架	SV	
642-9930-501	NA002	Bracket	支架	SV	
642-9930-501	NA003	Bracket	支架	SV	
642-9930-501	NA004	Bracket	支架	SV	
642-9934-501	NA001	Bracket	支架	SV	
642-9936-501	NA001	BRACKET, ASSY	支架组件	SV	
642-9944-501	NA001	Bracket	支架	SV	
642-9945-501	NA001	Bracket	支架	SV	
642-9950-503	NA001	BRACKET	支架	SV	
642-9951-503	NA001	BRACKET, ASSY	支架组件	SV	
642-9970-505	NA001	BRACKET, ASSY	支架组件	SV	
642-9971-501	NA001	BRACKET, ASSY	支架组件	SV	
642D5670-503	NA001	BRACKET, ASSY	支架组件	SV	
642W9817-501	9097699-2	Harness	导线	AR	
642W9853-503	9036904	Harness	导线	AR	
642W9854-505	9327548	Harness	导线	AR	
642W9872-501	9036900	Harness	导线	AR	
642W9873-501	9039283	Harness	导线	AR	
642W9874-501	9054650	Harness	导线	AR	
642W9880-503	9054647	Harness	导线	AR	
642W9881-501	9039276	Harness	导线	AR	
642W9882-501	9060218	Harness	导线	AR	
642W9883-501	NA001	Harness	导线	AR	
642W9884-501	9036884	Harness	导线	AR	
642W9955-501	9054634	HARNESS 4204KS	导线	AR	
642W9956-501	9054633	HARNESS 4205KS	导线	AR	
642W9957-501	9036878	HARNESS 4206KS	导线	AR	
642W9958-501	9036876	HARNESS 4207KS	导线	AR	
724400-2	YA006530	Fuel Pump	燃油泵	AR	
740119H	3269	GENERATOR, IDG	IDG	AR	

740123A	2270	IDG QAD	IDG快卸环	SV	
74-110-10	ADD3709	Oil QTY TRANSMITTER	滑油量传感器	AR	
85465-2	HTLR7303	AlternatorRotor	静子发电机	AR	
87006-9	HTLI3859	Alternator Stator	静子发电机	AR	
8910-332	YP049312	FUEL RETURN VALVE	燃油回油活门	AR	
8TC19AAH1	DT24724	THERMOCOUPLE, HPTCC SN G	热电偶	AR	
8TC19AAR1	GDBS899G	T3 SENSOR	传感器	AR	
9043110-16	UNJ22752	IGNITION LEAD	点火电缆	AR	
9043110-16	UNK34932	IGNITION LEAD	点火电缆	AR	
9-217-44	ELWK6908	Fuel Flow Transmitter	燃油流量传感器	AR	
9909873-103	NA001	AIR DUCT	空气管路	SV	
S700H0387-57	NA001	TUBE/HOSE	管路	SV	
AE706058-65	NA001	TUBE/HOSE	管路	SV	
AE707418-1	NA001	TUBE/HOSE	管路	SV	
AE707419-3	NA001	TUBE/HOSE	管路	SV	
AE708821-1	NA001	TUBE/HOSE	管路	SV	
AE708821-2	NA001	TUBE/HOSE	管路	SV	
AE710155-1	NA001	TUBE/HOSE	管路	SV	
AMBK4-4019	NA001	LINK ROD	连杆	SV	
AP265J04	NA001	TEE	接头	SV	
C25175000	81114	LPTACC VALVE	LPT间隙控制活门	AR	
CA172-02	YC166096	EGT COUPLING	EGT管路	AR	
CA211-00	YC376314	Harness, Wiring EGT Upper	导线	AR	
CA212-00	YC383781	Harness, Wiring EGT Lower	导线		
D7101002800000	NA001	Plate	支架	SV	
FA00914D	M920250-0	Fuel Nozzle filter	燃油油滤	AR	
P40570	NA001	LINK	连杆	SV	
QA06305-01	RY4-8097	Oil Clogging Indicator T	滑油堵塞指示器	AR	
RP198-02	YC528052	T12 SENSOR	传感器	AR	
RP216-00	YC059228	T25 Temp Sensor	传感器	AR	
S700H0391-199	NA001	HOSE	管路	SV	
S700H0391-53	NA001	HOSE	管路	SV	
S700H0981-17	NA001	HOSE	管路	SV	
S700M1477-1	NA001	CLIP, ANTI-ROTATION	卡子	SV	
TA18900022	NA001	LINE, LINE BLOCK	卡子	SV	
TA18900023	NA001	LINE, LINE BLOCK	卡子	SV	
TA18900023	NA002	LINE, LINE BLOCK	卡子	SV	
TA18900025	NA001	LINE, LINE BLOCK	卡子	SV	
TA18900025	NA002	LINE, LINE BLOCK	卡子	SV	
TA18900025	NA003	LINE, LINE BLOCK	卡子	SV	
TA18900027	NA001	LINE, LINE BLOCK	卡子	SV	
TA18900027	NA002	LINE, LINE BLOCK	卡子	SV	
TA18900027	NA003	LINE, LINE BLOCK	卡子	SV	
TA18900027	NA004	LINE, LINE BLOCK	卡子	SV	
TA18900029	NA001	LINE, LINE BLOCK	卡子	AR	
TA18900031	NA001	LINE, LINE BLOCK	卡子	SV	
TA18900031	NA002	LINE, LINE BLOCK	卡子	SV	
TA18900046	NA001	LINE, LINE BLOCK	卡子	SV	
TC201-00	YC173119	TEMP OIL SENSOR	传感器	AR	
TC315-02	YC007609	Harness, Wiring EGT 2TC	导线	AR	
TC315-02	YC007609	Harness, Wiring EGT 2TC	导线	AR	

TC315-02	YC007630	Harness, Wiring EGT 2TC	导线	AR	
TC316-00	YC000889	Harness, Wiring EGT 3TC	导线	AR	
VG22-01	YY032415	VBV POSTION SENSOR	VBV位置传感器	AR	
D7101002700000	NA001	Plate	支架	SV	
238-0655-503	NA001	Bracket	支架	SV	
320-296-801-0	YH560115	HARNESS, WIRING J12	导线	AR	
238D0611-507	NA001	Duct	空气管路	SV	
642-5801-519	NA001	TUBE	管路	SV	
30680-400	NA001	COUPLING	卡箍	SV	
30680-400	NA002	COUPLING	卡箍	SV	
30680-400	NA003	COUPLING	卡箍	SV	
30680-400	NA004	COUPLING	卡箍	SV	
30680-400	NA005	COUPLING	卡箍	SV	
30680-400	NA006	COUPLING	卡箍	SV	
713705-3	NA001	DUCT	空气管路	SV	
MS21908J6	NA001	ELBOW	接头	SV	
AN834-4J	NA001	TEE	接头	SV	
30659-200	NA001	COUPLING	卡箍	SV	
30659-200	NA002	COUPLING	卡箍	SV	
30659-200	NA003	COUPLING	卡箍	SV	
30659-200	NA004	COUPLING	卡箍	SV	
238-0950-237	NA001	BRACKET ASSY	支架组件	SV	
238D0712-505	NA001	Hoss, ASSY	管路	SV	
321-455-302-0	NA001	FITTING ASSY-HOLD OPEN NO	支架	SV	
321-455-352-0	NA001	FITTING ASSY - HOLD OPEN	支架	SV	
238-0607-503	NA001	BRKT-QEC	支架	SV	
642-9920-503	NA001	BRACKET, ASSY	支架组件	SV	
AE709461-1	NA001	HOSE ASSY	管路组件	SV	
TA121003B16-04	NA001	CLAMP	卡箍	SV	
TA121003B16-04	NA002	CLAMP	卡箍	SV	
0646C624-20	NA001	SCREW	螺钉	SV	
642-9866-503	NA001	Bracket	支架	SV	
201582002	M-DG-0076	MAIN LANDING GEAR	右主起落架	AR	
201582001	M-DG-0072	MAIN LANDING GEAR	左主起落架	AR	
D23589520-12	B259	NOSE LANDING GEAR	前起落架	AR	
B372BAM0515	Q00136017	SPOILER ELEVATOR COMPUTE	扰流板升降舵计算	AR	SV
B397BAM0624	Q00140008	FLIGHT AUGMENTATION COMPU	飞行增稳计算机	AR	SV
C13043AA06	6708	FLIGHT MANAGEMENT GUID CC	飞行管理制导计算	AR	
C13043AA06	Q00194007	FLIGHT MANAGEMENT GUID CC	飞行管理制导计算	AR	
B397BAM0624	Q00140014	FLIGHT AUGMENTATION COMPU	飞行增稳计算机	AR	SV
740120C	7925	GENERATOR CONTROL UNIT	发电机控制组件	AR	SV
740120C	4820	GENERATOR CONTROL UNIT	发电机控制组件	AR	SV
115370-1016	2017	FLT CTL DATA CONCENTRATOR	飞行控制数据采集	AR	SV
115370-1016	2004	FLT CTL DATA CONCENTRATOR	飞行控制数据采集	AR	SV
Z010H0005118	02713	CIDS DIRECTOR	客舱内部通讯数据	AR	
822-0323-020	2618	VHF/COMM. TRANSCEIVER	甚高频收发机	AR	SV
SIC5059-11-0207	2028	COMPUTER - FCMS	燃油量指示计算机	AR	
RD-AX1301-2D	100241	MAIN MULTIPLEXER	主调制器	AR	
2243800-364	RA05892	WQAR	无线电快速存取记	AR	SV
822-0330-020	131072	HF/COMM. TRANSCEIVER	高频收发机	AR	
B401ACM0507	1221	CFDIU	中央故障显示接口	AR	

822-0323-020	2189	VHF/COMM. TRANSCIVER	甚高频收发机	AR	SV
3945128218	ELACVB012	ELEVATOR AILERON COMPUTE	升降舵副翼计算机	AR	
3945128218	ELACVB011	ELEVATOR AILERON COMPUTE	升降舵副翼计算机	AR	
822-0323-020	3855	VHF/COMM. TRANSCIVER	甚高频收发机	AR	SV
AMU2790CB06	1040	AUDIO MANAGEMENT UNIT	音频管理组件	AR	
30042-0000-0501	1993	CONTROL UNIT-LEVEL SENSIN	油位传感控制组件	AR	
30042-0601	1740	CONTROL UNIT-LEVEL SENSIN	油位传感控制组件	AR	
Z010H000521A	03089	CIDS DIRECTOR	座舱内部通信数据	AR	
600611-00-601	71104111	CONTROLLER	货舱加温控制器	AR	
B372BAM0515	Q00136008	SPOILER ELEVATOR COMPUTE	扰流板升降舵计算	AR	SV
B372BAM0515	5979	SPOILER ELEVATOR COMPUTE	扰流板升降舵计算	AR	SV
3720-00-00	ME2384	FIRE DETECTION UNIT	火警探测装置	AR	
7304-01-02	7003	FIRE DETECTION UNIT	火警探测装置	AR	
3720-00-00	ME0568	FIRE DETECTION UNIT	火警探测装置	AR	
9022-15702-11	9931754	CONTROLLER, PRESS.	客舱压力控制器	AR	
9022-15702-11	9931784	CONTROLLER, PRESS.	客舱压力控制器	AR	
49-117-10	2066	SL/FL. CONTROL COMPUT.	缝翼襟翼控制计算	AR	
49-117-10	2276	SL/FL. CONTROL COMPUT.	缝翼襟翼控制计算	AR	
47215920BB00	472159207	PROBES HEAT COMPUTER	探头加温计算机	BC	SV
47215920BB00	472159203	PROBES HEAT COMPUTER	探头加温计算机	AR	SV
87292325V07	VL2062003	AVNCS EQPT VENT COMPUTER	电子设备通风计算	AR	
35-0L5-1005-08	Q09305008	BATTERY CHARGE LIMITER	电瓶充电限制器	AR	SV
35-0L5-1005-08	Q09305009	BATTERY CHARGE LIMITER	电瓶充电限制器	AR	SV
416-00318-003	416003180	WINDOW HEAT COMPUTER	风挡加温计算机	AR	
416-00318-003	416003180	WINDOW HEAT COMPUTER	风挡加温计算机	AR	
980-6020-001	2078	COCKPIT VOICE RECORDER	驾驶舱语音记录器	AR	SV
310ZN01Y01	3627	UNBALANCE DETECTOR	不平衡探测器	AR	
310ZN01Y01	3628	UNBALANCE DETECTOR	不平衡探测器	AR	
600615-00-503	20645	CONTROLLER, CARGO VENT	货舱通风控制器	AR	SV
1663214301	B3140	PROBES HEAT COMPUTER	探头加温计算机	AR	SV
1B1000-1GS	M8956639	STATIC INVERTER	静变流器	AR	SV
1209-100	10931	PRESSURE SWITCH	压力电门	AR	SV
1209-100	34794	PRESSURE SWITCH	压力电门	AR	SV
740120C	7754	GENERATOR CONTROL UNIT	发电机控制组件	AR	SV
822-1152-122	743W	MMR-MULTIMODER RECEIVER	多模接收机	AR	
785-002-8	785002IN4	BLEED MONITORING COMPUTE	引气监控计算机	AR	
521100	F9830267	GENERATOR CONTROL UNIT	发电机控制组件	AR	
822-1152-122	1871V8	MMR-MULTIMODER RECEIVER	多模接收机	AR	
822-0297-020	111368	VOR RECEIVER	VOR 接收机	AR	SV
7517900-10020	20007304	TCAS II COMPUTER	TCAS II 计算机	AR	
622-5132-622	8985	WEATHER RADAR TRANSCIVER	气象雷达收发机	AR	
822-0297-020	113364	VOR RECEIVER	VOR 接收机	AR	SV
822-0329-020	7A1U	DME INTERROGATOR	测距机问询器	AR	
822-0329-020	113270	DME INTERROGATOR	测距机问询器	AR	
759D0000-02	3005	CONTROLLER-PACK	空调控制器	AR	
740121B	1169	GROUND POWER CONTROL UNI	地面电源控制组件	AR	
746923E	2116	ELEC GENERATION INTFC UNI	发电机接口组件	AR	
746923E	2114	ELEC GENERATION INTFC UNI	发电机接口组件	AR	
822-0299-020	116012	ADF RECEIVER	自动定向接收机	AR	SV
785-002-8	2009	BLEED MONITORING COMPUTE	引气监控计算机	AR	
965-1676-003	EMK5-3503	GPWC, GROUND PROXIMITY WA	近地警告计算机	AR	SV

1209-100	34795	PRESSURE SWITCH	压力电门	AR	SV
87232324V00	1068	SKIN TEMPERATURE SENSOR	蒙皮温度传感器	AR	
EVT3454HC	1.65E+08	FAN	风扇	BC	SV
EVT3454HC	1.65E+08	FAN	风扇	BC	SV
V2T152D	07455	AIR BUTTERFLY VALVE	气动蝶形活门	BC	SV
V2T152D	06748	AIR BUTTERFLY VALVE	气动蝶形活门	BC	SV
V2T127D	L00611	AIR BUTTERFLY VALVE	气动蝶形活门	AR	SV
530AL01CN	2739	PWR SUPPLY DECOUPLING UN	供电分离组件	AR	
530AL01CN	2736	PWR SUPPLY DECOUPLING UN	供电分离组件	AR	
CG7G0	4638	SMOKE DETECTOR	烟雾探测器	AR	
BC2065C	2053	SELCAL CODE SELECTION PAN	呼叫代码选择面板	AR	
87232323V00	VL2064006	DUCT TEMPERATURE SENSOR	管道温度传感器	AR	
CT191B	1026	AIR CHECK VALVE	单向活门	AR	
V2T152D	4784	AIR BUTTERFLY VALVE	气动蝶形活门	AR	SV
DK120-90	AT108413	DFDR ULB	水下信标电池	AR	SV
3957985115	Q05720006	ENGINE INTERFACE UNIT	发动机接口单元	AR	
241-246-022-004	AA87117	ENG VIB MONITORING UNIT	发动机振动检测组	AR	
RD-AX7271	C713611	ATR	通信娱乐磁带复制	AR	
822-0299-020	163087	ADF RECEIVER	自动定向接收机	AR	SV
9615325070	9.98E+11	DISPLAY MANAGEMENT COMPUT	显示器管理计算机	AR	
350E053021818	0E0014054	FLIGHT WARNING COMPUTER	飞行警告计算机	AR	SV
350E053021818	0E0014014	FLIGHT WARNING COMPUTER	飞行警告计算机	AR	SV
350E5500202	0E5005232	SDAC	系统数据采集集中	AR	
RAI2800M0706	5613	SMOKE DET. CONTR. UNIT	烟雾探测器控制组	AR	SV
RD-AX7095-01	150169	REPRODUCER	CD 播放器	AR	
9615325070	5265	DISPLAY MANAGEMENT COMPUT	显示器管理计算机	AR	
9615325070	9.98E+11	DISPLAY MANAGEMENT COMPUT	显示器管理计算机	AR	
3957985114	Q05720006	ENGINE INTERFACE UNIT	发动机接口单元	AR	
1058-34	1542	TYRE PRESS. INDICATING UN	胎压检测单元	AR	
350E5151331	0E5002171	SDAC	系统数据采集集中	AR	
HG2030AE43	56019176	ADIRU	大气数据惯性基准装置		
PG1152BC02	0903M166	AIR DATA MODULE	大气数据模块	BC	
PG1152BC02	4059093	AIR DATA MODULE	大气数据模块	AR	
PG1152BC02	16111361	AIR DATA MODULE	大气数据模块	AR	
PG1152AC03	98066425	AIR DATA MODULE	大气数据模块	AR	
PG1152AC03	98066420	AIR DATA MODULE	大气数据模块	AR	
PG1152AC03	98066419	AIR DATA MODULE	大气数据模块	AR	
PG1152AC03	98066424	AIR DATA MODULE	大气数据模块	AR	
PG1152AC03	98066422	AIR DATA MODULE	大气数据模块	AR	
101809	0202159	ALTITUDE SWITCH	高度电门	AR	
190QA01	3687	CURRENT TRANSFORMER	电流互感器	AR	
C20215000	03608	BRAKE PEDAL TRANSMITTER	刹车脚踏传感器	AR	SV
564CA01Y1	9992	CONTACTOR	接触器	AR	
564CA01Y1	10056	CONTACTOR	接触器	AR	
710100-2	467DRF	IRIDIUM COMMJUNICATION SY	铱星通信系统	AR	
9599-607-14942	9569	RADIO ALTIMETER TRANSCEIV	无线电高度表收发	AR	SV
9599-607-14942	14942-113	RADIO ALTIMETER TRANSCEIV	无线电高度表收发	AR	SV
622-5132-622	8561	WEATHER RADAR TRANSCEIVER	气象雷达收发机	AR	
965-0758-001	CMUMK2-03	ACARS MANAGEMENT UNIT	通信寻址与报告系	AR	SV
775C0000-04	01101	CONTROLLER, ZONE TEMP.	区域温度控制器	AR	
759D0000-02	0127	CONTROLLER-PACK	空调温度控制器	AR	

558CA01Y1	6167	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	6161	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	6145	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	6157	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	6139	260A THREE POLE CONTACTOR	接触器	AR	
558CA01Y1	6143	260A THREE POLE CONTACTOR	接触器	AR	
640CC01Y1	8034	200A SINGLE POLE CONTACTOR	接触器	AR	
640CC01Y1	8030	200A SINGLE POLE CONTACTOR	接触器	AR	
640CC01Y1	8046	200A SINGLE POLE CONTACTOR	接触器	AR	
640CC01Y1	8043	200A SINGLE POLE CONTACTOR	接触器	AR	
822-0330-020	116181	HF/COMM. TRANSCEIVER	高频收发机	AR	
910030-5086	2042	DIU	数字接口组件	AR	
655CC01Y1	2147	300A SINGLE POLE CONTACTOR	接触器	AR	
655CC01Y1	2960	300A SINGLE POLE CONTACTOR	接触器	AR	
8410B2-4-90	8410B2-30	CAMERA-COCKPIT DOOR	摄像头	AR	SV
8410B2-4-90	8410B2-30	CAMERA-COCKPIT DOOR	摄像头	AR	SV
640CC01Y1	8115	200A SINGLE POLE CONTACTOR	接触器	AR	
630CC01Y1	6657	100A SINGLE POLE CONTACTOR	接触器	AR	
630CC01Y1	6654	100A SINGLE POLE CONTACTOR	接触器	AR	
630CC01Y1	6617	100A SINGLE POLE CONTACTOR	接触器	AR	
630CC01Y1	6576	100A SINGLE POLE CONTACTOR	接触器	AR	
5906734	11619	3 HOLE CURRENT TRANSFORMER	3孔电流互感器	AR	
5906734	11620	3 HOLE CURRENT TRANSFORMER	3孔电流互感器	AR	
564CA02FY1	3482	60A THREE POLE CONTACTOR	接触器	AR	
564CA02FY1	3501	60A THREE POLE CONTACTOR	接触器	AR	
190QA01	3684	CURRENT TRANSFORMER	电流互感器	AR	
5906734	11608	3 HOLE CURRENT TRANSFORMER	3孔电流互感器	AR	
5906734	11614	3 HOLE CURRENT TRANSFORMER	3孔电流互感器	AR	
630CC01Y1	6645	100A SINGLE POLE CONTACTOR	接触器	AR	
503CA02F1-02Y1	2566	DOUBLE THREE POLE CONTACTOR	接触器	AR	
503CA02F1-02Y1	2570	DOUBLE THREE POLE CONTACTOR	接触器	AR	
8410B1-101-105	8410B1-41	CAMERA	摄像头	AR	
DVE90-06	2117	LP SOLENOID SUPPLY VALVE	氧气电磁阀	AR	
D201094	021100	STATIC PROB	静压探头	AR	
D201094	021289	STATIC PROB	静压探头	AR	
D201094	021288	STATIC PROB	静压探头	AR	
93A055-66	51580	AMBIENT MICROPHONE	区域麦克风	AR	
CMK80-01	2294	PRESSURE SWITCH	压力电门	AR	
792-6140-001	114591	ANTENNA COUPLER	耦合器天线	AR	
792-6140-001	114597	ANTENNA COUPLER	耦合器天线	AR	
RD-AV3001-35	200031	VIDEO SYSTEM CONTROL UNIT	影像系统控制组件	AR	
5906734	11688	3 HOLE CURRENT TRANSFORMER	3孔电流互感器	AR	
564CA01Y1	10097	CONTACTOR	接触器	AR	
3214-54-10	1562	EMERG. POWER SUPPLY	应急电池	AR	
Z130H0096110	00975	FAP	前乘务员面板	AR	
622-5134-064	2166	WEATHER RADAR RT DUAL MODE	气象雷达收发机基	AR	
74-20	10713	PORTABLE FIRE EXTINGUISHER	灭火器	AR	SV
74-20	6654	PORTABLE FIRE EXTINGUISHER	灭火器	AR	SV
2510154-01-00	844	4TH. OCCUPANT SEAT	第四观察员座椅	AR	
FE240-004	1261	DOOR DAMPER CYLINDER	登机门作动器	AR	SV
FE240-004	1260	DOOR DAMPER CYLINDER	登机门作动器	AR	SV

8ES455012-00	825	POWER SUPPLY	电源供给组件	AR	SV
2LA007307-00	2500	CABIN OVERPRESSURE INDICA	警告灯面板	AR	SV
2LA007307-00	2497	CABIN OVERPRESSURE INDICA	警告灯面板	AR	SV
2LA005469-00	6157	WARNING LIGHT PANEL	警告灯面板	AR	
2LA005469-00	6048	WARNING LIGHT PANEL	警告灯面板	AR	
2LA007307-00	2433	CABIN OVERPRESSURE INDICA	警告灯面板	AR	SV
2LA005469-00	6041	WARNING LIGHT PANEL	警告灯面板	AR	
2LA007307-00	2493	CABIN OVERPRESSURE INDICA	警告灯面板	AR	SV
2LA005469-00	5992	WARNING LIGHT PANEL	警告灯面板	AR	
2LA005469-00	6049	WARNING LIGHT PANEL	警告灯面板	AR	
Z020H0001112	01294	PROGRAM A. TEST PANEL	程序测试面板	AR	
Z050H6045070	050H60009	CABIN ASSIGNM. MODULE	客舱分布模块	AR	
3214-54-10	1787	EMERG. POWER SUPPLY	应急电源供给组件	AR	
3214-54-10	1525	EMERG. POWER SUPPLY	应急电源供给组件	AR	
3214-54-10	1524	EMERG. POWER SUPPLY	应急电源供给组件	AR	
899-0850-004	6331	RADIO MANAGEMENT PANEL	无线电管理面板	AR	SV
899-0850-004	4539	RADIO MANAGEMENT PANEL	无线电管理面板	AR	SV
899-0850-004	5268	RADIO MANAGEMENT PANEL	无线电管理面板	AR	SV
Z120H0040110	01153	AAP	后乘务面板	AR	
BA24320A-1	53934	LAVATORY FIRE-EXTINGUISHI	厕所灭火瓶	AR	SV
BA24320A-1	36408	LAVATORY FIRE-EXTINGUISHI	厕所灭火瓶	AR	SV
C24592000-1	H1592	MASTER CYLINDER	刹车阻尼器	AR	
C24592000-1	H1590	MASTER CYLINDER	刹车阻尼器	AR	
773A0000-01	05605	SENSOR, TEMP.	温度传感器	AR	
773A0000-01	06409	SENSOR, TEMP.	温度传感器	AR	
773A0000-01	07246	SENSOR, TEMP.	温度传感器	AR	
ACP2788AB04	3440	AUDIO CONTROL PANEL	音频控制面板	AR	SV
ACP2788AB04	5090	AUDIO CONTROL PANEL	音频控制面板	AR	SV
ACP2788AB05	2788-9485	AUDIO CONTROL PANEL	音频控制面板	BC	SV
321200M02	1428	SPD. BRK. CTL. TRANSDUCER UN	速度刹车控制传感	AR	SV
FE240-004	1209	DOOR DAMPER CYLINDER	登机门作动器	AR	SV
FE240-004	1218	DOOR DAMPER CYLINDER	登机门作动器	AR	SV
PPA1203-00	40255	SMOKE DETECTION	烟雾探测器	AR	
PPA1203-00	146571	SMOKE DETECTION	烟雾探测器	AR	
9024-15704-03	1432119	VALVE-SAFETY	安全活门	AR	
9024-15704-03	1432118	VALVE-SAFETY	安全活门	AR	
749198-2	H2764	HYDRAULIC RESERVOIR	液压储压器	AR	
0074-20	10679	PORTABLE FIRE EXTINGUISHI	灭火器	AR	
0074-20	6334	PORTABLE FIRE EXTINGUISHI	灭火器	AR	
2LA005469-00	5995	WARNING LIGHT PANEL	警告灯面板	AR	
72071000	0104	OVEN	烤箱	AR	
72071000	0790	OVEN	烤箱	AR	
72071000	0774	OVEN	烤箱	AR	
72071000	28007	OVEN	烤箱	AR	
72071000	1078	OVEN	烤箱	AR	
72071000	0329	OVEN	烤箱	AR	
TAAI3-03CE20-01	5897	FIRST OFF SEAT	副驾驶座椅	AR	SV
TAAI3-03PE00-01	182	CAPTAIN SEAT	机长座椅	AR	
RD-AV9809-01	200146	LCD MONITOR	LCD显示器	AR	
RD-AV9809-01	111624	LCD MONITOR	LCD显示器	AR	
RD-AV9809-01	110821	LCD MONITOR	LCD显示器	AR	

RD-AV9809-01	120156	LCD MONITOR	LCD显示器	AR	
RD-AV9809-01	200137	LCD MONITOR	LCD显示器	AR	
RD-AV9809-01	110774	LCD MONITOR	LCD显示器	AR	
RD-AV9809-01	150165	LCD MONITOR	LCD显示器	AR	
RD-AV9809-01	111277	LCD MONITOR	LCD显示器	AR	
RD-AV9809-01	110801	LCD MONITOR	LCD显示器	AR	
RDAV9810-01	150195	LCD MONITOR	LCD显示器	AR	
RDAV9810-01	110749	LCD MONITOR	LCD显示器	AR	
RDAV9810-01	111518	LCD MONITOR	LCD显示器	AR	
RDAV9810-01	201652	LCD MONITOR	LCD显示器	AR	
RDAV9810-01	201092	LCD MONITOR	LCD显示器	AR	
RDAV9810-01	C294066	LCD MONITOR	LCD显示器	AR	
RDAV9810-01	110945	LCD MONITOR	LCD显示器	AR	
206PN01	1319	DC. VOLTMETER	电压指示器	AR	
206PN01	1328	DC. VOLTMETER	电压指示器	AR	
PPA1203-00	147337	SMOKE DETECTOR	烟雾探测器	AR	
ST3100-23-10	2869	HANDSET	电话	AR	
ST3100-23-10	1594	HANDSET	电话	AR	
ST3100-23-10	2872	HANDSET	电话	AR	
196PN01Y02	4305	RUDDER TRIM INDICATOR	方向舵配平指示器	AR	
93-A150-20	01213	PREAMPLIFIER MODULE	前置放大器模块	AR	
24E507009G03	S1208707	HEATER-WATER	厕所水加热器	AR	SV
9700C1AF23AN	ST76056	PORTABLE OXYGEN CYLINDER	便携式氧气瓶	AR	
9700C1AF23AN	614055	PORTABLE OXYGEN CYLINDER	便携式氧气瓶	AR	
9700C1AF23AN	ST53694	PORTABLE OXYGEN CYLINDER	便携式氧气瓶	AR	
9700C1AF23AN	ST318224	PORTABLE OXYGEN CYLINDER	便携式氧气瓶	AR	
3552AAADAACXCD	P19012349	PORTABLE OXYGEN CYLINDER	便携式氧气瓶	AR	
3552AAADAACXCD	P12102168	PORTABLE OXYGEN CYLINDER	便携式氧气瓶	AR	
980-4700-003	3145	FLIGHT DATA RECORDER	飞行数据记录器	AR	SV
DK120-90	AT140724	DFDR ULB	水下信标电池	AR	SV
89794077	C12030148	CREW OXYGEN CYLINDER	机组氧气瓶	AR	
208724-0	2139	EMERGENCY ESCAPE ROPE	逃生绳	AR	
208724-0	2136	EMERGENCY ESCAPE ROPE	逃生绳	AR	
24E507009G03	S1220950	HEATER-WATER	厕所水加热器	AR	SV
24E507009G03	UJW02854	HEATER-WATER	厕所水加热器	AR	SV
3907130402	FCDMK1013	DISPLAY UNIT - DU	显示器		
3907130402	5763	DISPLAY UNIT	显示组件	SV	SV
3907130402	FCDMK1014	DISPLAYUNIT	显示组件	AR	SV
3907130402	6494	DISPLAYUNIT	显示组件	AR	SV
H321BHM1	Q03364018	STANDBY HORIZON	备用水平仪	AR	SV
63543-150-4	Q01957004	RMI VOR/DME DDRMI	数字距离无线电磁	AR	
2610-13-1	295	CLOCK	时钟	AR	
C12404AB02	C12404006	ATC/TCAS CONTROL UNIT	ATC/TACS控制组件	AR	
AR4709-1	N-C1624	COCKPIT SYSTEM CONTROLLER	驾驶舱门锁控制器	AR	
64161-234-1	1576	METRIC ALTIMETER	公制高度表	AR	
64141-580-1	4631	STANDBY ALTIMETER	备用高度表	AR	SV
64050-866-1	4378	STANDBY AIRSPEED INDICATOR	备用空速指示器	AR	SV
2598D	488C	LIGHT TRANSFORMER	变压器	AR	
913004	1780	CABIN CONTROL UNIT	客舱控制组件	AR	
3025	2043	STATIC CONVERTER	静态转换器	AR	
Y005-3	2959	TRANSFORMER RECTIFIER	变压整流器	AR	

8420B1-201	8420B1-201	COCKPIT-DOOR SURVEILLANCE	驾驶舱门监视系统	AR	
2LA005541-10	838	FLOODLIGHT UNIT-CAPTAIN	泛光灯组件	AR	
2LA005542-20	1049	LIGHT-MAIN INSTRUMENT	泛光灯组件	AR	
2LA005543-10	417	CAPTAIN FLOOD LIGHT UNIT	泛光灯组件	AR	
Z111H0033151	07403	AIP	乘务员指示面板	AR	
Z111H0033151	07170	AIP	乘务员指示面板	AR	
R0425A111	TS6A033	RAFT-LIFE	救生筏	AR	
MF10-05-11	72949	CREW OXYGEN MASK	机组氧气面罩	AR	SV
MF10-05-11	103467	CREW OXYGEN MASK	机组氧气面罩	AR	SV
MF10-05-11	104528	CREW OXYGEN MASK	机组氧气面罩	AR	SV
MF10-05-11	72874	CREW OXYGEN MASK	机组氧气面罩	AR	SV
64882-206-1	3946	BRAKE PRESSURE INDICATOR	刹车压力指示器	BC	SV
215TS07Y00	215TS0859	LANDING GEAR CONTROL LEVER	起落架控制手柄	AR	
35-0L0-1003-06	0L0008522	ECAM CONTROL PANEL	控制面板	AR	
15800-348A	14565	RINSE VALVE	冲洗活门	AR	
15800-348A	96114289	RINSE VALVE	冲洗活门	AR	
15800-358	1559	RINSE VALVE	冲洗活门	AR	SV
C-5K	98061336	STANDBY COMPASS	备用罗盘	AR	
14330-144	326	FLUSH CONTROL UNIT	冲洗控制组件	AR	
14330-144	780	FLUSH CONTROL UNIT	冲洗控制组件	AR	
14330-144	2410	FLUSH CONTROL UNIT	冲洗控制组件	AR	
342300M01	4743	TRANSDUCER UNIT	传感器组件	AR	
342300M01	4742	TRANSDUCER UNIT	传感器组件	AR	
30-1883-6	1834	WING/ENGINE SCAN LIGHT	机翼发动机检查灯	AR	
30-1883-5	1835	WING/ENGINE SCAN LIGHT	机翼发动机检查灯	AR	
2598D	4986	LIGHT TRANSFORMER	变压器	AR	
2598D	4994	LIGHT TRANSFORMER	变压器	AR	
2598D	4971	LIGHT TRANSFORMER	变压器	AR	
35-0D5-1003	0D5002348	COCKPIT LOUDSPEAKER AMPLIFIER	驾驶舱扬声器	AR	SV
622-5130-021	1FTPB	WEATHER RADAR DUAL CTL UNIT	天气雷达控制组件	AR	
AR4714-11	H-A5237	STRIKE ASSY-ELECTRICALLY	电释放装置	AR	SV
AR4714-7	H-D9776	STRIKE ASSY-ELECTRICALLY	电释放装置	AR	SV
35-0D5-1003	0D5002348	COCKPIT LOUDSPEAKER AMPLIFIER	驾驶舱扬声器	AR	SV
TA01Z6005	3030	AUTOTRANSFORMER	自动变压器	AR	
780B0000-01	0780B00L1	FLAP/SLAT COMMAND SENSOR	襟翼缝翼指令传感器	AR	SV
CG1151AC03	1048	ADIRS-CDU	总温传感器	AR	
ST3100-33-10	926	HANDSET	电话	AR	
Z2D0003000100000	4519	RHEOSTAT	变阻器	AR	
Z2D0003000100100	1617	RHEOSTAT	变阻器	AR	
864-001	10169	LIGHTED VISUAL ICING INDICATOR	结冰照明探测器	AR	
TA01Z6005	2943	AUTOTRANSFORMER	自动变压器	AR	
TA01Z6006	2941	AUTOTRANSFORMER	自动变压器	AR	
4279198	27789	MOTOR CONVERTER	雨刷马达	AR	SV
4279204	100610	MOTOR CONVERTER	雨刷马达	AR	SV
5XA005032-01	1158	CONTROLLER-LIGHTING	照明控制器	AR	
5XA005033-00	2198	CONTROLLER-LIGHTING	照明控制器	AR	
5XA005033-00	2202	CONTROLLER-LIGHTING	照明控制器	AR	
Y005-2	3077	TRANSFORMER RECTIFIER	变压整流器	AR	
Y005-2	4658	TRANSFORMER RECTIFIER	变压整流器	AR	
72CF8944-00	950	FLEXIBLE CONTROL	扰性控制组件	AR	
72CF8944-00	945	FLEXIBLE CONTROL	扰性控制组件	AR	

72CF8945-00	922	FLEXIBLE CONTROL	扰性控制组件	AR	
72CF8945-00	470	FLEXIBLE CONTROL	扰性控制组件	AR	
058-001-00	5051	ROTARY SWITCH	旋转电门	AR	
9027-20010	9740613	SELECTOR, LDG. FIELD EL	着陆高度选择器	AR	SV
777A0000-01	04496	SELECTOR, TEMP.	温度选择器	AR	
777A0000-01	04489	SELECTOR, TEMP.	温度选择器	AR	
777A0000-01	04617	SELECTOR, TEMP.	温度选择器	AR	
058-001-00	5068	ROTARY SWITCH	旋转电门	AR	
058-001-00	5052	ROTARY SWITCH	旋转电门	AR	
12432-2	9814596	VALVE, ISOLATION	隔离活门	AR	
058-001-00	5058	ROTARY SWITCH	旋转电门	AR	
7530334	20464	SELECTOR, TEMP.	温度选择器	AR	
12432-2	9814595	VALVE, ISOLATION	隔离活门	AR	
AR4714-201	H-A6053	STRIKE ASSY-ELECTRICALLY	电释放装置	AR	
PPA1104-01	01587	CARGO COMPARTMENTSMOKE DE	货仓烟雾探测器	AR	
PPA1104-01	01585	CARGO COMPARTMENTSMOKE DE	货仓烟雾探测器	AR	
600612-00-510	14100495	SENSOR, DUCT. TEMP.	管道温度传感器	AR	
600612-00-510	18167247	SENSOR, DUCT. TEMP.	管道温度传感器	AR	
PPA1102-00	13598	CARGO COMPARTMENT SMOKE I	货舱烟雾探测器	AR	SV
PPA1102-00	13482	CARGO COMPARTMENT SMOKE I	货舱烟雾探测器	AR	SV
PPA1102-00	13605	CARGO COMPARTMENT SMOKE I	货舱烟雾探测器	AR	SV
PPA1102-00	13596	CARGO COMPARTMENT SMOKE I	货舱烟雾探测器	AR	SV
VD3810	11024479	FAN, EXTRACTION	循环风扇	AR	SV
VD3920	98051175	FAN, EXTRACTION	循环风扇	AR	SV
8ES455012-00	1055565	POWER SUPPLY	电源供给组件	AR	SV
330400M01	1864	THROTTLE CONTROL UNIT	推力传感器	AR	
330400M01	2035	THROTTLE CONTROL UNIT	推力传感器	AR	
4020W35-1	207	RAIN REPELLENT GAGE ASSY	防雨油量计量组件	AR	
3107-89	1806	MARKER ANTENNA	信标天线	AR	
D9550001901700	FR1939	SIDESTICK	操纵杆	AR	
321000M03	6050	SIDE STICK TRANSDUCER UN	操纵杆传感器组件	AR	SV
321000M03	6059	SIDE STICK TRANSDUCER UN	操纵杆传感器组件	AR	SV
D9550001801700	FR1939	SIDESTICK	操纵杆	AR	
321000M03	6020	SIDE STICK TRANSDUCER UN	操纵杆传感器组件	AR	SV
321000M03	6027	SIDE STICK TRANSDUCER UN	操纵杆传感器组件	AR	SV
3888394-221205	706	ELECTRON. CONTROL BOX	电子控制盒	AR	SV
9599-607-12352	6603	RADIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
9599-607-12352	6616	RADIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
9599-607-12352	6625	RADIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
9599-607-12352	6600	RADIO ALTIMETER ANTENNA	无线电高度天线	AR	SV
Z111H0033151	07402	AIP	乘务员指示面板	AR	
VT442-2	3862	WATER QUANTITY INDICATOR	水量指示器	AR	
S4-3400900-01	0515	MANUEL SELECTOR VALVE	手动选择活门	AR	SV
1X2005012-00	2862	LIGHT-CARGO LOADING AREA	货舱装载区域灯	AR	
1X2005012-00	2867	LIGHT-CARGO LOADING AREA	货舱装载区域灯	AR	
Z220H0002110	220H00006	CONTROL UNIT	控制组件	AR	
D05000	6822	VALVE-FILL AND DRAIN	排放活门	AR	SV
27-457	1517	RUDDER TRIM CONTROL SWITC	方向舵配平控制电	AR	
20790-02AC	9951631	VALVE, OUTFLOW	外流活门	BC	SV
222-1	054	REFRIGERATOR	冰箱	AR	
S1821502-02	2611710-0	FIXED ELT	固定应急定位发射	AR	SV

2407-89-03	4584	ATC/DME. ANTENNA	测距天线	AR	
2439-89-03	243989-5	ATC/DME. ANTENNA	测距天线	AR	
2439-89-03	243989-5	ATC/DME. ANTENNA	测距天线	AR	
2439-89-03	243989-5	ATC/DME. ANTENNA	测距天线	AR	
VD3900-03	96091063	FAN, RECIRCULATION	循环风扇	AR	SV
J172ABM	9670	ACCELEROMETER	加速度计	AR	
J172ABM	9684	ACCELEROMETER	加速度计	AR	
J172ABM	9669	ACCELEROMETER	加速度计	AR	
J172ABM	9668	ACCELEROMETER	加速度计	AR	
D05000	2101	VALVE-FILL AND DRAIN	排放活门	AR	SV
D05000	3851	VALVE-FILL AND DRAIN	排放活门	AR	SV
764B0000-01	05063	TEMPERATURE SENSOR	传感器	AR	SV
764B0000-01	05009	TEMPERATURE SENSOR	传感器	AR	SV
763A0000-03	10687	TEMPERATURE SENSOR	传感器	AR	SV
763A0000-03	10715	TEMPERATURE SENSOR	传感器	AR	SV
761B0000-01	05524	ACTUATOR, RAMAIR INLET	冲压进气口作动器	BC	
761B0000-01	05422	ACTUATOR, RAMAIR INLET	冲压进气口作动器	AR	
12664	9815059	VALVE CHECK	单向活门	AR	
12664	9815020	VALVE CHECK	单向活门	AR	
9106A0005-02	03242	PRESSURE SENSORS IMPR	压差传感器	AR	
2697A0000-01	2697A00L	PRESSURE SENSORS IMPR	压差传感器	AR	
766A0000-01	02487	TEMPERATURE SENSOR	传感器	AR	
766A0000-01	07752	TEMPERATURE SENSOR	传感器	AR	
766A0000-01	80210108	DOUBLE CHECK VALVE	双单向活门	AR	
986F12-1	D25090	CHECK VALVE, PRESS. SER	单向活门	AR	
986F12-1	2020	CHECK VALVE, PRESS. SER	单向活门	AR	
767A0000-04	02963	SENSOR-TEMPERATURE	传感器	AR	
767A0000-04	02396	SENSOR-TEMPERATURE	传感器	AR	
764A0000-03	07090	SENSOR-TEMPERATURE	传感器	AR	
764A0000-03	07216	SENSOR-TEMPERATURE	传感器	AR	
763A0000-03	10760	SENSOR	传感器	AR	SV
763A0000-03	28078	SENSOR	传感器	AR	SV
763A0000-03	10704	SENSOR	传感器	AR	SV
763A0000-03	08492	SENSOR	传感器	AR	SV
764A0000-03	07414	SENSOR-TEMPERATURE	传感器	AR	
736A0000-02	04326	SENSOR, MIX. TEMP.	传感器	AR	
736A0000-02	04218	SENSOR, MIX. TEMP.	传感器	AR	
6610-15945	2433	ACTUATOR, ROTARY	作动器	AR	
1320A0000-02	1320A00L	VALVE, TRIM AIR	配平空气活门	AR	
963A0000-02	002792	VALVE, TRIM AIR	配平空气活门	BC	SV
963A0000-02	03285	VALVE, TRIM AIR	配平空气活门	BC	SV
758A0000-02	01591	BYPASS VALVE	旁通活门	AR	SV
12664	9815056	VALVE CHECK	单向活门	AR	
1407KID02-03	981386	REFUEL MULTITANK INDICAT	油量指示器	AR	
796815-02-03	1226	REFUEL PRESELECTOR	燃油预选器	AR	
5906733	8283	6 HOLE CURRENT TRANSFORM	6孔电流互感器	AR	
5906733	8284	6 HOLE CURRENT TRANSFORM	6孔电流互感器	AR	
758A0000-02	02184	BYPASS VALVE	旁通活门	AR	SV
747A0000-03	02076	WATER EXTRACTOR	水分离器	AR	
747A0000-03	052006	WATER EXTRACTOR	水分离器	AR	
1091A0000-01	00993	INJECTOR, WATER	喷水器	AR	

1091A0000-01	11886	INJECTOR, WATER	喷水器	AR	
HTE690047	FRTR069	SWITCH PRESS. HOT AIR	热空气压力电门	AR	
70200	3987	VALVE, 2/2WAY	活门	AR	
9104A0006-01	10129	PRESSURE SENSORS IMPR	压力传感器	AR	
9106A0005-02	3118	PRESSURE SENSORS IMPR	压力传感器	AR	
HTE370001	M0596VNR	HP GROUND CONNECTOR	地面高压引气接头	AR	
4-60000H882-00	36830000	DRAINMAST	防水桅杆	AR	SV
4-60000H882-00	TH-02958	DRAINMAST	防水桅杆	AR	SV
VD3900-03	98081324	FAN, RECIRCULATION	循环风扇	AR	SV
QA07739-02	RN11-1013	RSVR PRESS UNIT	增压组件	AR	
1303A0000-04	1303-0293	VALVE FLOW CONTROL	流量控制组件	AR	
1303A0000-04	1303-0323	VALVE FLOW CONTROL	流量控制组件	AR	
769B0000-01	02055	CHECK VALVE	单向活门	AR	
756A0000-06	0756A00ES	CONDENSER	冷凝器	AR	SV
755C0000-01	81210-577	REHEATER	再加热器	AR	SV
756A0000-06	0756A00ES	CONDENSER	冷凝器	AR	SV
755C0000-01	81210-577	REHEATER	再加热器	AR	SV
746A0000-06	746-10732	VALVE, TRIM AIR PRESS.	配平空气压力阀	BC	SV
6202-89-62	620289-30	GLIDE ANTENNA	下滑道天线	AR	
70200	4323	VALVE, 2/2WAY	活门	AR	
ZCV63-4	8033073	CHECK VALVE	单向活门	AR	
C16291AB	Q06747050	ANGLE OF ATTACK SENSOR	迎角传感器	AR	SV
0861ED	0861ED-40	ANGLE OF ATTACK SENSOR	迎角传感器	AR	SV
769B0000-01	2033	CHECK VALVE	单向活门	AR	
3106-89	1322	LOCALIZER ANTENNA	航向天线	AR	
753C0000-01	3306	PRIMARY HEAT EXCHANGER	次级热交换器	AR	
753C0000-01	4126	PRIMARY HEAT EXCHANGER	次级热交换器	AR	
754C0000-01	81212-541	MAIN HEAT EXCHANGER	主热交换器	AR	SV
754C0000-01	6091	MAIN HEAT EXCHANGER	主热交换器	AR	SV
Z220H0002110	2330	CONTROL UNIT	控制组件	AR	
762080-1	H0848	SAFETY VALVE L. G. S.	安全活门	AR	SV
762080-1	H0854	SAFETY VALVE L. G. S.	安全活门	AR	SV
D323-70101-00-F	659	VERTEILERBLOCK	分配组件	AR	
2407-89-03	5025	ATC/DME. ANTENNA	测距天线	AR	
972C10-1	J73843	VALVE-SHUTTLE	关断活门	AR	
1905A0000-01	1679	SAFETY VALVE L. G. S.	安全阀	AR	
QA05604	RG73897	FILTER HYD. LP	低压油滤组件	AR	
TM113-1	12676	TRANSDUC. /SWITCH-TEMP	电门	AR	
SB209L1A1-1484	51333	HYDR. ACCUMULATOR	储压器	AR	
18330904-2	46806D	PRESSURE GAUGE NIT.	压力表	AR	SV
HTE510016	C103278	ACCUMULATOR GAS CHARGING	储压器充气阀	AR	SV
2403-89	5025	VHF ANTENNA	甚高频天线	AR	SV
114087007	DH-3569-C	DOOR BY-PASS VALVE, MLG	主起落架门旁通活	AR	
A25316-101	H2055	DUAL SHUTTLE VALVE	关断活门	AR	
A25434006-3000	H3093	EMER. BRK. DUAL DISTR. VALVE	应急阀	AR	
QA05561	RG5-5543	FILTER HYD. LP	油滤	AR	
201122008	CWDD-DH23	DOOR UPLOCK, MLG	主起门上位锁组件	AR	
622-5136-201	3906	WEATHER RADAR DUAL ANT MC	气象雷达天线基座	AR	
1263A0000-03	06695	ACM	空气循环机	AR	SV
757A0000-10	02003	ACM	空气循环机	AR	
622-5137-601	6240	WEATHER RADAR ANTENNA	气象雷达天线	AR	SV

Z2D0003000100000	4524	RHEOSTAT	变阻器	AR	
33D01300-5	A0379	WANEGUIDE SWITCH	波导电门	AR	
2403-89	240389-1	VHF ANTENNA	甚高频天线	AR	SV
822-1330-001	4410N	ACTIVE GPS ANTENNA	天线	AR	
822-1330-001	4410T	ACTIVE GPS ANTENNA	天线	AR	
201122008	CWDD-DH2	DOOR UPLOCK, MLG	主起门上位锁组件	AR	
114122014	DH-4413-0	DOOR ACTUATOR, MLG	主起舱门作动筒	AR	SV
114122014	CH1207548	DOOR ACTUATOR, MLG	主起舱门作动筒	AR	SV
2407-89-03	4209	ATC/DME. ANTENNA	测距天线	AR	
3001-01-111	9805-0427	LINEAR ACCELEROMETER	线性加速计	AR	SV
788A0000-02	U1937	RIGHT ANGLE GEARBOX	齿轮箱	AR	
HTE200002-1	M448GB798	FUEL TRANSFER VALVE ACTUA	作动器	AR	SV
14330-050	7426	FLUSH VALVE	冲洗活门	AR	SV
14330-050	2711	FLUSH VALVE	冲洗活门	AR	SV
14330-050	7469	FLUSH VALVE	冲洗活门	AR	SV
S4-3500711	1084	GROUND SERVICE MANIFO	地面勤务总管	AR	
S4-3500711	1123	GROUND SERVICE MANIFO	地面勤务总管	AR	
A25461-104	H0916	AUTOMATIC SELECTOR	自动选择器	AR	
C19BQ0016	062	RESERVOIR HYDR. BLUE	蓝系统储压器	AR	
18301905-1	47558D	PRESSURE GAUGE AIR	空气压力表	AR	
HTE690112	FRTR004	PRESS. SWITCH BLUERSVR	蓝系统储压器压力	AR	
HTE690035-1	FR309	PRESSURE SWITCH AIR	空气压力电门	AR	
70400	3032	VALVE RELIEF AIR	释压活门	AR	
D2907017100000	221	PTU-MANIFOLD	PTU总管	AR	
QA06304	RG75102	FILTER	油滤	AR	
ZCV64-16	80214479	CHECK VALVE	单向活门	AR	
114151004	CWDD-DH38	VALVE, RELIEF H. P.	释压活门	AR	
S4-3401610-01	01226	VALVE, 3/2WAY-	活门	AR	
CZ9284E	HEK17377	PRESSURE TRANSDUCER	压力传感器	AR	SV
50-2-3100-00	9956	SWITCH PRESSURE HYD.	液压电门	AR	SV
50-2-3100-00	9948	SWITCH PRESSURE HYD.	液压电门	AR	SV
P7119HP	468990076	VALVE SAMPLING	取样活门	AR	
D2907020702000	NA001	HP-MANIFOLD	高压总管	AR	
QA06304	RG75098	FILTER	油滤	AR	
114151004	CWDD-DH38	VALVE, RELIEF H. P.	释压活门	AR	
ZCV64-16	61126582	CHECK VALVE	单向活门	AR	
CZ9284E	HEK17466	PRESSURE TRANSDUCER	压力传感器	AR	SV
50-2-3100-00	9985	SWITCH PRESSURE HYD.	液压电门	AR	SV
50-2-3100-00	9971	SWITCH PRESSURE HYD.	液压电门	AR	SV
S4-3400950-06	02528	VALVE, 3/2WAY-	活门	AR	
P7119HP	459490113	VALVE SAMPLING	取样活门	AR	
ZCV63-6	80629372	CHECK VALVE	单向活门	AR	
ZCV63-6	80629233	CHECK VALVE	单向活门	AR	
HTE190001-2	FRTR073A	TWIN MOTOR ACTUATOR	作动器	AR	SV
A08000	3024	LP FUEL SOV APU	燃油储压活门作动	AR	
520913	F9839985	CONST. SPEED MOTOR/GENERAT	恒速马达发电机	AR	SV
QA05797	RG65183	FILTER, HYD. HP	油滤	AR	
QA05797	RG82123	FILTER, HYD. HP	油滤	AR	
3022016-000	G1731325	RELIEF VALVE	释压活门	AR	
ZCV63-8	71218152	CHECK VALVE	单向活门	AR	
693335	MX602846	PACKAGE E-PUMP	电动泵	AR	SV

201117017	CWDD-DH12	UNLOCK, MLG	主起上位锁组件	AR	
201117018	CWDD-DH12	UNLOCK, MLG	主起上位锁组件	AR	
791A0000-06	U2079	ACTUATOR-FLAP	襟翼作动器	AR	
791A0000-06	U2083	ACTUATOR-FLAP	襟翼作动器	AR	
114087006	CWDD-DH16	DOOR BY-PASS VALVE, MLG	旁通活门	AR	
C12CB0010	1022	PUMP, FUEL	燃油泵	AR	
769105A	DH-0070	AGCM	空中地面检查模块	AR	
C24703003-1	H1860	PARK BRAKE SELECTOR VALVE	停留选择活门	AR	
QA05561	RG7-4487	FILTER HYD. LP	油滤	AR	
TM113-1	2476	TRANSDUC. /SWITCH-TEMP	电门	AR	
C19DS0026	059	RESERVOIR HYDR. GREEN	绿系统液压油箱	AR	
HTE690035-1	FR329	PRESSURE SWITCH AIR	压力电门	AR	
18301905-1	47555D	PRESSURE GAUGE AIR	气压表	AR	
70400	8099	VALVE RELIEF AIR	释压活门	AR	
C82LL0010	3333	DRAIN VALVE	排放活门	AR	SV
1555A0000-01	NA001	PTU-MANIFOLD	PTU总管	AR	
BHC1060-04	3305	VALVE PRIORITY	优先活门	AR	SV
A25313002	H2583	SELECTOR VALVE	选择活门	AR	
S4-3400920-03	02525	VALVE, 2/2WAY	活门	AR	
ZCV64-10	20-0306-9	CHECK VALVE	单向活门	AR	
ZCV66-1	70819302	CHECK VALVE	单向活门	AR	
C19DS0016	041	RESERVOIR HYDR. YELLOW	黄系统液压油箱	AR	
C82LL0010	3207	DRAIN VALVE	排放活门	AR	SV
18301905-1	46534D	PRESSURE GAUGE AIR	气压表	AR	
70400	2464	VALVE RELIEF AIR	释压活门	AR	
HTE690035-1	FR301	PRESSURE SWITCH AIR	压力电门	AR	
ZCV64-20	70522416	CHECK VALVE	单向活门	AR	
ZCV63-6	80720411	CHECK VALVE	单向活门	AR	
114170009	CH101022	SELECTOR VALVE MANIFOLD	选择活门	AR	
D2907017500200	1920	MANIFOLD	总管	AR	
BHC1060-04	3267	VALVE PRIORITY	优先活门	AR	SV
S4-3400920-03	02014	VALVE, 2/2WAY	活门	AR	
ZCV64-12	10-08133	CHECK VALVE	单向活门	AR	
ZCV67-1	8030668	CHECK VALVE	单向活门	AR	
1554A0000-01	NA001	BLUE HYDRAULIC SYSTEM MAN	总管	AR	
QA06304	RG7-5083	FILTER	油滤	AR	
BHC1060-04	3276	VALVE PRIORITY	优先活门	AR	SV
CZ9284E	HEK17370	PRESSURE TRANSDUCER	压力传感器	AR	SV
114151004	CWDD-DH37	VALVE, RELIEF H. P.	释压活门	AR	
ZCV66-1	80123396	CHECK VALVE	单向活门	AR	
ZCV64-10	80413210	CHECK VALVE	单向活门	AR	
S4-3400950-06	02491	VALVE, 3/2WAY	活门	AR	
50-2-3100-00	9931	SWITCH PRESSURE HYD.	压力电门	AR	SV
50-2-3100-00	8969	SWITCH PRESSURE HYD.	压力电门	AR	SV
P7119HP	468990096	VALVE SAMPLING	取样活门	AR	
ZCV64-12	80814117	CHECK VALVE	单向活门	AR	
615-2630-102	576-13477	ADF ANTENNA	自动定向天线	AR	SV
615-2630-102	4178	ADF ANTENNA	自动定向天线	AR	SV
1298A0000-01	01575	VALVE, CHECK TRIM AIR	单向活门	AR	SV
1298A0000-01	04689	VALVE, CHECK TRIM AIR	单向活门	AR	SV
2LA455010-00	1133	STROBE LIGHT	频闪灯	AR	SV

2LA455010-00	1071707	STROBE LIGHT	频闪灯	AR	SV
41-2-1100-02	1087	ACTUATOR, EMER. RAM AIR	冲压进气口作动器	AR	SV
786A0000-12	02046	POWER CONTROL UNIT	动力控制组件	AR	
787A0000-07	04137	VALVE BLOCK	活门块	AR	
787A0000-07	04135	VALVE BLOCK	活门块	AR	
9028A0004-01	07935	POS. PICK OFF UNIT	位置传感器	AR	
9028A0004-01	07932	POS. PICK OFF UNIT	位置传感器	AR	
786A0000-12	02050	POWER CONTROL UNIT	动力控制组件	AR	
787A0000-07	04153	VALVE BLOCK	活门块	AR	
787A0000-07	04158	VALVE BLOCK	活门块	AR	
9028A0004-01	08028	POS. PICK OFF UNIT	位置传感器	AR	
9028A0004-01	08036	POS. PICK OFF UNIT	位置传感器	AR	
S4-3402180	1335	ELECTRIC. SELECTOR VA	电子选择活门	AR	
14404-010	99070707	VACUUM SYSTEM CONTROL	真空系统控制器	AR	
Z212H0001110	2855	CONTROL UNIT	控制组件	AR	
2LA005414-01	962	OVERWING EMERG LIGHT	应急灯	AR	
2LA005128-01	927	OVERWING EMERG LIGHT	应急灯	AR	
2LA005127-01	939	OVERWING EMERG LIGHT	应急灯	AR	
S4-3500712	0312	GROUND SERVICE MANIFO	地面服务总管	AR	
70200	3584	VALVE, 2/2WAY	活门	AR	
QA05593	RG8-2080	FILTER HYD. HP	油滤	AR	
14403-085	0215	LIQUID LEVEL TRANSMITTER	液位传感器	AR	SV
14403-003C	C2907-00	TRANSMITTER-LEVEL	液位传感器	BC	SV
L83A13-617	20492	LEAK-MONITOR	渗漏检测器	AR	
2LA005413-01	995	OVERWING EMERG LIGHT	应急灯	AR	
2LA005308-05	5929	WING STROBE LIGHT	频闪灯	BC	SV
2LA005308-05	5765	WING STROBE LIGHT	频闪灯	BC	SV
528-70	4775	WING TIP NAVIGATION LIGHT	导航灯	AR	SV
528-80	2786	WING TIP NAVIGATION LIGHT	导航灯	AR	
8ES005309-00	1880	POWER SUPPLY UNIT	电源供给组件	BC	
8ES005309-00	2184	POWER SUPPLY UNIT	电源供给组件	AR	
1X2005097-00	1721	LOGO LIGHT	航徽灯	AR	SV
1X2005097-00	382157	LOGO LIGHT	航徽灯	AR	SV
2LA005303-05	5419	TAIL STROBE LIGHT	尾部频闪灯	AR	SV
2LA403702-01	D8095	RWD FACING NAVIGATION LIC	尾部导航灯	AR	
SB209L1A1-1484	50513	HYDR. ACCUMULATOR	储压器	AR	
18330904-2	056906	PRESSURE GAUGE NIT.	压力表	AR	SV
HTE510016	C131377	ACCUMULATOR GAS CHARGING	充气阀	AR	SV
SB209L1A1-1484	30345	HYDR. ACCUMULATOR	储压器	AR	
18330904-2	46868D	PRESSURE GAUGE NIT.	压力表	AR	SV
HTE510016	C124344	ACCUMULATOR GAS CHARGING	充气阀	AR	SV
8ES403703-02	3186	RWD FACING NAV LIGHT XFMI	变压器	AR	
50-2-3100-00	9059	SWITCH PRESSURE HYD.	液压电门	AR	SV
642M3001505	5393001	FAN COWL	风扇整流罩	AR	
642M3001503	5590001	FAN COWL	风扇整流罩	AR	
642M3002503	5503001	FAN COWL	风扇整流罩	AR	
642M3002505	5504001	FAN COWL	风扇整流罩	AR	
6421000505	5958001	INLET	进气道	AR	
6421000505	5745001	INLET	进气道	AR	
238-0451-523	10892001	EXHAUST CENTRE	中心体	AR	
642-4001-501	10892001	EXHAUST NOZZLE	尾椎	AR	SV

748A0000-08	02148	VALVE ANTI ICING	防冰活门	AR	
748A0000-08	02151	VALVE ANTI ICING	防冰活门	AR	
HTE69000-1	FR751BA	P-SWITH	P电门	AR	SV
1330622V	00T0813	3RD. OCCUPANT SEAT	第三观察员座椅	AR	
238-0451-513	2722001	EXHAUST CENTRE	中心体	AR	
642-4001-501	2723001	EXHAUST NOZZLE	尾椎	AR	SV
11-851154-6	03464	PRECOOLER EXCHANGER	预冷器交换器	AR	
341E030000	01926	SOLENOID THERMOSTAT	引气压力调节活门	AR	SV
341E030000	02235	SOLENOID THERMOSTAT	引气压力调节活门	AR	SV
342B050000	18268	THERMOSTAT-CONTROL	恒温控制器	AR	SV
342B050000	17211	THERMOSTAT-CONTROL	恒温控制器	AR	SV
6740E010000	03089	OVERPRESSURE VALVE	过压活门	AR	
6740E010000	00229	OVERPRESSURE VALVE	过压活门	AR	
6730C010000	00294	FAN AIR VALVE	风扇空气活门	AR	
6730C010000	01261	FAN AIR VALVE	风扇空气活门	AR	
ZRA380-00	ASA16704	TRANSDUCER	压力传感器	AR	
ZRA380-00	ASA07643	TRANSDUCER	压力传感器	AR	
31075-840	5479	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
31075-840	5580	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
FRH100013A	020035	APU FUEL PRESS. SWITCH	压力电门	AR	
831A0000-05	04048	WING TIP BRAKE	翼尖刹车	AR	
831A0000-05	04033	WING TIP BRAKE	翼尖刹车	AR	
831A0000-05	04049	WING TIP BRAKE	翼尖刹车	AR	
ZCV64-12	80423325	CHRCK VALVE	单向活门	AR	
ZCV64-10	80413196	CHRCK VALVE	单向活门	AR	
ZCV63-6	80721237	CHRCK VALVE	单向活门	AR	
ZCV63-6	80720352	CHRCK VALVE	单向活门	AR	
ZCV63-6	80721239	CHRCK VALVE	单向活门	AR	
ZCV63-6	80721242	CHRCK VALVE	单向活门	AR	
ZCV63-6	80721241	CHRCK VALVE	单向活门	AR	
ZCV63-6	80721244	CHRCK VALVE	单向活门	AR	
3108-89	1041	VOR. ANTENNA	全信标天线	AR	
ZCV64-10	80819611	CHRCK VALVE	单向活门	AR	
114083003	CWDD-DH17	VENT VALVE, MLG	主起通气活门	AR	
34100005-1	80973D1	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1646RK	ENGINE FIRE EXTINGUISHER	爆炸帽	AR	SV
34100005-1	45164D1	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1587RK	ENGINE FIRE EXTINGUISHER	爆炸帽	AR	SV
34100005-1	31879D1	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1446WF	ENGINE FIRE EXTINGUISHER	爆炸帽	AR	SV
34100005-1	81752D1	ENGINE FIRE EXTINGUISHER	发动机灭火瓶	AR	SV
30903886	1628RK	ENGINE FIRE EXTINGUISHER	爆炸帽	AR	SV
114086001	CWDD-DH12	CUT-OUT VALVE	关断活门	AR	
828A0000-02	U3829	GEARBOX	齿轮箱	AR	
828A0000-02	U3830	GEARBOX	齿轮箱	AR	
788A0000-02	U1936	GEARBOX	齿轮箱	AR	
828A0000-02	U3831	GEARBOX	齿轮箱	AR	
828A0000-02	U3832	GEARBOX	齿轮箱	AR	
ZCV63-6	80721243	CHRCK VALVE	单向活门	AR	
A25315-1	H2064	PARKING BRAKE VALVE	活门	AR	
VT477-2	0491	INDICATOR QTY. RSVR.	指示器	AR	

6-1404-0000-4	07-0123	HYDRAULIK HAND PUMP	手摇泵	AR	SV
6-1404-0000-4	98-0207	HYDRAULIK HAND PUMP	手摇泵	AR	SV
114083003	CWDD-DH23	VENT VALVE, MLG	主起通气活门	AR	
114087006	CWDD-DH17	DOOR BY-PASS VALVE, MLG	主起舱门旁通活门	AR	
682007004	EUDH35998	RAT CONTROL PANEL	RAT控制面板	AR	
114161003	CWDD-DH69	MODULE-JACK CONTROL	弹射器控制模块	AR	
C51LM0020	3667	VALVE, 4/4WAY-	活门	AR	
680203037A	353	RAT-RAM AIR TURBINE	冲压空气涡轮	AR	SV
933260	F9829343	PUMP	泵	AR	
114160005	HAI0441	EJECTION JACK	弹射器	AR	
974540	G0931021	PACKAGE E-PUMP	电动液压泵	AR	
ZCV63-6	80720398	CHECK VALVE	单向活门	AR	
ZCV63-4	80619379	CHECK VALVE	单向活门	AR	
830A0000-04	15572	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	15564	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	15568	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	15571	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	15560	ACTUATOR B-SLAT	缝翼作动器	AR	
829B0000-01	04018	ACTUATOR A-SLAT	缝翼作动器	AR	
829B0000-01	04016	ACTUATOR A-SLAT	缝翼作动器	AR	
ZCV63-6	80720394	CHECK VALVE	单向活门	AR	
ZCV63-6	80720310	CHECK VALVE	单向活门	AR	
ZCV63-6	80720447	CHECK VALVE	单向活门	AR	
ZCV63-6	80721238	CHECK VALVE	单向活门	AR	
ZCV63-6	80629257	CHECK VALVE	单向活门	AR	
ZCV63-6	80721240	CHECK VALVE	单向活门	AR	
ZCV64-12	8060149	CHECK VALVE	单向活门	AR	
ZCV64-10	70902390	CHECK VALVE	单向活门	AR	
ZCV64-10	70902361	CHECK VALVE	单向活门	AR	
ZCV63-8	80814205	CHECK VALVE	单向活门	AR	
ZCV63-8	71218150	CHECK VALVE	单向活门	AR	
ZCV63-8	8042841	CHECK VALVE	单向活门	AR	
ZCV63-4	8081970	CHECK VALVE	单向活门	AR	
3901395	FRTR239BA	PUMP JET	引射泵	AR	
HTE900087-001	FR246BA	FUEL TRANSFER VALVE	燃油传输活门	AR	
HTE900087-001	FR121BA	FUEL TRANSFER VALVE	燃油传输活门	AR	
HTE900087-001	FR120BA	FUEL TRANSFER VALVE	燃油传输活门	AR	
HTE900087-001	FR123BA	FUEL TRANSFER VALVE	燃油传输活门	AR	
9028A0004-01	08450	POS. PICK OFF UNIT	不对称位置传感器	AR	
9028A0004-01	08401	POS. PICK OFF UNIT	不对称位置传感器	AR	
9028A0004-01	08400	POS. PICK OFF UNIT	不对称位置传感器	AR	
9028A0004-01	08399	POS. PICK OFF UNIT	不对称位置传感器	AR	
790A0000-02	U2828	GEARBOX	齿轮箱	AR	
827A0000-02	U975	GEARBOX	齿轮箱	AR	
789A0000-02	U1934	GEARBOX	齿轮箱	AR	
831A0000-05	04050	WING TIP BRAKE	翼尖刹车	AR	
521A0200-01	03619	ADAPTER PPU-ASSY	适配器	AR	
521A0200-01	03618	ADAPTER PPU-ASSY	适配器	AR	
60128-101	C1314	RAFT SURVIVAL KIT	救生包	AR	SV
60128-101	C3472	RAFT SURVIVAL KIT	救生包	AR	SV
60128-101	C3594	RAFT SURVIVAL KIT	救生包	AR	SV

60128-101	C3059	RAFT SURVIVAL KIT	救生包	AR	SV
N/A	N/A	FIRST AID KIT	急救箱	AR	
N/A	N/A	EMERGENCY MEDICAL EQUIPMENT	应急医疗箱	AR	
UDK-A01	N/A	UNIVERSAL PRECAUTION KIT	卫生防疫包	AR	
ESO400	N/A	FIRE AXE	消防斧	AR	
D5746059800100	SA1665	SLAT 5RH	缝翼	AR	
D5746037800400	SA1939	SLAT 3LH	缝翼	AR	
D5746037800500	SA1948	SLAT 3RH	缝翼	AR	
D5746047800500	SA1939	SLAT 4RH	缝翼	AR	
D5746027800300	SA1939	SLAT 2LH	缝翼	AR	
D5746027800200	SA1939	SLAT 2RH	缝翼	AR	
D5746016800400	SA1939	SLAT 1LH	缝翼	AR	
D5746016800500	SA1939	SLAT 1RH	缝翼	AR	
810A0000-05	12537	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	SV
810A0000-05	12602	RUDDER SERVOCONTROL	方向舵伺服控制器	BC	SV
810A0000-05	06683	RUDDER SERVOCONTROL	方向舵伺服控制器	AR	SV
SC4700-5	15483	YAW DAMPER SERVOACTUATOR	偏航阻尼伺服控制	AR	SV
SC4700-5	11836	YAW DAMPER SERVOACTUATOR	偏航阻尼伺服控制	AR	SV
D2727025000400	NA001	ROD-SPRING	杆弹簧	AR	
D2727000700600	151716872	ROD-SPRING	杆弹簧	AR	
830A0000-04	15563	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	15567	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	15559	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	15565	ACTUATOR B-SLAT	缝翼作动器	AR	
642-2300-9	NA001	AFT ENG MOUNT	发动机后安装座	AR	
642-2300-9	NA002	AFT ENG MOUNT	发动机后安装座	AR	
830A0000-04	15570	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	15558	ACTUATOR B-SLAT	缝翼作动器	AR	
322000M02	1996	TRANSDUCER UNIT	传感器组件	AR	SV
322000M02	2174	TRANSDUCER UNIT	传感器组件	AR	SV
6137-3	1146	RUDDER TRIM ACTUATOR	方向舵配平作动筒	AR	
DV8456701-5	3253	TRAVEL LIMITATION UNIT	行程限制组件	AR	SV
830A0000-04	15569	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	15561	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	15562	ACTUATOR B-SLAT	缝翼作动器	AR	
830A0000-04	15566	ACTUATOR B-SLAT	缝翼作动器	AR	
829B0000-01	04017	ACTUATOR A-SLAT	缝翼作动器	AR	
829B0000-01	04019	ACTUATOR A-SLAT	缝翼作动器	AR	
789A0000-02	U1932	LINE GEARBOX	齿轮箱	AR	
830A0000-04	15557	ACTUATOR B-SLAT	缝翼作动器	AR	
E03A00	3197	FIRE-SHUT-OFF-VALVE	火警关断活门	AR	
E03A00	3198	FIRE-SHUT-OFF-VALVE	火警关断活门	AR	
D5757030501500	NA001	STRUT ASSY INTERCONNECTING	连接支柱	AR	
D5757030501500	NA002	STRUT ASSY INTERCONNECTING	连接支柱	AR	
D5775000500100Z	AP956	SPOILER 5 RH	扰流板	AR	
D5775000400100Z	AP967	SPOILER 4 RH	扰流板	AR	
D5775000300100Z	AP953	SPOILER 3 RH	扰流板	AR	
D5775000200100Z	AP732	SPOILER 2 RH	扰流板	AR	
D5775000100100Z	AP717	SPOILER 1 RH	扰流板	AR	
L95F100-603	31187	FUEL TK OVERPRESSURE PROTECT	燃油油箱过压保护	AR	
L95F100-603	31188	FUEL TK OVERPRESSURE PROTECT	燃油油箱过压保护	AR	

1158000-21	FR260BA	REFUEL VALVE	加油活门	AR	SV
1158000-21	FR358BA	REFUEL VALVE	加油活门	AR	SV
1158000-21	FR354BA	REFUEL VALVE	加油活门	AR	SV
31077-111	48719	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	8110	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	8116	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	8112	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	8109	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	8117	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	8111	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-211	8113	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	8108	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
31077-111	9505	SPOILER SERVOCONTROL	扰流板伺服控制器	AR	
HTE200002-1	M364GB998	FUEL TRANSFER VALVE ACTUATOR	作动器	AR	SV
HTE200002-1	M366GB998	FUEL TRANSFER VALVE ACTUATOR	作动器	AR	SV
31073-110	3965	AILERON SERVOCONTROL	副翼伺服作动器	AR	SV
31073-110	3224	AILERON SERVOCONTROL	副翼伺服作动器	AR	SV
31073-110	3964	AILERON SERVOCONTROL	副翼伺服作动器	AR	SV
31073-110	23607	AILERON SERVOCONTROL	副翼伺服作动器	AR	SV
38E93-6	14374	WING ANTI-ICE CONTROL VALVE	大翼防冰活门	AR	SV
38E93-6	14101	WING ANTI-ICE CONTROL VALVE	大翼防冰活门	AR	SV
0727540	C122977	CAP-COUPLING, REFUEL	加油口盖	AR	
D5775000500000Z	AP962	SPOILER 5 LH	扰流板	AR	
D5775000400000Z	AP972	SPOILER 4 LH	扰流板	AR	
D5775000300000Z	AP957	SPOILER 3LH	扰流板	AR	
D5775000200000Z	AP736	SPOILER 2 LH	扰流板	AR	
D5775000100000Z	AP741	SPOILER 1 LH	扰流板	AR	
3530000-1	FRTR30179	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30172	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30174	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30176	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30159	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30173	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30178	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30181	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30175	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30180	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30177	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30182	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30186	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30167	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30169	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30183	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30168	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30184	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30170	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR30166	SENSOR-FUEL LEVEL	油位传感器	AR	
HTE310021-1	FR193BA	AIR INLET VALVE	进气活门	AR	
HTE310021-1	FR194BA	AIR INLET VALVE	进气活门	AR	
HTE420044	FR191BA	PRESSURE HOLDING VALVE	稳压活门	AR	
HTE420044	FR189BA	PRESSURE HOLDING VALVE	稳压活门	AR	

9508175	FRTR488B	FLOAT VENT VALVE	浮子排气活门	AR	
3540000-1	FRTR3784	TEMPERATURE SENSOR	温度传感器	AR	
3540000-1	FRTR3781	TEMPERATURE SENSOR	温度传感器	AR	
793A0000-07	U2066	ACTUATOR-FLAP	襟翼作动器	AR	
794A0000-06	U2070	ACTUATOR-FLAP	襟翼作动器	AR	
ZCV63-6	80629377	CHECK VALVE	单向活门	AR	
HTE200002-1	M183GB198	FUEL TRANSFER VALVE ACTUA	作动器	AR	SV
HTE200002-1	M365GB998	FUEL TRANSFER VALVE ACTUA	作动器	AR	SV
790A0000-02	U2912	BEVEL GEARBOX 19 DEG.	齿轮箱	AR	
790A0000-02	U2911	BEVEL GEARBOX 19 DEG.	齿轮箱	AR	
792A0000-07	U2073	ACTUATOR-FLAP	襟翼作动器	AR	
792A0000-07	U2072	ACTUATOR-FLAP	襟翼作动器	AR	
793A0000-07	U2067	ACTUATOR-FLAP	襟翼作动器	AR	
794A0000-06	U2069	ACTUATOR-FLAP	襟翼作动器	AR	
31075-840	3660	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
31075-840	23706	ELEVATOR SERVOCONTROL	升降舵伺服控制器	AR	SV
642-3802-517	2341001	THRUST REVERSER	反推	AR	
642-3801-515	2340001	THRUST REVERSER	反推	AR	
642-3802-517	2155001	THRUST REVERSER	反推	AR	
642-3801-515	2154001	THRUST REVERSER	反推	AR	
3530000-1	FRTR3017	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR3018	SENSOR-FUEL LEVEL	油位传感器	AR	
3540000-1	FRTR3785	SENSOR-FUEL LEVEL	油位传感器	AR	
3540000-1	FRTR068-A	SENSOR-FUEL LEVEL	油位传感器	AR	
P99C38-601	20307	FUEL PUMP TANK	燃油泵	AR	
P99C38-605	20311	FUEL PUMP TANK	燃油泵	AR	
P99C38-605	20309	FUEL PUMP TANK	燃油泵	AR	
P99C38-605	20152	FUEL PUMP TANK	燃油泵	AR	
P99C38-605	20308	FUEL PUMP TANK	燃油泵	AR	
568-1-27202-05R	2780	FUEL PUMP TANK	燃油泵	AR	SV
L83A13-614	24500	VALVE-DRAIN, WATER	排水活门	AR	
L83A13-614	24280	VALVE-DRAIN, WATER	排水活门	AR	
L83A13-614	24279	VALVE-DRAIN, WATER	排水活门	AR	
L83A13-614	24501	VALVE-DRAIN, WATER	排水活门	AR	
9811839	FRTR531B	CHECK VALVE	单向活门	AR	
9811839	FRTR529B	CHECK VALVE	单向活门	AR	
796-809-6A	2732	FUEL CADENSICON	密度计	AR	SV
796-809-6A	2729	FUEL CADENSICON	密度计	AR	SV
3508802-37	FRTR215B	INDICATOR, MAGNETIC LEVEL	油尺	AR	
3508802-37	FRTR216B	INDICATOR, MAGNETIC LEVEL	油尺	AR	
HTE190001-2	M446GB998	TWIN MOTOR ACTUATOR	作动器	AR	SV
L95F50-603	22720	FUEL TK OVERPRESSURE PROT	油箱压力保护器	AR	SV
3901395	FRTR240B	PUMP JET	引射泵	AR	
321-400-707-0	4450	COWL OPEN ACT	反推打开作动器	AR	SV
321-400-707-0	4179	COWL OPEN ACT	反推打开作动器	AR	SV
321-400-707-0	4445	COWL OPEN ACT	反推打开作动器	AR	SV
321-400-707-0	4175	COWL OPEN ACT	反推打开作动器	AR	SV
D2565800100000	N/A	FLIGHT KIT	飞行包	AR	SV
3530000-1	FRTR2806	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR2806	SENSOR-FUEL LEVEL	油位传感器	AR	
3530000-1	FRTR2806	SENSOR-FUEL LEVEL	油位传感器	AR	

9508175	FRTR487BA	FLOAT VENT VALVE	通气浮子活门	AR	
9508175	FRTR489BA	FLOAT VENT VALVE	通气浮子活门	AR	
9508175	FRTR490BA	FLOAT VENT VALVE	通气浮子活门	AR	
796-809-6A	2561	FUEL CADENSICON	电容式密度计	AR	SV
HTE190001-2	M445GB998	TWIN MOTOR ACTUATOR	作动器	AR	SV
HTE900118-001	FR277BA	LOW PRESSURE FUEL VALVE	低压燃油活门	AR	SV
L95F50-603	22721	FUEL TK OVERPRESSURE PRO	油箱压力保护器	AR	SV
4550-01	3759	FIRE/OVHT DETECTOR	火警过热探测器	AR	
4550-01	3976	FIRE/OVHT DETECTOR	火警过热探测器	AR	
L95F50-603	22789	FUEL TK OVERPRESSURE PRO	油箱压力保护器	AR	SV
HTE900118-001	FR276BA	LOW PRESSURE FUEL VALVE	燃油低压活门	AR	SV
C93R38-606	20491	FUEL PUMP CANISTER	燃油泵碳罐	AR	
C93R38-606	20492	FUEL PUMP CANISTER	燃油泵碳罐	AR	
HTE900096	FR197BA	TRANSFER VALVE DRIVE SHA	转换驱动轴	AR	
HTE900095	FR189BA	TRANSFER VALVE DRIVE SHA	转换驱动轴	AR	
HTE900096	FR196BA	TRANSFER VALVE DRIVE SHA	转换驱动轴	AR	
HTE900095	FR188BA	TRANSFER VALVE DRIVE SHA	转换驱动轴	AR	
94830-04	1380	BRACKET FWD LEFT	左前支架	AR	
94830-05	1367	BRACKET FWD RIGHT	右前支架	AR	
94830-06	2581	BRACKET REAR	后支架	AR	
ZCV63-4	80423433	CHECK VALVE	单向活门	AR	
8ES005304-00	1333	POWER SUPPLY UNIT	电源供给组件	AR	SV
472412-1	9965EL	APU FIRE EXTINGUISHER BO	APU灭火瓶	AR	
A805300-12	3-1401046	CARTRIDGE	爆炸帽	AR	
ZCV63-8	8081420	CHECK VALVE	单向活门	AR	
A25312-1	2380	THROTTLE VALVE	活门	AR	
NP165331-2	15012H013	WINDSHIELD PANEL	风挡	AR	
NP165331-1	18354H857	WINDSHIELD PANEL	风挡	AR	
SPSA320-4-2-1	1214	SLIDING SIDE WINDOW	滑动窗	AR	
SPSA320-3-3-2	8907	SLIDING SIDE WINDOW	滑动窗	AR	
9811839	FRTR528BA	CHECK VALVE	单向活门	AR	
9811839	FRTR532BA	CHECK VALVE	单向活门	AR	
9811839	FRTR530BA	CHECK VALVE	单向活门	AR	
9811839	FRTR527BA	CHECK VALVE	单向活门	AR	
C49AA0221	943	CANISTER, PUMP FUEL	燃油泵保护罩	AR	
C93R38-606	20494	FUEL PUMP CANISTER	燃油泵碳罐	AR	
9815715	FRTR061BA	RELIEF VALVE	泄压活门	AR	
ZCV64-20	8031088	CHECK VALVE	单向活门	AR	
ZCV63-4	80619510	CHECK VALVE	单向活门	AR	
ZCV63-4	80619484	CHECK VALVE	单向活门	AR	
ZCV63-4	80828109	CHECK VALVE	单向活门	AR	
ZCV63-4	80828106	CHECK VALVE	单向活门	AR	
B42CA2002	4398	VALVE NON RETURN	活门	AR	
C93R38-601	20138	FUEL PUMP CANISTER	燃油泵碳罐	AR	
C93R38-601	20140	FUEL PUMP CANISTER	燃油泵碳罐	AR	
C93R38-606	20493	FUEL PUMP CANISTER	燃油泵碳罐	AR	
HTE900133	FRTR057AV	FUEL DEFUEL/TRANSFER VAL	燃油释放供给活门	AR	
20700-300	999	VALVE, FUEL	燃油活门	AR	
SPSA320-6-2-2	7696	FIXED SIDE WINDOW	固定窗	AR	
SPSA320-5-1-1C	2149	FIXED SIDE WINDOW	固定窗	AR	
342300M01	4679	TRANSDUCER UNIT	传感器组件	AR	

342300M01	5050	TRANSDUCER UNIT	传感器组件	AR	
FE171-000	FR985	CABLE TENSION REGULATOR	钢索张力调节器	AR	
B42CA2002	4405	VALVE NON RETURN	活门	AR	
B42CA2002	4411	VALVE NON RETURN	活门	AR	
9811820	FRTR293BA	CHECK VALVE	单向活门	AR	
4236534	78479	RUNWAY TURNOFF LIGHT	跑道转弯灯	AR	
4236534	75335	RUNWAY TURNOFF LIGHT	跑道转弯灯	AR	
4236564	83164	TAXI LIGHT	滑行灯	AR	
ZCV63-6	80629176	CHECK VALVE	单向活门	AR	
ZCV63-4	80619424	CHECK VALVE	单向活门	AR	
C20105000-2	57209	TACHOMETER	轮速传感器	AR	SV
C20105000-2	65652	TACHOMETER	轮速传感器	AR	SV
C20105000	09070	TACHOMETER	轮速传感器	AR	
C20105000	08571	TACHOMETER	轮速传感器	AR	
9811820	FR296BA	CHECK VALVE	单向阀	AR	
ZCV63-6	80416335	CHECK VALVE	单向活门	AR	
QA05877	RG62152	VALVE RESTRICT. BLEED	引气管路限流器	AR	
EVT174-227	11341	BRAKE COLLING FAN	刹车冷却风扇	AR	
EVT174-227	11338	BRAKE COLLING FAN	刹车冷却风扇	AR	
EVT174-227	11340	BRAKE COLLING FAN	刹车冷却风扇	AR	
EVT174-227	11343	BRAKE COLLING FAN	刹车冷却风扇	AR	
47145-247	3831	THSA	可配平水平安定面	AR	
C24839010-2	H1680	MANIFOLD (ALTN BRK SV) B	总管	AR	
C24840010-2	H1680	MANIFOLD (ALTN BRK SV) B	总管	AR	
C24736001-1	H0918	ELECTRO-HYD. STEERING MODU	电子液压转弯模块	AR	SV
D576-40000-009-00Z	AP-0981	AILERON	副翼	AR	
D576-40000-008-00Z	AP-0952	AILERON	副翼	AR	
TM113-1	2371	TRANSDUC. /SWITCH-TEMP	电门	AR	
5913667-3	3431	GEN AUXILIARY POWER UNIT	APU启发动机	SV	
1338-1430	599	NLG. ROTATING MECHANISM	前起旋转机构	AR	
1338-1430	603	NLG. ROTATING MECHANISM	前起旋转机构	AR	
C24737002-4	Y01652	MANIFOLD (NORM BRK SV) (H	总管	AR	
C24730001-6	H1914	NLG. UPLOCK ASSY	前起上位锁组件	AR	
22715-000-02	H0719	NLG. DOOR ACTUATING CYLINI	前起舱门作动筒	AR	
S4-3300520-01	1964	ACTUATOR	作动筒	AR	SV
S4-3300520-01	1854	ACTUATOR	作动筒	AR	SV
S4-3300520-01	1888	ACTUATOR	作动筒	AR	SV
D23278100	L0921	TOWING ADAPTER ASSY	牵引组件	AR	
D57570650010000000	TS-2310	INNER FLAP	内襟翼	AR	
D57570650011000000	TS-2310	INNER FLAP	内襟翼	AR	
D5528000301300	CG-1984	ELEVATOR	右升降舵	AR	
D57571008001000000	1832	OUTER FLAP	外襟翼	AR	
D57571008000000000	1832	OUTER FLAP	外襟翼	AR	
D5547102100000A	TS2312	RUDDER	方向舵	AR	
HTE900135	FRTR060A	FUEL TRANSFER VALVE	活门	AR	
C24730100-1	H1357	NLG. DOOR UPLOCK ASSY	前起上位锁组件	AR	
C24737002-4	Y02407	MANIFOLD	总管	AR	
D23596000-2	B259	STRUT ASSY	支架组件	AR	
114193008	B1683	ACTUATOR	作动筒-右主起	AR	
201166013	B792	SIDESTAY ASSY, MLG	主起侧支柱-右主起	AR	
201590002	B485	ACTUATOR	作动筒-左主起	AR	

201166014	B791	SIDESTAY ASSY, MLG	主起侧支柱-左主起	AR	
D23613000	L2271	CYLINDER-ACTUATING, NLG	前起收放作动筒-前	AR	